SONY

TRINITRON® COLOR VIDEO MONITOR

BVM-A20F1U BVM-A20F1M BVM-A20F1A

電気製品は、安全のための注意事項を守らないと、 火災や人身事故になることがあります。

このオペレーションマニュアルには、事故を防ぐための重要な注意事項と製品 の取り扱いかたを示してあります。**このオペレーションマニュアルをよくお読** みのうえ、製品を安全にお使いください。お読みになったあとは、いつでも見 られるように必ず保管してください。







OPERATION MANUAL [Japanese/English] 1st Edition (Revised 3) Serial No. 2000001 and Higher

安全のために

ソニーのモニターは正しく使用すれば事故が起きないように、安全には十分配慮し て設計されています。しかし、内部に非常に高い電圧を使用しているので、まち がった使いかたをすると、火災や感電などにより死亡や大けがなど人身事故につな がることがあり、危険です。

事故を防ぐために次のことを必ずお守りください。

安全のための注意事項を守る

5~7ページの注意事項をよくお読みください。製品全般の安全上の注意事項が記 されています。8ページの「使用上のご注意」もあわせてお読みください。

定期点検をする

5年に1度は、内部の点検を、お買い上げ店またはソニーのサービス窓口にご依頼 ください (有料)。

故障したら使わない

すぐに、お買い上げ店またはソニーのサービス窓口にご連絡ください。

万一、異常が起きたら

- 異常な音、におい、煙が出たら
- 内部に水、異物が入ったら
- モニターを落としたり、キャビネットを破損したときは



- 電源を切る。
- 2 電源コードや接続ケーブルを抜く。
- る お買い上げ店またはソニーのサービス窓口に連絡する。

警告表示の意味

このオペレーションマニュアルお よび製品では、次のような表示を しています。表示の内容をよく理 解してから本文をお読みください。

この表示の注意事項を守らないと、 火災や感電などにより死亡や大け がなど人身事故につながることが あります。

! 注意

この表示の注意事項を守らないと、 感電やその他の事故によりけがを したり周辺の物品に損害を与えた りすることがあります。

注意を促す記号







行為を禁止する記号









行為を指示する記号







指示

プラグをコン アース線を セントから抜く 接続せよ

目次

		<u> </u>	5
		注意	6
		使用上のご注意(モニターの性能を保持するために)	8
第1章	概要		
		特長	9
		特長	9
		別売り品	
		入出力端子パネルの構成	11
		入力アダプターの装着	
		各部の名称と働き	
		モニター前面	13
		モニター背面	
		モニターコントロールユニット BKM-15R(別売り)	
		"メモリースティック"の取り扱い	
		"メモリースティック"について	
		4:3 マスクの取り付け	
		接続	
		BKM-15R との接続	
		BRM-13R との接続	
		モニター / グループの選択	
		基本設定の選択	27
** • **			
第2章	メニュー		
		メニューの操作方法	28
		メニュー操作ボタン	28
		メニューを表示させるには	29
		メニューの操作手順	
		メニューの階層構造	
		A 画像の調整 - PICTURE ADJ メニュー	34
		概要	
		PICTURE ADJ メニューの階層構造	
		構成メニュー	
		B 色温度の調整 − COLOR TEMP ADJ メニュー	
		概要	
		例安 COLOR TEMP ADJ メニューの階層構造	
		COLOR TEMP ADJ メーユーの障層構造 構成メニュー	
		 押収 / ー ユ ー	37

© 人力チャンネルの設定 - INPUT CONFIGURATION メニュー	40
概要	40
INPUT CONFIGURATION メニューの階層構造	41
構成メニュー	41
□ システムの設定 - SYSTEM CONFIGURATION メニュー	45
概要	45
SYSTEM CONFIGURATION メニューの階層構造	46
構成メニュー	46
E 設置調整- INSTALLATION SETTINGS メニュー	49
概要	49
INSTALLATION SETTINGS メニューの階層構造	50
構成メニュー	
F システムデータの操作− FILE MANAGEMENT メニュー	54
概要	54
FILE MANAGEMENT メニューの階層構造	54
構成メニュー	54
	56
概要	56
STATUS メニューの階層構造	56
構成メニュー	57
⊞ コントローラーの設定 − CONTROLLER メニュー	58
概要	58
CONTROLLER メニューの階層構造	58
構成メニュー	
□ キーロック設定 - KEY PROTECT メニュー	59
概要	59
構成メニュー	59
仕様	60
対応信号システム	62
対応信号フォーマット	
外形寸法図	
色温度調整用プローブを使用するときの接続ケーブルについて	
メニュー項目索引	68

付録







下記の注意を守らないと、 火災や感電により死亡や大けがに つながることがあります。



分解禁止

内部を開けない、改造しない

内部には電圧の高い部分があり、キャビ ネットや裏ぶたを開けたり、改造したり すると、火災や感電の原因となることが あります。内部の調整や設定、点検、修 理は、お買い上げ店またはソニーのサー ビス窓口にご依頼ください。



内部に水や異物を入れない

水や異物が入ると火災や感電の原因とな ります。

万一、水や異物が入ったときは、すぐに 電源を切り、電源コードや接続ケーブル を抜いて、お買い上げ店またはソニーの サービス窓口にご相談ください。



電源コードを傷つけない

電源コードを傷つけると、火災や感電の 原因となることがあります。

- 設置時に、製品と壁やラック、棚など の間に、はさみ込まない。
- 電源コードを加工したり、傷つけたり しない。
- 重いものをのせたり、引っ張ったりし ない。
- 熱器具に近づけたり、加熱したりしな
- 電源コードを抜くときは、必ずプラグ を持って抜く。

万一、電源コードが傷んだら、お買い上 げ店またはソニーのサービス窓口に交換 をご依頼ください。



指示

規定の電源電圧で使う

取扱説明書に記されている電源電圧でお 使いください。

規定外の電源電圧での使用は、火災や感 電の原因となります。



油煙、湯気、湿気、ほこりの 多い場所では設置・使用しな LJ

上記のような場所に設置すると、火災や 感電の原因となります。

取扱説明書に記されている仕様条件以外 の環境での使用は、火災や感電の原因と なります。



高圧に注意する

サービス担当者以外の方は裏ぶたをあけ ないでください。内部には高電圧部分が 数多くあり、万一さわると危険です。



アース線を


接続せよ

安全アースを接続する

安全アースを接続しないと、感電の原因 となることがあります。

次の方法でアースを接続してください。

- 電源コンセントが3極の場合 付属の電源コードを使用することで安 全アースが接続されます。
- 電源コンセントが2極の場合 付属の3極→2極変換プラグを使用 し、変換プラグから出ている緑色の アース線を建物に備えられているアー ス端子に接続してください。

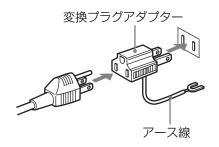

安全アースを取り付けることができない 場合は、ソニーのサービス担当者または 営業担当者にご相談ください。

注意

下記の注意を守らないと、 **けが**をしたり周辺の物品に**損害**を 与えることがあります。



指定された電源コード、接続 ケーブルを使う

付属の、あるいは取扱説明書に記されている電源コード、接続ケーブルを使わないと、感電や故障の原因となることがあります。

他の電源コードや接続ケーブルを使用する場合は、お買い上げ店またはソニーの サービス窓口にご相談ください。



通気孔をふさがない

通気孔をふさぐと内部に熱がこもり、火 災や故障の原因となることがあります。 風通しをよくするために次の項目をお守 りください。

- 壁から 10cm 以上離して設置する。
- 密閉された狭い場所に押し込めない。
- 毛足の長い敷物(じゅうたんや布団など)の上に設置しない。
- 布などで包まない。
- あお向けや横倒し、逆さまにしない。



不安定な場所に設置しない

ぐらついた台の上や傾いたところなどに 設置すると、モニターが落ちたり、倒れ たりして、けがの原因となることがあり ます。また、設置・取り付け場所の強度 を充分にお確かめください。



直射日光の当たる場所や熱器 具の近くに設置・保管しない

内部の温度が上がり、火災や故障の原因 となることがあります。

真夏の、窓を閉め切った自動車内では 50℃を越えることがありますので、ご 注意ください。



背面の放熱板には触れない

モニター使用中は、セット背面の放熱板 が高温になっています。触れると火傷の 恐れがありますのでご注意ください。



重いモニターは、2人以上で 開梱・運搬する

モニターは見た目より重量があります。 開梱や運搬は、けがや事故を防ぐため、 必ず2人以上で行ってください。1人で 行うと腰を痛めることがあります。



ぬれた手で電源プラグをさわらない

ぬれた手で電源プラグを抜き差しする と、感電の原因となることがあります。



注意

転倒、移動防止の処置をする

モニターをラックに取り付け・取りはず しするときは、転倒・移動防止の処置を しないと、倒れたり、動いたりして、け がの原因となることがあります。

安定した姿勢で注意深く作業してください。

また、ラックの設置状況、強度を充分に お確かめください。



製品の上に乗らない、重い物 を乗せない

倒れたり、落ちたり、壊れたりして、け がの原因となることがあります。



セントから抜く

お手入れの際は、電源を切っ て電源プラグを抜く

電源を接続したままお手入れをすると、 感電の原因となることがあります。



接続の際は電源を切る

電源コードや接続ケーブルを接続すると きは、電源を切ってください。さもない と感電や故障の原因となることがありま す。



移動の際は電源コードや接続 コードを抜く

コード類を接続したまま本機を移動させると、コードに傷がついて火災や感電の原因となることがあります。



定期的に内部の掃除を依頼す る

長い間掃除をしないと内部にホコリがたまり、火災や感電の原因となることがあります。1年に1度は、内部の掃除をお買い上げ店またはソニーのサービス窓口にご依頼ください(有料)。

特に、湿気の多くなる梅雨の前に掃除を すると、より効果的です。



入力アダプター及びコント ロールユニット取り付けの際 には、電源を切って電源プラ グを抜く

モニターを電源に接続したまま各種入力 アダプターおよびコントロールユニット の取り付けを行うと、感電の原因になる ことがあります。入力アダプター及びコ ントロールユニットの取り付けの際には モニターの電源を切り、電源プラグを抜 いてください。



基板の取り付けは注意深く

各種入力アダプターを取り付ける際には 部品や基板の角などで手や指にけがをす ることがあります。保護手袋などをして 注意深く作業してください。



指示

コード類は正しく配置する

電源コードや接続ケーブルは、足に引っかけると本機の落下や転倒などによりけがの原因となることがあります。 十分注意して接続・配置してください。



電源コードのプラグ及びコネ クターは突き当たるまで差し 込む

真っ直ぐに突き当たるまでさしこまない と、火災や感電の原因となります。



密閉環境に設置する際は注意 する

本機をラックやモニター棚に収納した際、上下および周辺の機器によりモニター周辺の通気孔が妨げられ動作温度が上がり、故障や発熱の原因となる可能性があります。本機の動作条件温度0℃から35℃を保つように上下および周辺機器との隙間を十分にとり、通気孔の確保や通気ファンの設置などの配慮をしてください。

使用上のご注意(モニターの性能 を保持するために)

磁気に対するご注意

- 磁石、スピーカー、電気時計、磁石を使用した機器やお もちゃ、磁気応用健康器具など、磁気を発生するものを 近づけないでください。磁気の影響を受けて、画面が揺 れたり、色が乱れたりすることがあります。
- モニターの設置の向きによっては、地磁気の影響を受けて、画面が傾いたり、色が乱れることがありますが、故障ではありません。このときは、モニターコントロールユニットの DEGAUSS (消磁) ボタンを押して消磁してください。

ラックに収納する場合のご注意

本機をラックやモニター棚に収納した際、上下および周辺の機器によりモニター周辺の通気孔が妨げられ動作温度が上がり、故障や発熱の原因となる可能性があります。本機の動作条件温度0℃から35℃を保つように上下に1Uの隙間をあけ、また周辺機器との隙間を十分にとり、通気孔の確保や通気ファンの設置などの配慮をしてください。

ブラウン管について

- ブラウン管の表面はほこりが付きやすいので、ときどき 柔らかい布でふいてください。また、表面は傷つきやす いので、硬いものでこすったり、たたいたり、ものをぶ つけたりしないでください。
- ブラウン管の表面に手を触れると弱い電気を感じることがありますが、これはブラウン管表面に静電気を帯びているためで、人体に影響はありません。

クリーニングについて

- お手入れの際は、必ず電源を切って電源プラグを抜いてください。
- キャビネットの汚れがひどいときは、水で5~6倍に薄めた中性洗剤液に柔らかい布をひたし、かたくしぼってから汚れをふきとります。このあと乾いた布でからぶきしてください。
- シンナーやベンジンなどの薬品類は、表面の仕上げをいためたり、表示が消えてしまうことがありますので、使用しないでください。

4:3 信号用のモニターとしてお使いになるときのご注意

本機には出荷時に16:9マスクが取り付けてあるため、本機の16:9ボタンを操作して4:3アスペクト表示にすると、画像の上部と下部がマスクに隠れて見えません。4:3アスペクト比で表示するときは、あらかじめ付属の4:3マスクに交換してからお使いください。

◆ 詳しくは、「4:3 マスクの取り付け」(23 ページ)をご覧ください。

特長

トリニトロン^{®1)} カラービデオモニター BVM-A20F1U/ A20F1M/A20F1A は 20 型 ²⁾ の高性能カラービデオモニ ターです。正確な画像再生を要求される放送局やビデオプ ロダクションでの使用に適しています。

特長

マルチフォーマット

デジタル放送時代の主要フォーマット(480I/480P/720P/ 1080I) および従来の NTSC、PAL など、水平周波数 15.625kHz~45kHzまでの多様な信号に幅広く対応してい ます3)。

高解像度ブラウン管

HR トリニトロンブラウン管の採用により、高密度で鮮明な カラー画像が得られます。

AG ピッチ	中心解像度
0.3mm	900 TV 本 (4:3)
	700 TV 本(16:9)

操作部を分離したオペレーションスタイル

操作部を分離することにより設置スペースを削減すること ができます。操作は別売りのモニターコントロールユニッ トBKM-15Rにより行います。別売りのモニターコントロー ルユニットアタッチメントキット BKM-35H により、モニ ターと BKM-15R を連結することもできます。

ネットワーク上でのリモートコントロール機能(Ethernet コントロール)

Ethernet (10BASE-T/100BASE-TX) により、モニターと コントロールユニットを合わせて32台(コントロールユ ニットは最大4台)接続することができます。モニターID No. やグループ ID No. を指定して、特定のモニターまたは 特定のグループのモニターだけを操作することができます。 また、接続しているすべてのモニターのセットアップ状態 を統一したり、同時に同じ動作を実行させることも可能で

"メモリースティック"による調整・セットアップ

BKM-15R に別売りの"メモリースティック"を入れて、本 機の調整・セットアップ状態のデータを保存することがで きます。複数のモニターを操作している場合、"メモリース ティック"を使って、モニター間でデータのやりとりが可 能です。同じ調整・セットアップ状態を容易に再現でき、 モニター間で調整・セットアップ状態をそろえることがで きます。

オートクロマ・フェーズ・マトリクス、オートホワイトバ ランス機能を標準装備

デコーダーのクロマやフェーズ、マトリクスを自動調整す るオートクロマ・フェーズ・マトリクス機能と別売りの オートセットアッププローブ BKM-14L などを使用し、色温 度を自動調整するオートホワイトバランス機能を標準装備 しています。

セーフエリアディスプレイを標準装備

重要映像エリアを表示するセーフエリアディスプレイを標 準装備しています。

拡張可能な入力機能

本機背面の入力オプションスロットに別売りの入力アダプ ターを差し込むだけで、入力端子パネルを自由に構成でき ます。入力アダプターは3枚まで装着できます。

¹⁾ トリニトロン[®] はソニー株式会社の登録商標です。

²⁾ それぞれ搭載されている CRT のサイズです。有効画面サイズは「仕様」(60ページ)を参照してください。

³⁾対応するフォーマットは「対応信号システム」 (62ページ)、「対応信号フォーマット」 (63ページ) を参照してください。

安定した色温度

内蔵のビームカレントフィードバック回路により、長期間 にわたって安定した色温度が得られます。

ノイズ成分の監視に便利なブルーオンリーモード

3系統のCRTのカソードをすべて青信号で動作させ、白黒画像として表示させることができます。飽和度(クロマ)や色相(フェーズ)の調整、VTRノイズの監視に便利なモードです。

マトリクス切り換え可能

入力信号に応じて、3種類のマトリクス(ITU601、ITU709、SMPTE 240M)を選ぶことができます。また、オートクロマ・フェーズ・マトリクス調整を行うことで、USER1 ~ 5 に独自のマトリクスを記憶させることが可能です。

デジタルユニフォーミティ回路

デジタルユニフォーミティ回路により、画面の周辺まで輝度ムラの少ない均一な白を再現します。設置に合わせて調整が可能です。別売りの BKM-14L を使用して、自動調整することもできます。

その他の特長

- リモート端子として、接点制御のパラレルリモートを装備。
- テスト信号発生器を標準装備。
 テスト信号として、クロスハッチ、100% 白信号、20% グレー信号、グレースケール、プルージ (PLUGE = Picture Line Up Generating Equipment) が使えます。
- 水平、垂直同期信号を監視できる H ディレイ、V ディレイ 機能。
- オートデガウス、マニュアルデガウス機能。
- CRT 保護回路を搭載。
- 別売りのラックマウントキットBKM-30E20の使用により、 EIA 規格の 19 インチラックにマウント可能。
- 用途に応じて16:9映像用と4:3映像用のマスクを交換可能。
- リモートメンテナンス機能。

SNMP プロトコルにより、Sony e-Support System に接続し、デバイス情報(モデル名、シリアルナンバー、IP アドレス、ソフトウェアバージョン)、エラー情報を監視することができます。

別売り品

操作部関連

モニターコントロールユニット BKM-15R

BVM-A シリーズのビデオモニターを操作するためのコントローラーです。1台で複数台のモニターを同時にコントロールすることができます。

オートセットアッププローブ BKM-14L

このプローブにより、色温度の自動調整、ホワイトユニフォーミティの自動調整ができます。

設置用

ラックマウントキット BKM-30E20

BVM-A20F1U/A20F1M/A20F1A を EIA 規格の 19 インチラックに収納するための組み立てキットです。

モニターコントロールユニットアタッチメントキット BKM-35H

BVM-A20F1U/A20F1M/A20F1A とモニターコントロール ユニット BKM-15R を一体化するための組み立てキットで す。

モニターインターフェースケーブル SMF-700

BVM-A20F1U/A20F1M/A20F1A とモニターコントロール ユニット BKM-15R とを接続するインターフェースケーブ ルです。

入力アダプター

本機背面の入力オプションスロットに装着して、入出力端子パネルを構成します。3枚まで装着できます。 各入力アダプターで入出力する信号の種類は、入出力端子パネルの構成に応じて INPUT CONFIGURATION メニューで選択します。

ご注意

入力アダプターを装着したときは、INPUT CONFIGURATION メニューで、入力チャンネルの設定を行ってください。設定を行わないと装着した入力アダプターが正しく動作しないことがあります。

◆ INPUT CONFIGURATION メニューについては、「ⓒ 入力チャンネルの設定 - INPUT CONFIGURATION メニュー」 (40ページ) をご覧ください。

SDI/アナログマルチ入力アダプター BKM-61D

シリアルデジタル信号(525/625 コンポーネントおよび NTSC/PAL コンポジット)およびアナログコンポジット信号 (NTSC/PAL/PAL-M/SECAM) 用のデコーダーを搭載しています。入出力端子としては、シリアルデジタル信号用2チャンネル、アナログ信号用3チャンネルを装備しています。

ご注意

BKM-61D の MONITOR OUT 出力は、本線系出力としての 規格を満足していません。

HD SDI/SDI 入力アダプター BKM-62HS

HD シリアルデジタル信号およびシリアルデジタルコンポーネント (525/625) 信号用のデコーダーを搭載しています。 HD シリアルデジタル信号は Dual-Link 入力にも対応しています。入出力端子としては、シリアルデジタル信号用 2 チャンネルを装備しています。

ご注意

BKM-62HSの MONITOR OUT 出力は、本線系出力としての規格を満足していません。

アナログコンポーネント入力アダプター BKM-68X

アナログコンポーネント信号またはアナログ RGB 信号を入力することができます。入出力端子としては 1 チャンネルを装備しています。

入出力端子パネルの構成

本機は別売りの入力アダプターを組み合わせることにより、 入出力端子パネルを自由に構成できます。

各入力アダプターの端子に入力可能な信号は右表のとおりです。各端子に割り付ける入力信号の種類やフォーマットは、INPUT CONFIGURATIONメニューで指定します。

ご注意

BKM-61D の MONITOR OUT 出力は、INPUT CONFIGURATION メニューで設定した入力番号の信号 フォーマット(AUTO の場合は、最後に受像していた信号 フォーマット)以外では正しく出力されません。

◆ INPUT CONFIGURATION メニューについては、「C 入力チャンネルの設定 - INPUT CONFIGURATION メニュー」(40ページ)をご覧ください。

入力アダプター		SDI/アナログ マルチ入力ア ダプター	HD SDI / SDI 入力ア ダプター	アナログコン ポーネント入 カアダプター
入力信号		BKM-61D	BKM-62HS	BKM-68X
シ	コンポーネント	0	0	
リア	525/625	O	0	
ルデ	コンポジット NTSC	0		
ジ	コンポジット			
タル	PAL	0		
入力	HD-SDI		0	
	コンポジット	0		
	NTSC	U		
	コンポジット	0		
	PAL			
	コンポジット PAL-M	0		
	コンポジット			
	SECAM	0		
	YPBPR 525/625			0
	GBR 525/625			0
	Y/C NTSC	0		
	Y/C PAL	0		
	Y/C PAL-M	0		
ア	Y/C SECAM	0		
ナ	YPBPR/GBR			0
П H	1080/48I			0
グ 入	YPBPR/GBR			0
力	1080/50I			_
	YPBPR/GBR 576/50P			0
	YPBPR/GBR			
	480/60P			0
	YPBPR/GBR			0
	1035/60I			
	YPBPR/GBR 1080/60I			0
	YPBPR/GBR			
	720/50P			0
	YPBPR/GBR			
	720/60P			0
デジタル入力端子数		2	2	-
アナ	ログ入力端子数	3	_	1

〇:入力可能


入力アダプターの装着

入力アダプターは、モニター背面の任意の入力オプション スロットに装着できます。


ご注意

入力アダプターを組み込んだり、取り出すときは、必ずモニターの主電源を切り、電源コードを抜いてください。


1 モニター背面の入力オプションスロットのカバーを外す。

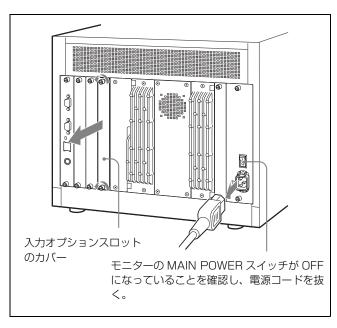

2 スロット上端の位置合わせマーク(ネジ穴の左)の下に、入力アダプターを挿入する。

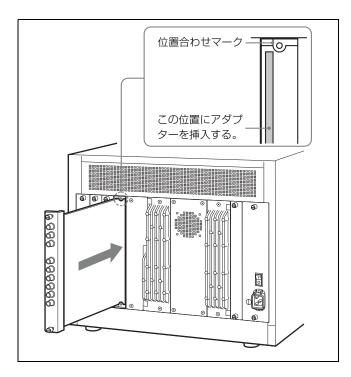


3 入力アダプターがモニター内部の端子にはまるまで押し込み、上下のネジを締めて固定する。

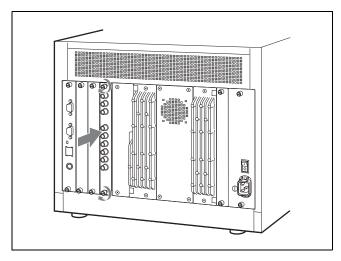

ご注意


- 入力オプションスロットのカバーの左側面にシールドフィンガーが付いています。取り扱いの際は、このシールドフィンガーを損傷しないようにしてください。
- 取りはずした入力オプションスロットのカバーを再度装着する際には、シールドフィンガーが左側になるように上下方向を確認して、装着してください。

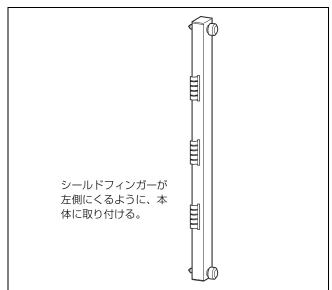

• シールドフィンガーが損傷したり、間違った側面に付けられたりした場合、このモニターは VCCI 規格に適合しない可能性があります。

各部の名称と働き

モニター前面

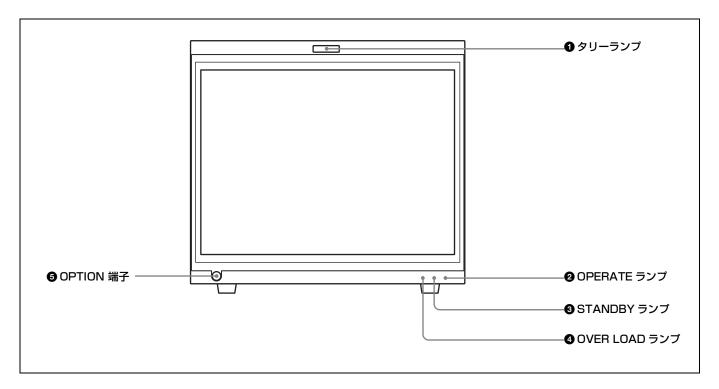

● タリーランプ

出荷時の設定では、PARALLEL REMOTE 端子(背面)の No.8 ピンと No.9 ピンをショートさせると点灯します。 PARALLEL REMOTE メニューの設定により、 PARALLEL REMOTE 端子の別のピンをタリー用に使うこともできます。

◆ PARALLEL REMOTE メニューについては、「□ システムの設定 - SYSTEM CONFIGURATION メニュー」(45ページ)をご覧ください。

2 OPERATE (操作) ランプ

本機がスタンバイ状態のとき (**③** STANDBY ランプ参照)、BKM-15R の MONITOR I/① スイッチを押して本機を動作状態にすると点灯します。

ご注意

STANDBY ランプが点滅している間は、本機を動作状態にすることはできません(内部データの初期化を実行中です)。STANDBY ランプが点灯するまでお待ちください。

3 STANDBY (スタンバイ) ランプ

本機がスタンバイ状態のとき点灯します。 本機がスタンバイ状態になるのは以下の場合です。

- MAIN POWER スイッチ (背面) を ON にしたとき (しばらく点滅してから点灯します。)
- 外部操作により、本機を動作状態からスタンバイ状態に切り換えたとき

② OVER LOAD (オーバーロード) ランプ


CRT がオーバーロード状態になると、このランプが点灯して警告します。

OVER LOAD ランプ点灯時は、コントラストまたは明るさを下げてご使用ください。

⑤ OPTION (オプション) 端子

オートセットアッププローブ (BKM-14L など) を接続します。

モニター背面

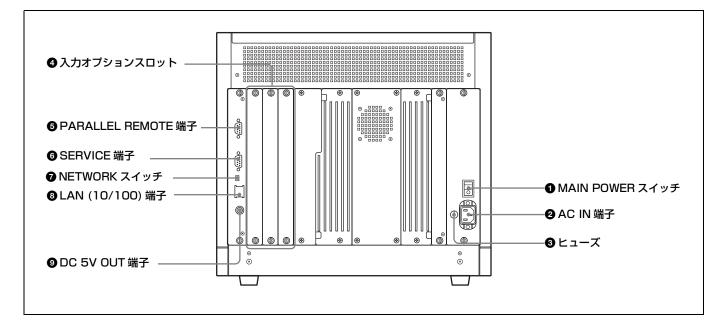


● MAIN POWER (主電源) スイッチ

ON にすると本機は動作状態になります。 SYSTEM CONFIGURATION メニューの設定により、 MAIN POWER スイッチを ON にしたときに本機をスタン バイ状態にすることもできます。

◆ SYSTEM CONFIGURATION メニューについては、「□ システ ムの設定 - SYSTEM CONFIGURATION メニュー」(45ペー ジ)をご覧ください。

② AC IN (AC 電源入力) 端子 (3 ピン)

付属の AC 電源コードで AC 電源を接続します。

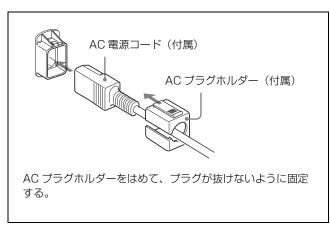

ご注意

このモニターには、必ず付属の電源コードをご使用くださ い。他の電源コードを使用する場合には、このモニターは VCCIの規格に適合しない可能性があります。

③ ヒューズ


T4AH ヒューズを使用します。

4 入力オプションスロット

別売りの入力アダプターを取り付けることができます。

⑤ PARALLEL REMOTE (パラレルリモート) 端子 (Dsub 9 ピン、凹)

パラレルコントロールスイッチを構成してモニターを外部 操作します。ピン配置と出荷時の各ピンへの機能の割り付 けは以下のとおりです。

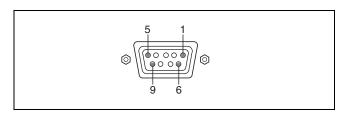

ピン番号	機能
1	入力信号チャンネル1を指定(数値ボタンの機 能)
2	入力信号チャンネル2を指定(数値ボタンの機能)
3	同期信号の選択(SYNC ボタンの機能)
4	画面を白黒表示にするか、入力信号に応じて自動 切り換えにするかを選択(MONO ボタンの機能)
5	チャンネルで設定したマーカーの ON/OFF (MARKER ボタンの機能)
6、7	未設定
8	タリーランプの ON/OFF
9	GND

各ピンへの機能の割り付けは、PARALLEL REMOTE メ ニューで変更できます。

◆ PARALLEL REMOTE メニューについては、「□ システムの設定 - SYSTEM CONFIGURATION メニュー」(45ページ)をご覧ください。

以下のようにピンの設定を変えて、各機能の ON/OFF や有効/無効を切り換えます。

ON または有効:各ピンと 9 ピンをショートさせる。

OFF または無効:各ピンをオープンにする。

⑤ SERVICE 端子 (D-sub 9 ピン、凸)

サービス用端子です。サービス担当者が使用します。

7 NETWORK スイッチ

ネットワークに接続する場合は LAN に設定します。BKM-15R の LAN (10/100) 端子と直接 1 対 1 で接続する場合は PEER TO PEER に設定します。

3 LAN (10/100) 端子 (10BASE-T/100BASE-TX)

10BASE-T/100BASE-TX の LAN ケーブル (シールドタイプ、別売り) でネットワークまたは BKM-15R の LAN (10/100) 端子に接続します。または、SMF-700、BKM-35H に付属のケーブルで BKM-15R の LAN (10/100) 端子に接続します。

ご注意

• 別売りの LAN ケーブルを接続する際は、ノイズによる誤動作を防ぐため、必ずシールドタイプのケーブルを使用してください。

モニターを BKM-15R の LAN (10/100) 端子と直接 1 対 1 で接続(NETWORK スイッチを PEER TO PEER に設定)する際は、ストレート仕様(シールドタイプ)のケーブルを使用してください。

• 安全のために、周辺機器を接続する際は、過大電圧を持つ可能性があるコネクターをこの端子に接続しないでください。


接続については本書の指示に従ってください。

• ネットワークの使用環境により、接続速度に差が生じる ことがあります。本機は 10BASE-T/100BASE-TX の通信 速度や通信品質を保証するものではありません。

9 DC 5V OUT 端子(凹)

BKM-15R 用の DC 電源です。

SMF-700 または BKM-35H に付属のケーブルで BKM-15R の DC 5V IN 端子と接続します。

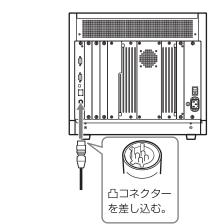


ご注意

DC 5V OUT 端子にケーブルをつなぐときは、ケーブル両端の凸凹を確認し、必ず凸側を本機に接続してください。つなぐときは、ケーブル先端の形と DC 5V OUT 端子の形をあわせるようにして、差し込んでください。

モニターコントロールユニット BKM-15R(別売り)

以下は、モニターコントロールユニット BKM-15R (別売り) に接続した操作例の解説です。

前面

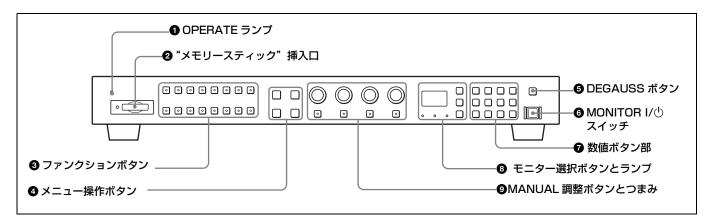

① OPERATE ランプ

本機が通電中 LED が点灯します。

2 "メモリースティック" 挿入口

スタンダード / デュオサイズ対応のスロットが搭載されて います。


別売りの"メモリースティック"を挿入します。

◆ "メモリースティック"の出し入れについては、「"メモリース ティック"の取り扱い」(21ページ)をご覧ください。

3 ファンクションボタン

モニターの動作条件を切り換えます。

押すたびに、ボタン上のLEDがついたり(ON)、消えたり(OFF)して、モニターの動作条件が切り換わります。

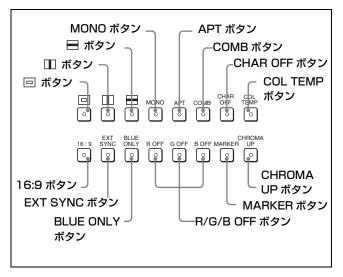

回 (アンダースキャン) ボタン: ON にすると、3% アン ダースキャンになり、ラスターの四隅までが画面に表示さ れます。 **□ (H ディレイ) ボタン**: ON にすると、画像が水平方向に移動し、水平同期信号が現われます。

- 画像の明るさ(輝度)が自動的に増加して、同期部分の チェックに便利です。
- Hディレイ時に

 ボタンを押すと、パルスクロス画像が表示されます。

■ (V ディレイ) ボタン: ON にすると、画像が垂直方向に 移動し、画面のほぼ中央に垂直同期信号が現われます。

- 画像の明るさ(輝度)が自動的に増加して、同期部分の チェックに便利です。
- ∇ ディレイ時に ボタンを押すと、パルスクロス 画像が表示されます。

MONO (白黒) ボタン: ON にすると、画面が白黒になります。OFF にすると、画面はオプションデコーダのカラー判別結果に応じて自動的にカラーまたは白黒に切り換わります。

ご注意

MONO ボタンは RGB 信号入力時には動作しません。

APT (アパーチャー) ボタン: ON にすると周波数特性を 補正できます。補正量は INPUT CONFIGURATION メ ニューで設定します。

- ◆ 信号システムごとのアパーチャー補正周波数は「信号システム 別のアパーチャー補正周波数」(20ページ)をご覧ください。
- ◆ INPUT CONFIGURATION メニューについては「ⓒ 入力チャンネルの設定 INPUT CONFIGURATION メニュー」 (40ページ) をご覧ください。

COMB (くし型フィルター) ボタン: くし型フィルターを ON/OFF します。SDI/ アナログマルチ入力アダプター BKM-61D (別売り) を装着しているときに機能します。 (NTSC、PAL、PAL-M 用)

くし型フィルタの設定は、INPUT CONFIGURATION メニューの YC SEP メニューおよび NTSC COMB FILTER メニューで行います。

◆ YC SEP メニュー、NTSC COMB FILTER メニューについては 「☑ 入力チャンネルの設定 – INPUT CONFIGURATION メニュー」 (40 ページ) をご覧ください。

CHAR OFF: ON にすると、いくつかのメニュー上での MANUAL 調整時に、モニターの画面の文字を消します。

COL TEMP: ON にすると色温度の MANUAL メニューが 表示されます。

16:9 ボタン: ON にすると画面のアスペクト比が 16:9 に、 OFF にすると 4:3 になります。

◆ 信号フォーマットにより、アスペクト比が 16:9 に固定されるも のがあります。詳しくは、「対応信号システム」 (62 ページ) を ご覧ください。

EXT SYNC (外部同期) ボタン: アナログコンポーネント 入力アダプター BKM-68X (別売り) を装着しているとき に機能します。ON にすると、BKM-68X の入力信号は、SYNC 端子に入力されている同期信号に同期します(EXT SYNC)。OFF にすると、モニターしている信号に含まれている同期信号に同期します(INT SYNC)。

ご注意

- INT SYNC を選択した場合、コンポーネント信号をモニターするときは、Y 信号に同期信号を付加します。RGB 信号をモニターするときは、G 信号に同期信号を付加します。
- アナログコンポジット信号、Y/C 信号、シリアルデジタル信号をモニターするときは、動作しません。

BLUE ONLY (ブルーオンリー) ボタン: ON にすると、赤と緑の信号がカットされ、青信号のみが白黒画像として表示されます。クロマやフェーズの調整、VTR ノイズのチェックに便利です。

R/G/B OFF ボタン: ON にすると、R (赤)、G (緑)、B (青) のビームをカットします。

MARKER (マーカー) ボタン: ON にするとマーカーが表示されます。

マーカーの表示モードの設定は、INPUT CONFIGURATION メニューの MARKER MODE メニュー で行います。


◆ MARKER MODE メニューについては「ⓒ 入力チャンネルの 設定 - INPUT CONFIGURATION メニュー」(40ページ)を ご覧ください。

ご注意

EXT SYNC が選択されているときは、マーカーが正しい位置に表示されない場合があります。

CHROMA UP ボタン: ON にするとクロマ値が 12dB アップします。

母 メニュー操作ボタン

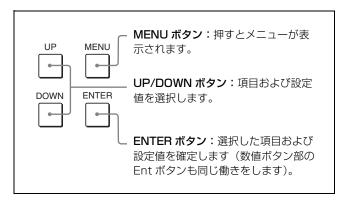

◆メニューの操作について詳しくは、「メニューの操作方法」(28ページ)をご覧ください。

⑤ DEGAUSS (消磁) ボタン

押すと CRT が消磁されます (本機の電源を入れるたびに、CRT は自動的に消磁されます)。再度消磁するときは、5分以上間隔をおいてください。


⑥ MONITOR I/() (モニター電源) スイッチ

押すたびにモニターの電源を入/スタンバイ状態にします。 モニターを複数台接続しているときは、モニター選択ボタンにより、指定したモニターの電源だけを入/スタンバイ状態にしたり、全モニターの電源を同時に入/スタンバイ状態にすることができます。

◆ モニター選択ボタンについては、「モニター / グループの選択」 (26ページ)をご覧ください。

☑ 数値ボタン部

モニターしたい入力信号のチャンネル番号を指定したり、 メニューで設定値を入力するときに使います。

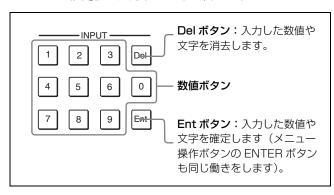


チャンネル番号入力について

チャンネル番号 $1 \sim 9$ を入力する場合は、その数字を入力します。

 $10 \sim 99$ の 2 桁のチャンネル番号を入力する場合は、まず、 0 を入力し、次に 2 桁の数字を入力します。

❸ モニター選択ボタンとランプ


複数のモニターをネットワーク接続しているときに、モニター ID No.、グループ ID No. または ALL を指定してリモート接続をするとき使います。

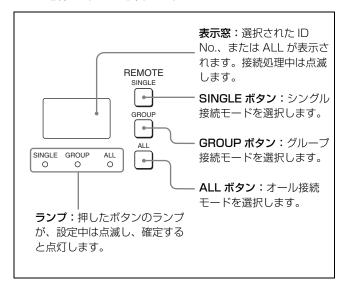

⑨ MANUAL (手動) 調整ボタンとつまみ

ボタンを押すたびに、ボタン上の LED (緑) がついたり (ON)、消えたり (OFF) します。ON にすると、画面のコントラスト、明るさ (黒レベル)、クロマ (色の飽和度)、フェーズ (色相) を、それぞれつまみで調整できます。また、PHASE つまみは、メニューで設定値を入力するときにも使います。


各調整項目は、PICTURE ADJ メニューでプリセット値を 設定しておくことができます。

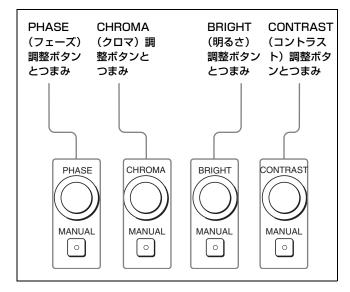

◆ PICTURE ADJ メニューについては、「▲ 画像の調整 − PICTURE ADJ メニュー」 (34 ページ) をご覧ください。


ご注意

- SECAM、PAL、PAL-M、アナログコンポーネントまたは SDI (コンポーネントシリアルデジタルまたはコンポ ジット PAL) フォーマットでは、フェーズを調整できません。
- RGB 信号ではフェーズおよびクロマを調整できません。

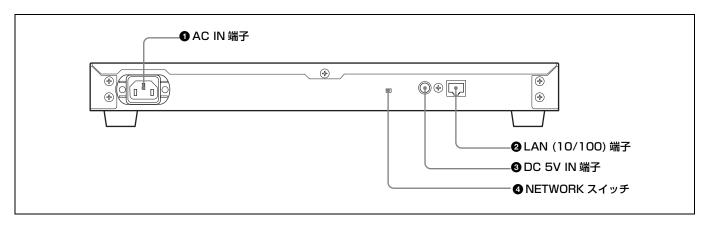

1 AC IN (AC 電源入力) 端子 (3 ピン)

付属の AC 電源コードで AC 電源を接続します。 AC 電源を使用する場合、AC IN 端子が優先しますので、 DC 5V IN 端子にケーブルを接続する必要はありません。

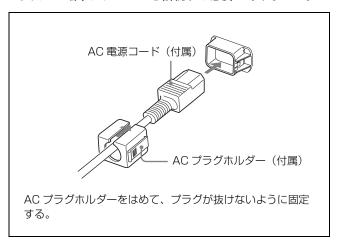

ご注意

このコントローラーには、必ず付属の電源コードをご使用ください。他の電源コードを使用する場合には、このコントローラーは VCCI の規格に適合しない可能性があります。

② LAN (10/100) 端子 (10BASE-T/100BASE-TX)

10BASE-T/100BASE-TX の LAN ケーブル (シールドタイプ、別売り) でネットワークまたはモニターの LAN (10/100) 端子に接続します。または、SMF-700、BKM-35H に付属のケーブルでモニターの LAN (10/100) 端子に接続します。

ご注意

• 別売りの LAN ケーブルを接続する際は、ノイズによる誤動作を防ぐため、必ずシールドタイプのケーブルを使用してください。

BKM-15R をモニターの LAN (10/100) 端子と直接 1 対 1 で接続(NETWORK スイッチを PEER TO PEER に設定)する際は、ストレート仕様(シールドタイプ)のケーブルを使用してください。

• 安全のために、周辺機器を接続する際は、過大電圧を持つ可能性があるコネクターをこの端子に接続しないでください。

接続については本書の指示に従ってください。


• ネットワークの使用環境により、接続速度に差が生じる ことがあります。本機は 10BASE-T/100BASE-TX の通信 速度や通信品質を保証するものではありません。

❸ DC 5V IN 端子(凸)

SMF-700 または BKM-35H に付属のケーブルでモニターの DC 5V OUT 端子と接続します。

この場合、本機の電源は DC 5V ケーブルを通じてモニターから供給されるため、AC 電源を接続する必要はありません。

また、AC 電源が接続されているときは、働きません。

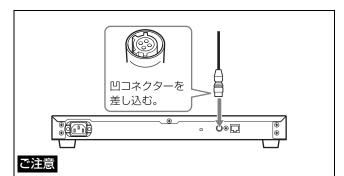

DC 5V IN 端子にケーブルをつなぐときは、ケーブル両端 の凸凹を確認し、必ず凹側を BKM-15R に接続してくださ

つなぐときは、ケーブル先端の形と DC 5V IN 端子の形をあわせるようにして、差し込んでください。

4 NETWORK スイッチ

LAN (10/100) 端子にネットワーク接続する場合は LAN に設定します。モニターの LAN (10/100) 端子と直接 1 対 1 で BKM-15R を接続する場合は PEER TO PEER に設定します。

信号システム別のアパーチャー補正周波数

信号システム	シリアルデジタル入力		アナログ入力		
	SDI	HD SDI	コンポジット (Y/C)	コンポーネント (YPBPR)	GBR
575/50I	5 MHz		5 MHz	5 MHz	5 MHz
480/60I	5 MHz		5 MHz	5 MHz	5 MHz
1080/48I		25 MHz		25 MHz	25 MHz
1080/50I		25 MHz		25 MHz	25 MHz
576/50P				25 MHz	25 MHz
480/60P				25 MHz	25 MHz
1035/60I		25 MHz		25 MHz	25 MHz
1080/60I		25 MHz		25 MHz	25 MHz
720/50P		25 MHz		25 MHz	25 MHz
720/60P		25 MHz		25 MHz	25 MHz

空欄:信号が入力できないか、または、入力できてもアパーチャー補正が動作しないことを意味します。

______ "メモリースティック"の取り扱い

本機には、スタンダード / デュオサイズ対応スロットが搭載されています。このスロット搭載の機器では、"メモリースティック"のサイズを自動的に判断する機構により、"メモリースティックデュオ"アダプターなしで、標準サイズの"メモリースティック"、小型の"メモリースティックデュオ"/ "メモリースティック PRO デュオ"のどちらでもご使用いただけます。


別売りの"メモリースティック"は、以下の方法で出し入れします。

◆ "メモリースティック"のデータ操作については、各メニューで 説明してあります。

ご注意

"メモリースティック"が動作しているとき(データのセーブ・ロード中)は、"メモリースティック"を取り出さないでください。

入れかた

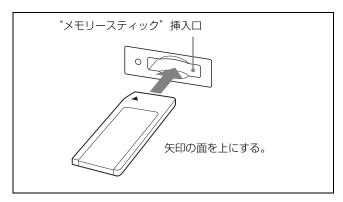

ご注意

- "メモリースティックデュオ"/ "メモリースティック PRO デュオ"を本機で使うときは、メモリースティック デュオアダプターをつけずにそのまま挿入してください。
- 逆向きに無理に入れると、"メモリースティック"挿入口が破損することがあります。
- "メモリースティック" 挿入口には "メモリースティック" 以外のものを入れないでください。故障の原因となります。

取り出しかた

アクセスランプが点滅していないことを確認する。



② "メモリースティック" を押す。 "メモリースティック" が出てきます。

"メモリースティック"について

"メモリースティック"とは?

"メモリースティック"、"メモリースティック PRO"、"メモリースティックデュオ"、 MEMORY STICK PRO および PRO 1 に は、小さくて軽く、しかもフロッピーディスクより大容量の IC 記録メディアです。"メモリースティック" 対応機器間でデータをやり取りするのに お使いいただけるだけでなく、着脱可能な外部記録メディアの1つとしてデータの保存にもお使いいただけます。 "メモリースティック" には、標準サイズのものとその小型サイズの "メモリースティックデュオ" があります。

"メモリースティック"の種類

"メモリースティック"には、用途に応じて以下の6種類があります。

"メモリースティック"

著作権保護技術(マジックゲート)が必要なデータ以外の、あらゆるデータを記録できる"メモリースティック"です。

"メモリースティック"(マジックゲート/高速データ転送対応)

著作権保護技術(マジックゲート)を搭載し、高速データ 転送に対応した"メモリースティック"です。

"メモリースティック"対応商品、「マジックゲート "メモリースティック"」対応商品、および「"メモリースティック"PRO | 対応商品でご使用いただけます。¹⁾

1) すべての対応商品における動作を保証するものではありません。(一部使用できない対応商品があります。)

本機は、この"メモリースティック"の高速データ転送に は対応していません。

マジックゲート"メモリースティック"

著作権保護技術(マジックゲート)を搭載した"メモリースティック"です。

本機ではご使用いただけません。

"メモリースティックー ROM"

あらかじめデータが記録されている、読み出し専用の"メモリースティック"です。データの記録や消去はできません。

"メモリースティック" (メモリーセレクト機能付き)

内部に複数のメモリー (128MB) を搭載している "メモリースティック" です。

本体裏面のメモリーセレクトスイッチにより、用途に応じてご使用になるメモリーを選択できます。各メモリーを同時に、また連続でご使用になることはできません。

"メモリースティック PRO"

"メモリースティック PRO"対応商品でのみお使いいただける、著作権保護技術(マジックゲート)を搭載した"メモリースティック"です。

"メモリースティックデュオ" / "メモリースティック PRO デュオ"

デュオサイズの"メモリースティック"です。

使用可能な"メモリースティック"

- 本機では、"メモリースティック"、"メモリースティック PRO"、"メモリースティックデュオ"、"メモリース ティック PRO デュオ"がご使用いただけます。ただし、 本機はマジックゲート規格に対応していないため、本機 で表示するデータはマジックゲートによる著作権の保護 の対象にはなりません。
- 本機では、4GBまでの"メモリースティック"で動作を 確認しています。ただし、すべての"メモリースティック"での動作を保証するものではありません。


データの読み込み/書き込みスピードについて

お使いの"メモリースティック"と機器の組み合わせによっては、データの読み込み/書き込み速度が異なります。


マジックゲートとは?

マジックゲートは、ソニーが開発した、著作権を保護する 技術の総称です。

"メモリースティック"について

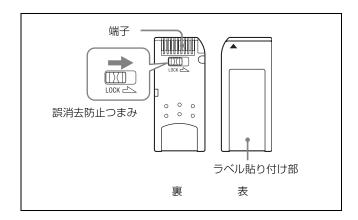

"メモリースティックデュオ" / "メモリース ティック PRO デュオ" について

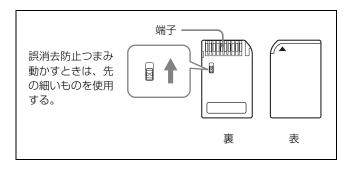

ご注意

- 誤消去防止つまみを「LOCK」にすると記録や編集、消去ができなくなります。
- 以下の場合、データが破損されることがあります。
 - 読み込み中、書き込み中に"メモリースティック"を 取り出したり、本機の電源を切った場合
 - 静電気や電気的ノイズの影響を受ける場所で使用した 場合
- 大切なデータは、バックアップを取っておくことをおす すめします。
- ラベル貼り付け部には、専用ラベル以外は貼らないでく ださい。
- ラベルを貼るときは所定のラベル貼り付け部に貼ってく ださい。はみ出さないようにご注意ください。
- 持ち運びや保管の際は、付属の収納ケースに入れてください。
- 端子部には手や金属などで触れないでください。
- 強い衝撃を与えたり、曲げたり、落としたりしないでく ださい。
- 分解したり、改造したりしないでください。
- 水にぬらさないでください。
- 以下のような場所でのご使用や保管は避けてください。
 - 高温になった車の中や炎天下など気温の高い場所
 - 直射日光のあたる場所
 - 湿気の多い場所や腐食性のある場所


- 複数の "メモリースティック" を挿入しないでください。 機器の破損の原因となる場合があります。
- ご使用の際は、正しい挿入方向をご確認のうえご使用ください。間違ったご使用は機器の破損の原因となりますのでご注意ください。
- "メモリースティックデュオ" / "メモリースティック PRO デュオ" は、小さいお子様の手の届くところに置か ないようにしてください。誤って飲み込む恐れがありま す。
- 本機で扱えるファイル数は、"メモリースティック"1 枚あたり 1000 個までです。1000 個を超えるファイルを作成した場合は「TOO MANY FILES」の警告が表示されますので、FILE MENAGEMENT メニュー、DELETE メニューで不要なファイルを削除してください。
 - ◆ FILE MANAGEMENT メニュー、DELETE メニューについては「F システムデータの操作 FILE MANAGEMENT メニュー」 (54ページ) をご覧ください。
- 本機で扱えるファイル名称の文字数は20文字までです。 名称が20文字を超えるファイルは本機では表示されませんのでご注意ください。

4:3マスクの取り付け


画面のアスペクト比を 16:9 から 4:3 に切り換えたときは、付属の 4:3 マスクに交換してください。

4:3マスクの取り付けかた

1 16:9マスクの上側をはずしてから、下側を引き抜く。

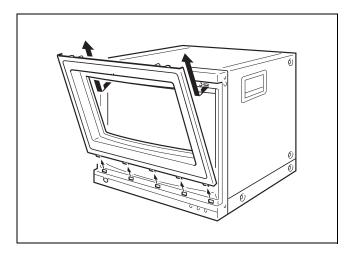

2 4:3マスク(付属)の下側をはめ込んでから、上側を押し込む。

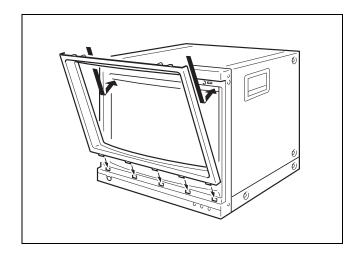


16:9マスクに戻すには

「4:3マスクの取り付けかた」と同じ手順で4:3マスクをはずし、16:9マスクを取り付けます。

接続

BKM-15R との接続

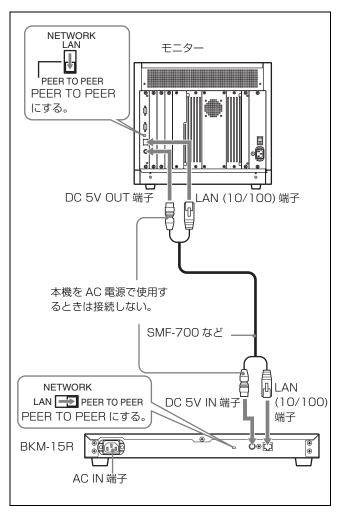

ご注意

- モニターの MAIN POWER スイッチをオフにして接続してください。
- モニターとBKM-15RのNETWORKスイッチをPEER TO PEER にしてください。
- モニターのLAN (10/100) 端子とBKM-15RのLAN (10/100) 端子を 10BASE-T/100BASE-TX のストレート仕様の LAN ケーブル (シールドタイプ、別売り)、SMF-700、 または BKM-35H に付属のケーブルで接続します。
- 別売りのLANケーブルを接続する際は、ノイズによる誤動作を防ぐため、必ずシールドタイプのケーブルを使用してください。
- モニターのDC 5V OUT端子とBKM-15RのDC 5V IN端子をSMF-700、またはBKM-35H に付属のケーブルで接続します。この場合、BKM-15Rの電源はDC 5V ケーブル


を通じてモニターから供給されるため、AC 電源を接続する必要はありません。

BKM-15R を AC 電源で使用する場合

BKM-15R に付属の AC 電源コードを AC IN 端子に接続します。

AC 電源を使用する場合、AC IN 端子が優先しますので、 DC 5V IN 端子にケーブルを接続する必要はありません。

ネットワーク接続

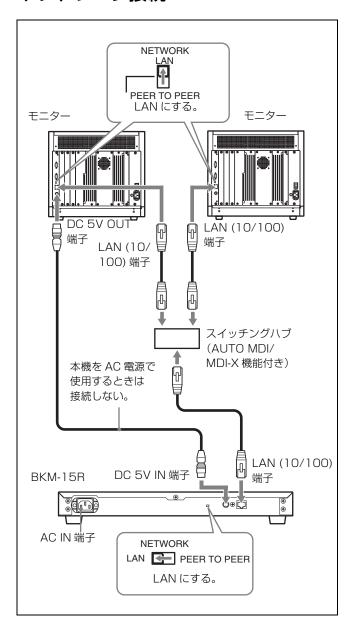

ご注意

- モニターの MAIN POWER スイッチをオフにして接続し てください。
- モニターと BKM-15Rの NETWORK スイッチをLAN にし てください。
- 10BASE-T/100BASE-TX の LAN ケーブル (シールドタイ プ、別売り)でネットワークに接続します。
- 別売りのLANケーブルを接続する際は、ノイズによる誤 動作を防ぐため、必ずシールドタイプのケーブルを使用 してください。
- モニターと BKM-15R を合わせて 32 台(BKM-15R は最大 4 台)接続することができます。
- BKM-15R はサブネットを越えてモニターをコントロール することはできません。
- 別売りのスイッチングハブは、ストレート/クロスケーブ ルの自動選択機能(AUTO MDI/MDI-X)をもった機器 をご使用ください。
- モニターのDC 5V OUT 端子とBKM-15RのDC 5V IN 端子 を SMF-700、または BKM-35H に付属のケーブルで接続 します。この場合、BKM-15R の電源は DC 5V ケーブルを 通じてモニターから供給されるため、AC 電源を接続する 必要はありません。

BKM-15R を AC 電源で使用する場合

BKM-15R に付属の AC 電源コードを AC IN 端子に接続し ます。

AC電源を使用する場合、AC IN 端子が優先しますので、 DC 5V IN 端子にケーブルを接続する必要はありません。

モニター / グループの選択

複数のモニターをネットワーク接続しているときに、モニター ID No. またはグループ ID No. を指定して、リモート接続をすることができます。

モニター ID No. とグループ ID No. について


モニターコントロールユニット BKM-15R は、LAN (10/100) 端子に接続されたモニターを複数台操作できます。このとき、各モニター ID No.、グループ ID No. によって、特定のモニターまたはモニターグループだけを操作できます。

モニターを複数接続するときは、NETWORK メニューで、各モニターに対して ID No. およびグループ No. として $1\sim99$ までの番号を付けることができます。

モニター ID No. やグループ ID No. を入力して、特定のモニターまたはモニターグループを指定するときは、前面のモニター選択ボタンを使います。

◆ NETWORK メニューについては、「回 システムの設定 -SYSTEM CONFIGURATION メニュー」 (45ページ) をご覧く ださい。

モニター選択ボタンとランプについて

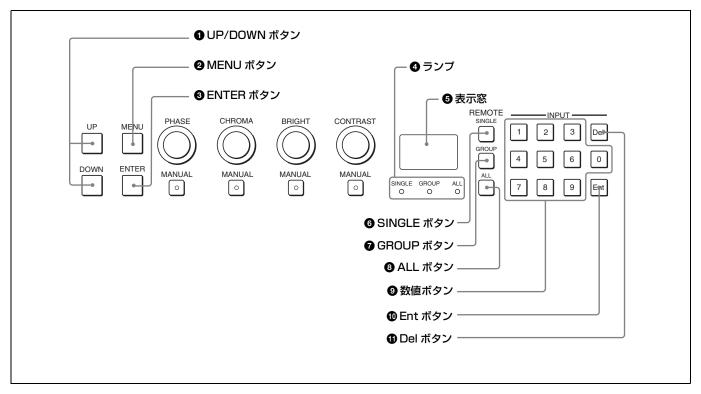

ピン番号	機能
1 UP ボタン	ID No. を上げる。
1 DOWN ボタン	ID No. を下げる。
② MENU ボタン	設定中に押すと設定前の状態に戻る。
3 ENTER ボタン	表示部の値を確定する。
● ランプ	SINGLE/GROUP/ALL ボタンのうち、押したボタンのランプが、ID No. を設定中は点滅し、確定すると点灯する。
⑤ 表示窓	選択されたモニター ID No.、グループ ID No.、または ALL が表示される。接続処理中は点滅する。

ピン番号	機能
⑥ SINGLE ボタン	シングル接続モードを選択する。
	押し続けると接続されている全てのモニターにモ
	ニター ID No. を表示する。
⑦ GROUP ボタン	グループ接続モードを選択する。
	押し続けると接続されている全てのモニターにグ
	ループ ID No. を表示する。
8 ALL ボタン	オール接続モードを選択する。
9 数値ボタン	ID No. を入力する。
● Ent ボタン	表示部の値を確定する。
1 Del ボタン	ID No. を消去する。

リモート接続操作の手順

- **1** モニターとコントローラー1台ごとに異なるIPアドレスを設定する。
- **2** モニター1台ごとに異なるモニターID No. を設定し、必要に応じて、グループID No. を設定する。
- **3** モニターとコントローラーの NETWORK スイッチ (背面) を LAN にする。
- **4** SINGLE ボタン、GROUP ボタンまたは ALL ボタンを押して接続モードを選択する。

押したボタンのランプが点滅し、モニターを認識する と点灯します。

5 UP/DOWN ボタンまたは数値ボタンを押してシングル接続モードのときはモニター ID No.、グループ接続モードのときはグループ ID No. を選択する。

モニター ID No.、グループ ID No. の最大値は99です。

6 ENTER**③** または Ent**⑩** ボタンを押して決定する。

表示部にモニター ID No.、グループ ID No. または ALL が表示されます。

操作 $\mathbf{1} \sim \mathbf{3}$ を1度設定したあとは、手順 $\mathbf{4} \sim \mathbf{6}$ の操作により、リモート接続を行います。

ご注意

- 割り付けられていないモニター ID No.、グループ ID No. を選択した場合、設定は変わらず、選択前の接続状態を維持します。
- 同じモニター ID No. が複数ある場合は IP アドレスが小さい方が選択されます。
- 異なるモニター ID No. を設定しても、同一の IP アドレス を設定していると、接続することができません。
- ネットワーク接続によるリモートコントロールを行うには、SYSTEM CONFIGURATION メニューの NETWORK メニュー、NETWORK SETTINGS メニューで MONITOR ID、GROUP ID や IP アドレスが正しく設定されている必要があります。また、CONTROLLER メニューの NETWORK SETTINGS メニューで IP アドレスが正しく設定されている必要があります。
 - ◆ NETWORK メニュー、NETWORK SETTINGS メニューに ついては、「回 システムの設定 - SYSTEM CONFIGURATION メニュー」 (45 ページ) をご覧ください。
 - ◆ NETWORK SETTINGS メニューについては、「田 コントローラーの設定 CONTROLLER メニュー」(58 ページ)をご覧ください。

基本設定の選択

BVM-A20F1M のみ

初めてお使いになるときは、お使いになる地域の選択を 行ってください。

地域を選択すると、 $CH1 \sim 30$ の色温度が、各地域に指定された値に初期設定されます。

		色温度
JAPAN		D93
OTHER A	REA	D65

1 本機の電源を入れる。

SELECT SETTING 画面が表示されます。

SELECT SETTING

■ JAPAN

COLOR TEMP: D93

OTHER AREA

COLOR TEMP: D65

2 メニュー操作ボタンを使用して (28ページ参照)、使用 する地域を設定する。


メニュー



メニューの操作方法

メニュー操作ボタン

メニューは、モニターコントロールユニット BKM-15R (別売り) のボタンを使って操作します。

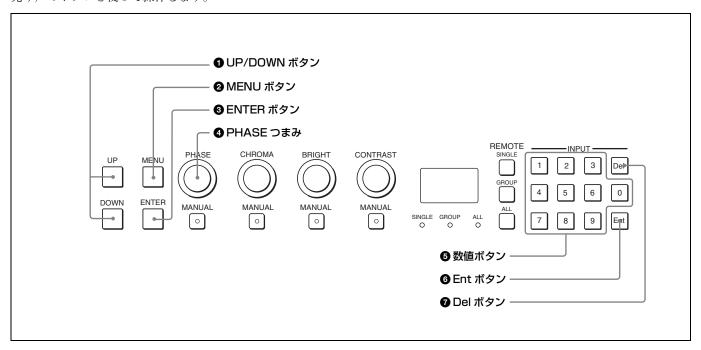

下記に、メニュー操作ボタンの働きを示します。

ボタン	機能
● UP ボタン	カーソルを上に動かす。設定モードでは、
	調整・設定値を上げる。
① DOWN ボタン	カーソルを下に動かす。設定モードでは、
	調整・設定値を下げる。
② MENU ボタン	メニュー画面を表示する。1 つ前の階層の
	メニュー画面に戻る(メインメニュー画面
	では、通常画面に戻る)。
3 ENTER ボタン	選択した項目・設定を確定する。

ボタン	機能
◆ PHASE つまみ	時計方向に回すと、カーソルを上に動か
	す。設定モードでは、調整・設定値を上げ
	る(UP ボタンと同機能)。
	反時計方向に回すと、カーソルを下に動か
	す。設定モードでは、調整・設定値を下げ
	る(DOWN ボタンと同機能)。
5 数値ボタン	数値を入力する。
6 Ent ボタン	選択した項目・設定を確定する。
⑦ Del ボタン	入力した数値や文字を消去する。

メニューを表示させるには

MENU ボタンを押すと、メインメニューが表示されます。

MENU

PICTURE ADJ...

COLOR TEMP ADJ...

INPUT CONFIGURATION...

SYSTEM CONFIGURATION...

INSTALLATION SETTINGS...

FILE MANAGEMENT...

STATUS...

CONTROLLER...

KEY PROTECT OFF

ここで表示されているメニューを選ぶと、それぞれのメニューの第1階層が表示されます。


◆ メニュー選択層のメニューの内容については「メニューの階層 構造」(32ページ)をご覧ください。

ご注意

青い文字で表示されるメニュー項目については、設定でき ません。

メニュー番号について

本書では、説明の必要なメニューにそれぞれの分類と階層を示すメニュー番号を付けています。メニュー番号は、メニューの分類(メインメニューに表示されるメニュー)を示すアルファベットと、それぞれの階層を示す数字で構成されています。この番号は画面には表示されません。

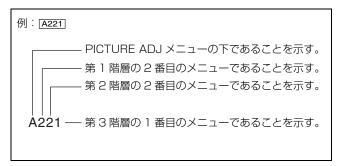


ご注意

メニュー番号は説明が必要なメニューにだけ付いています。 そのため、メニュー番号の連番は、メニュー階層のすべて のメニューを含めて数えたものではありません。

メニューの操作手順

次の手順でメニューを表示し、設定や調整を行います。

- **1** MENU ボタンを押す。
 - メインメニューが表示されます。
- **2** UP または DOWN ボタンを押すか、PHASE つまみを回して、調整や設定を行いたいメニュー項目にカーソルを合わせる(例: DOWN ボタンを押して INPUT CONFIGURATION... に合わせる)。

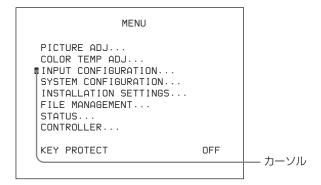


3 ENTER ボタンまたは Ent ボタンを押す。

選んだメニューの第1階層が表示されます。

```
INPUT CONFIGURATION MA
CH01
■FORMAT...
                SDI HD/D1 AUTO
 SLOT NO
                        OPTION1
  INPUT NO
                       DIGITAL1
 SCREEN ASPECT
                           16:9
 SCAN SIZE
                         NORMAL
SYNC MODE
 COLOR TEMP
                            D93
PICTURE PRESET
                        PRESET1
 MATRIX...
```

4 手順**2**と**3**を繰り返して、設定または調整したい階層の メニューを表示し、設定を行う。

設定の方法については、次ページをご覧ください。

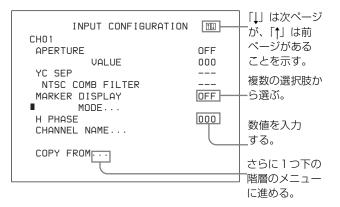

メニュー操作を中断したいときは

MENU ボタンを押します。1つ前の階層が表示されます。 実行中の設定や調整は元の状態に戻り、データの読み出し・ 書き込みなどは強制終了します。

メニュー操作中に"NG"または"ERROR"の表示 が出たときは

MENU ボタンを押すと、操作中のメニュー画面に戻ります。

複数の設定内容から 1 つを選択する

設定モードにして、選択する

1 UP/DOWN ボタンを押すか、または PHASE つまみを回して設定したい項目にカーソルを合わせ、ENTER (Ent) ボタンを押す。

選んだ項目が黄色文字に変わり、設定モードになります。

```
INPUT CONFIGURATION
CH<sub>0</sub>1
■FORMAT...
                  SDI HD/D1 AUTO
  SLOT NO
                         OPTION1
   INPUT NO
                         DIGITAL1
 SCREEN ASPECT
                             16:9
 SCAN SIZE
                           NORMAL
 SYNC MODE
COLOR TEMP
                              D93
PICTURE PRESET
                         PRESET1
 MATRIX...
```


2 UP/DOWN ボタンを押すか、または PHASE つまみを回して設定を切り換える。

3 ENTER (Ent) ボタンを押す。

設定が確定されます (白文字に戻る)。

設定リストから選択する

1 UP/DOWN ボタンを押すか、または PHASE つまみを回して設定リストの選択したい項目にカーソルを合わせる。

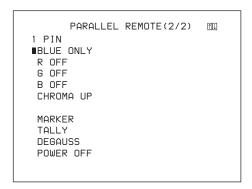

2 ENTER (Ent) ボタンを押す。

選んだ設定が確定され、上の階層のメニューに戻ります。

数値を入力する

1 UP/DOWN ボタンを押すか、または PHASE つまみを回して設定したい項目にカーソルを合わせ、ENTER (Ent) ボタンを押す。

選んだ項目が黄色文字に変わり、設定モードになります。

MARKER MODE(1/3)	ħ↓
CH01 ASPECT MODE ASPECT H POSITION MARKER BRIGHT	16:9 000 90!RE
ASPECT MARKER LINE	OFF
COLOR ASPECT BLANKING MODE	0FF


- 2 次のいずれかの方法で数値を設定する。
 - 数字キーで数値を直接入力し、ENTER (Ent) ボタンを押す。
 - UP/DOWN ボタンを押して数値を選ぶ。
 - PHASE つまみを回して数値を選ぶ。

3 ENTER (Ent) ボタンを押す。

設定した数値が確定されます (白文字に戻る)。


文字を入力する

1 設定画面を表示し、UP/DOWN ボタンを押すか、または PHASE つまみを回してカーソルを NEW NAME に合わせる。

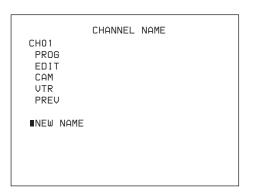

2 ENTER (Ent) ボタンを押す。

文字入力位置を示す「?」(黄色文字)が現れ、文字入力モードになります。

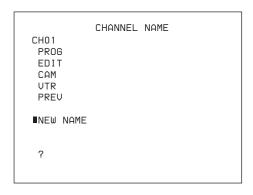

3 UP/DOWN ボタンを押すか、PHASE つまみを回して、 入力したい文字を選びます。


UP ボタンを押すか、PHASE つまみを時計方向に回すと、以下の順で文字および記号が現れます。

A B……Y Z O 1……8 9 (,) : ; . -+ / & (スペース) ?

DOWN ボタンを押すか、PHASE つまみを反時計方向 に回すと、逆の順に現れます。

使用できる記号はメニューの種類により異なります。 「(スペース)」は1文字目には使用できません。 **4** ENTER (Ent) ボタンを押す。

選んだ文字が入力されます。

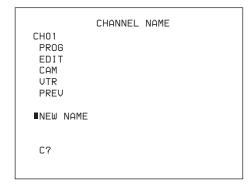

5 手順**3**と**4**を繰り返して残りの文字を入力したら、ENTER (Ent) ボタンを押す。

設定した文字が確定され、1つ上の階層のメニューに戻ります。

入力した文字を修正するには

数値ボタンの Del ボタンを押すと、[?] (黄色文字) の左隣 の文字が削除されます。

メニューの階層構造

メニュー構成

ここでは、メニュー選択層と第1階層の構造を示します。 各メニューの詳細は、この後の各メニューの説明をご覧く ださい。

メインメニュー	第1層	内容
PICTURE ADJ 🖪	-	画像調整メニューです。(34ページ)
	PRESET VALUE	調整するプリセットデータを選択します。(34ページ)
	AUTO A1	クロマ/フェーズ/マトリクスを自動調整で設定します。(35ページ)
	MANUAL ADJUST A2	フェーズ / クロマ / ブライトネス / コントラストのプリセットデータを
		MANUAL 調整つまみで設定します。 (35 ページ)
	COPY FROM A3	他の画像調整プリセットデータをコピーします。(36ページ)
COLOR TEMP ADJ B		色温度を調整するためのメニューです。(36ページ)
	PRESET VALUE	調整する色温度データを選択します。(37ページ)
	MANUAL B1	色温度を MANUAL つまみで設定します。 (37 ページ)
	AUTO B2	色温度を自動調整で設定します。(38ページ)
	COPY FROM B3	他の色温度データをコピーします。(39 ページ)
	RESTORE FACTORY DATA B4	色温度データを工場出荷時の設定値に戻します。(39ページ)
	ANALYZE B5	色度、輝度を測定します。(39ページ)
INPUT		入力信号に関する各種データを設定するメニューです。(40ページ)
CONFIGURATION ©	CHxx	現在選択しているチャンネルが表示されます。(41ページ)
	FORMAT C1	信号の種類を選択します。(42ページ)
	SLOT NO	スロット番号を選択します。(41ページ)
	INPUT NO	入力端子番号を選択します。(41ページ)
	SCREEN ASPECT	画面のアスペクトを設定します。(41 ページ)
	SCAN SIZE	スキャンサイズを設定します。(41ページ)
	SYNC MODE	同期信号を設定します。(41ページ)
	COLOR TEMP	色温度を選択します。(41ページ)
	PICTURE PRESET	画像調整プリセットを選択します。(42ページ)
	MATRIX C2	信号システムのマトリクスを設定します。(43ページ)
	APERTURE	アパーチャー補正をするかどうかを設定します。(42ページ)
	VALUE	アパーチャー補正量を入力します。(42ページ)
	YC SEP	Y/C 分離フィルターを選択します。(42ページ)
	NTSC COMB FILTER	NTSC COMB フィルタの種類を設定します。(42ページ)
	MARKER DISPLAY	マーカーを表示するかどうかを設定します。(42 ページ)
	MODE C3	マーカーのアスペクトやセーフエリア、セーフタイトルなどを設定しま
		す。(43ページ)
	H PHASE	画面の水平方向の位置を調整します。(42ページ)
	CHANNEL NAME C4	チャンネル名を付けます。(45ページ)
	COPY FROM C5	他のチャンネルデータをコピーします。 (45 ページ)

メインメニュー	第1層	内容
SYSTEM		リモートコントロール機能やネットワークなどシステムに関する設定を
CONFIGURATION 🗖		するメニューです。(45ページ)
	NETWORK [D1]	ネットワークによるリモートコントロール機能の設定をします。(46
		ページ)
	PARALLEL REMOTE D2	パラレルリモートコントロール機能の設定をします。(47 ページ)
	POWER D3	主電源や MONITOR I/心 スイッチを入れたときのモニターの状態を設
		定します。(48ページ)
	BLANKING SETTINGS D4	ブランキング関連の設定をします。(48 ページ)
	ON SCREEN SET D5	画面に表示させる情報を設定します。(48 ページ)
	PASSWORD D6	パスワードの変更や割付を設定します。(48ページ)
	MAINTENANCE D7	メインテナンス用のメニューを表示します。 (49 ページ)
INSTALLATION		ランディング、画像のゆがみなどの設置調整をするためのメニューで
SETTINGS E		す。(49ページ)
	LANDING ADJUST E1	地磁気の影響によるビームランディングのずれを調整します。(50ペー
		ジ)
	ALIGNMENT E2	画像の位置やサイズを調整します。(50ページ)
	DIGITAL UNIFORMITY ADJ E3	CRT の色むらを調整します。 (52 ページ)
FILE MANAGEMENT		システムデータの保存、コピー、削除などを行うメニューです。
F		(54ページ)
	SAVE TO F1	データの書き込みを実行します。(54ページ)
	COPY FROM F2	データのコピーを実行します。(55 ページ)
	DELETE F3	ファイルを削除します。(55ページ)
	DATA MAINTENANCE F4	システムデータをメインテナンスします。(55 ページ)
STATUS G		現在の設定や、使用しているチャンネルなど、いろいろな情報を確認す
		るときに使うメニューです。(56ページ)
	CH STATUS G1	使用しているチャンネルに関する情報が表示されます。(57ページ)
	SLOT STATUS G2	オプションスロット番号1~3 (OPTION1~3) に装着されたオプ
		ションの種類が表示されます。(57 ページ)
	MODEL NAME	モデル名が表示されます。(57ページ)
	SERIAL NO	シリアル番号が表示されます。(57ページ)
	SOFTWARE VERSION	ソフトウェアのバージョンが表示されます。(57ページ)
	OPERATION TIME	動作時間(時間)が表示されます。(57ページ)
	CRT TURN ON TIME	CRT 使用時間(時間)が表示されます。(57 ページ)
	IP ADDR	モニターの IP アドレスが表示されます。(57 ページ)
	CONTROLLER STATUS G3	操作しているコントローラーに関する情報が表示されます。 (57ペー
		ジ)
CONTROLLER H		コントローラーのネットワークの設定を行うメニューです。(58ペー
		ジ)
	MONITOR ID DISPLAY [H1]	モニター選択表示部の表示方法を設定します。(58ページ)
	NETWORK SETTINGS (H2)	NETWORK SETTINGS メニューを表示します。(58 ページ)
	NETWORK SW	NETWORK スイッチの設定状態を表示します。(58 ページ)
	SNMP SETTINGS [H3]	CONTACT、NAME、LOCATION、TRAPを設定します。(59ページ)
KEY PROTECT [コントロールユニットのボタンを機能させるか、させないかを設定する
		メニューです。(59ページ)

A 画像の調整 - PICTURE ADJ メニュー

概要

クロマ/フェーズ/マトリクスの自動調整を行ったり、コントラスト/ブライトネス/クロマ/フェーズをあらかじめ調整して、各調整つまみにプリセット値を設定するための画像調整のメニューです。

- 調整するプリセットデータを選択する(PRESET VALUE メニュー)
- クロマ / フェーズ / マトリクスを自動調整する(AUTO... メニュー)

外部入力のカラーバー信号が必要です。

マトリクスデータを変更したり工場出荷時の設定値に戻すことができます。

- フェーズ/クロマ/ブライトネス/コントラストのプリセットデータを MANUAL つまみで調整する (MANUAL ADJUST メニュー)
- 他のデータをコピーする (COPY FROM... メニュー) モニター内の他のデータ、他のモニターのデータ、"メモリースティック"のデータをコピーできます。

PICTURE ADJ メニューの階層構造

第1層	第2層	第3層
PRESET VALUE		
AUTO A1	AUTO ADJUST A11	
	MATRIX VALUE	
	MATRIX RESET	
	COLOR BAR	
MANUAL ADJUST		
A2		
COPY FROM A3	PRESET VALUE [A31]	
	OTHER MONITOR	OTHER MONITOR
	A32	A321
	MEMORY STICK	MEMORY STICK
	A33	A331

構成メニュー

以下に、メニュー番号順に構成メニューを説明します。

メニューの見かた

- 本書では各メニューに付けた番号 (例: A11) は、画面に は表示されません。
- ◆ 詳しくは「メニュー番号について」(29ページ)をご覧ください。
- 「➡」は、設定操作後の移行先メニューの番号を示します。「➡」を記していない場合は、そこで設定操作が完了します。

A PICTURE ADJ メニュー

PRESET VALUE: INPUT CONFIGURATION ≯

ニューで設定している画像調整プリセットデータが表示されます。調整する画像調整プリセットデータを変更する場合は PRESET1、PRESET2、PRESET3、PRESET4、PRESET5 から選択します。

画像調整プリセットデータを変更した場合

プリセットデータを変更し、MENU ボタンを押してメインメニューに戻るとき、次の変更確認メッセージが表示されます。

CHANGE INPUT CONFIG? PRESET VALUE

PRESETX

→ PRESETX

(変更前プリセットデータ) → (変更後プリセットデータ)

OK: プリセットデータを変更する場合は **ENTER** (Ent) ボタンを押します。

INPUT CONFIGURATION メニューで設定している プリセットデータが変更後のプリセットデータに置き 換えられます。

CANCEL:プリセットデータを変更しない場合は MENU ボタンを押し、メインメニューに戻ります。 プリセットデータの調整値は残りますが、INPUT CONFIGURATION メニューで設定しているプリセットデータは置き換えられません。

◆ INPUT CONFIGURATION メニューについては、「ⓒ 入力 チャンネルの設定 - INPUT CONFIGURATION メニュー」 (40ページ)をご覧ください。

AUTO...: クロマ / フェーズ / マトリクスを自動調整します。 ⇒ [AT]

MANUAL ADJUST:フェーズ/クロマ/ブライトネス /コントラストの画像調整プリセットデータを MANUAL 調整つまみで設定します。 ⇒ [A2]

COPY FROM...:他の画像調整プリセットデータをコピーします。⇒[A3]

A1 AUTO...メニュー

クロマ/フェーズ/マトリクスの自動調整を行います。 クロマ、フェーズのプリセットデータはデフォルト値(工 場出荷時の値:1000) に戻ります。

AUTO ADJUST:自動調整を開始します。 ⇒ A11

MATRIX VALUE: INPUT CONFIGURATION ≯

ニューで設定しているマトリクスデータが表示されま す。調整するマトリクスデータを変更する場合は

ITU601, SMPTE 240M, ITU709, USER $1 \sim 5 \text{ bb}$ 選択します。

ITU601、SMPTE 240M、ITU709 が変更されている 場合は ITU601*、SMPTE 240M*、ITU709* と表示 されます。

マトリクスデータを変更した場合

マトリクスデータを変更し、MENU ボタンを押してメ インメニューに戻るとき、次の変更確認メッセージが 表示されます。

CHANGE INPUT CONFIG?

MATRIX VALUE (1080/720)

変更前マトリクスデータ → 変更後マトリクスデータ MATRIX VALUE (1035)

変更前マトリクスデータ → 変更後マトリクスデータ

MATRIX VALUE (480/576)

変更前マトリクスデータ → 変更後マトリクスデータ

OK:マトリクスデータを変更する場合は ENTER (Ent) ボタンを押します。

INPUT CONFIGURATION メニューで設定している マトリクスデータが変更後のマトリクスデータに置き 換えられます。

CANCEL:マトリクスデータを変更しない場合は MENU ボタンを押し、メインメニューに戻ります。 マトリクスデータの調整値は残りますが、INPUT CONFIGURATION メニューで設定しているマトリク スデータは置き換えられません。

▶ INPUT CONFIGURATION メニューについては、「ⓒ 入力 チャンネルの設定 - INPUT CONFIGURATION メニュー」 (40ページ)をご覧ください。

MATRIX RESET:マトリクスデータを工場出荷時の設 定値に戻します。

USER1~5または工場出荷時の設定値のときは、選 択することはできません。

次のメッセージが表示され、工場出荷時の設定値に戻 すかどうかの確認が行われます。

RESTORE FACTORY DATA?

OK: 工場出荷時の設定値に戻す場合は ENTER (Ent) ボタンを押します。

CANCEL: 工場出荷時の設定値に戻さない場合は MENU ボタンを押します。

COLOR BAR:カラーバーを選択します。

FULL FIELD 8: フルフィールド 100% の輝度順 8 色 カラーバー(白、黄、シアン、緑、マゼンタ、赤、 青、黒)(工場出荷時の設定)

SMPTE: SMPTE 標準カラーバー

EIA: EIA 標準カラーバー (480/60I、575/50I 信号の

ときのみ有効)

MULTI FORMAT: SMPTE RP219/ARIB STD-B28 で規格化されているカラーバー

ご注意

- AUTO メニューで自動調整を行うときは、EXT SYNC ボ タンを OFF (INT SYNC) に設定してください。 ON (EXT SYNC) にしておくと正しく自動調整が行われ ず、誤動作の原因となります。
- INPUT CONFIGURATION メニューの FORMAT メ ニューで設定している信号フォーマットが、4:4:4 RGB ま たは RGB のとき、MATRIX VALUE および MATRIX RESET は選択できません。

A11 AUTO ADJUST メニュー

自動調整が行われます。(自動調整には時間を要します。終 了するまでお待ちください。)

途中で中止するには

MENU ボタンを押します。

A2 MANUAL ADJUST メニュー

PHASE、CHROMA、BRIGHT、またはCONTRASTつま みを回して調整します。調整終了後、ENTER (Ent) ボタン を押すと調整値が確定されます。

PHASE: XXXX CHROMA: XXXX **BRIGHT**: xxxx CONTR: xxxx

マニュアル調整時、画面の表示文字を消したい場合は

CHAR OFF ボタンを押します。画面から表示が消え、調整 しやすくなります。文字を表示させるには、再度 CHAR OFF ボタンを押します。

デフォルト値に戻すには

対応する MANUAL ボタンを押すと、デフォルト値(工場 出荷時の値) 1000 に戻ります。

途中で中止するには

MENU ボタンを押します。調整したデータがキャンセルさ れます。

調整データを確定するには

ENTER (Ent) ボタンを押します。



A3 COPY FROM...メニュー

画調整プリセットデータのコピー元を選択します。

PRESET VALUE...: モニター内の他のデータをコピー します。 ⇒ [A31]

OTHER MONITOR...:他のモニターのデータをコピー

します。**⇒**A32

MEMORY STICK...: "メモリースティック"内のファイ

ルをコピーします。 ⇒ A33

ご注意

マトリクスデータはコピーされません。

「A31」 PRESET VALUE... メニュー

モニター内の他のデータをコピーします。

PRESET1、PRESET2、PRESET3、PRESET4、PRESET5 から選択します。

A32 OTHER MONITOR... メニュー

コピー元に使うモニターの ID No. を指定します。

MONITOR ID...: ID No. を入力します。 ⇒ A321

NETWORK スイッチを PEER TO PEER に設定したときは 選択できません。

A321 OTHER MONITOR メニュー

選択した他のモニターのデータをコピーします。 PRESET1、PRESET2、PRESET3、PRESET4、PRESET5 から選択します。

A33 MEMORY STICK...メニュー

コピー元に使う"メモリースティック"内のファイルを選択します。⇒[A331]

A331 MEMORY STICK メニュー

選択したファイルのデータをコピーします。

PRESET1、PRESET2、PRESET3、PRESET4、PRESET5から選択します。

□ 色温度の調整 ー COLOR TEMP ADJ メニュー

概要

色温度を調整するためのメニューです。

工場出荷時の設定値または以前に設定した値を初期値として利用すると、調整時間を短縮できます。

- 調整するプリセットデータを選択する(PRESET VALUE メニュー)
- **つまみで調整する (MANUAL... メニュー)** バイアスおよびゲインを MANUAL つまみで調整します。
- 自動で調整する (AUTO... メニュー)

下記のプローブを使用して、モニターの色温度の自動調整を行うことができます。ただし、ソニーの BKM-14L 以外を使用するときは、カラーアナライザーとモニターを接続するためのケーブルが必要です。

メーカー	型名	
ソニー	BKM-14L (接続ケーブル不要)	
KONICA MINOLTA	CA-100、CA-100plus	
DK-TECHNOLOGIES	PM 5639	
THOMA	TF6	
UDT INSTRUMENTS	SLS 9400-FC	

- ◆ 接続ケーブルについて、詳しくは「色温度調整用プローブを使用するときの接続ケーブルについて」(66ページ)をご覧ください。
- 他のデータをコピーする (COPY FROM... メニュー) モニター内の他のデータ、他のモニターのデータ、"メモリースティック"のデータをコピーできます。
- 工場出荷時データに戻す(RESTORE FACTORY DATA メニュー)

色温度データを工場出荷時の設定値に戻すことができます。

測定した色度座標、輝度値を表示する(ANALYZEメニュー)

BKM-14L を使用して、色度座標、輝度値を測定することができます。

色温度調整の前に

PICTURE ADJ メニューの AUTO... [A1] メニュー を使って 自動調整を実行することをおすすめします。

COLOR TEMP ADJ メニューの階層 構造

第1層	第2層	第3層
PRESET VALUE		
MANUAL B1	MANUAL ADJUST	
	B11	
	ORIGINAL VALUE	
	SIGNAL	
	CONT/BRT HOLD	
AUTO B2	AUTO ADJUST	
	B21	
	TARGET COLOR	
	TEMP	
	X	
	Y	
	LOW LIGHT (20 IRE)	
	HIGH LIGHT	
	(100 IRE)	
	PROBE	
	CONT/BRT HOLD	
COPY FROM B3	PRESET VALUE	
	B31	
	OTHER MONITOR	OTHER MONITOR
	B32	B321
	MEMORY STICK	MEMORY STICK
	B33	B331
RESTORE		
FACTORY DATA		
B4		
ANALYZE B5		

構成メニュー

以下に、メニュー番号順に構成メニューを説明します。

メニューの見かた

- 本書では各メニューに付けた番号(例: A11)は、画面に は表示されません。
- ◆ 詳しくは「メニュー番号について」(29ページ)をご覧くださ
- 「➡」は、設定操作後の移行先メニューの番号を示しま す。「➡」を記していない場合は、そこで設定操作が完了 します。

B COLOR TEMP ADJ メニュー

PRESET VALUE: INPUT CONFIGURATION ≯

ニューで設定している色温度データが表示されます。 調整する色温度データを変更する場合は D93、D65、 D61、USER1、USER2、USER3、USER4、USER5か ら選択します。

D93、D65、D61 データが変更されている場合は、 D93*、D65*、D61*と表示されます。

色温度データを変更した場合

色温度データを変更し、MENU ボタンを押してメイン メニューに戻るとき、次の変更確認メッセージが表示 されます。

CHANGE INPUT CONFIG? COLOR TEMP PRESET

DXX* → USERX

(変更前色温度データ) → (変更後色温度データ)

OK: 色温度データを変更する場合は ENTER (Ent) ボ タンを押します。

INPUT CONFIGURATION メニューで設定している 色温度データが変更後の色温度データに置き換えられ ます。

CANCEL:変更しない場合は MENU ボタンを押し、 メインメニューに戻ります。

色温度データの調整値は残りますが、INPUT CONFIGURATION メニューで設定している色温度 データは置き換えられません。

◆ INPUT CONFIGURATION メニューについては、「ⓒ 入力 チャンネルの設定 - INPUT CONFIGURATION メニュー」 (40ページ)をご覧ください。

MANUAL...: 色温度を MANUAL つまみで調整します。

AUTO...: 色温度を自動調整します。 ⇒ B2

COPY FROM...:他の色温度データをコピーします。 **⇒**B3

RESTORE FACTORY DATA: 色温度データを工場出

ANALYZE: 色度、輝度を測定します。 ⇒ B5

B1 MANUAL ... メニュー

MANUAL ADJUST: ゲインとバイアスをつまみで調整 します。**⇒**B11

ORIGINAL VALUE:調整の初期値を設定します。 初期値は D93、D65、D61、USER1、USER2、 USER3、USER4、USER5 から選択できます。 D93、D65、D61 データが変更されている場合は、 D93*、D65*、D61*と表示されます。



SIGNAL:調整に使う白色信号を選択します。

INT: 内部信号を使用。ゲイン、バイアスの調整と同期して 100IRE と 20IRE の信号が自動的に切り換わります。

EXT:外部入力信号を使用。ゲイン、バイアスの調整時に、調整に使う信号を入力します。(工場出荷時の設定)

CONT/BRT HOLD:ホワイトバランスのマニュアル調整で、コントラスト、明るさの設定を調整値にするかセンター値にするか (ON または OFF) を選択します。

ON:コントラスト、明るさの設定値を変更せず、調整します。(工場出荷時の設定)

OFF:ホワイトバランス調整時、コントラスト、明る さの設定はセンター値(1000)となります。 調整後もセンター値(1000)のままです。

B11 MANUAL ADJUST メニュー

ゲイン、バイアスの調整をすることができます。 ゲイン調整、バイアス調整の切り換えは、UP/DOWN ボタ ンで行います。

各項目の調整に使うつまみ

調整終了後、ENTER (Ent) ボタンを押すと、調整値が確定されます。

RED: CONTRAST KNOB (CONTRAST つまみで R のゲインまたはバイアスを調整する。)

GREEN: BRIGHT KNOB (BRIGHT つまみで G のゲインまたはバイアスを調整する。)

BLUE: CHROMA KNOB (CHROMA つまみで B のゲインまたはバイアスを調整する。)

LUMINANCE: PHASE KNOB (PHASE つまみで輝度 を調整する。)

RED/GREEN/BLUE を調整前の値に戻すには

RED/GREEN/BLUE を調整時、対応する MANUAL 調整 ボタンを押すと調整前の値に戻ります。

RED、GREEN、BLUE をすべて調整前の値に戻すには、PHASE の MANUAL 調整ボタンを押します。

ご注意

ENTER (Ent) ボタンを押して確定した後は、MANUAL 調整ボタンを押しても変わりません。

途中で中止するには

MENU ボタンを押します。調整したデータがキャンセルされます。

調整データを確定するには

ENTER (Ent) ボタンを押します。

COL TEMP (ショートカット) ボタンについて

現在画面に表示されている画像に設定されている色温度に 対応する MANUAL メニュー画面を表示させることができ ます。

B2 AUTO... メニュー

色温度を自動調整します。

AUTO ADJUST:調整を開始します。

□ B21

TARGET COLOR TEMP: 使いたい調整値を選択します。

D93、D65、D61、ANY から選択できます。

X:x座標を入力します。

Y:y座標を入力します。

LOW LIGHT (20IRE): ローライト側の輝度 (cd/m²) を入力します。

HIGHT LIGHT (100IRE): ハイライト側の輝度 (cd/m^2) を入力します。

PROBE: 色温度の自動調整で使用するプローブを選択します。

プローブの選択

BKM-14L: 色温度の調整に BKM-14L を使う。 **CA-100**: 色温度の調整に CA-100 または CA-100plus を使う。

PM 5639: 色温度の調整に PM 5639 を使う。

TF6: 色温度の調整に TF6 を使う。

SLS 9400-FC: 色温度の調整に SLS 9400-FC を使う。

- BKM-14L をご使用の際に、AUTO ADJUST メニューが実行できない場合は、1度コネクターを差し直してください。
- KONICA MINOLTA 社製 CA-100plus をご使用の際は、RS-232C 通信環境を CA-100 互換モードに設定してください(BAUD RATE 設定: 9600 bps)。
- THOMA 社製 TF6 をご使用の際は、TF6 の PRINT 設 定メニューを OFF に設定してください。

CONT/BRT HOLD:ホワイトバランスの自動調整後に、コントラスト、明るさの設定を調整値にするかセンター値にするか(ON または OFF)を選択します。自動調整時は、コントラスト、明るさの設定はセンター値(1000)となります。

ON:ホワイトバランス調整後、コントラスト、明る さの設定は元の調整値に戻る。(工場出荷時の設 定)

OFF:ホワイトバランス調整後、コントラスト、明る さの設定はセンター値(1000)のままとなる。

次の手順でメニューを操作し、自動調整を開始させます。 前回調整時の値を使用する場合は、①、②、③の操作をす る必要はありません。AUTO ADJUST を選んでください。

① TARGET COLOR TEMPで使いたい調整値を選択する。

ANY を選択した場合は、X および Y の項目を選び、 CIE1931 色度座標の x 座標、y 座標の値を入力してください。

- ② LOW LIGHT および HIGH LIGHT の値を入力する。
- ③ プローブを選択する (工場出荷時は BKM-14L に設定されています。)
- ④ AUTO ADJUST を選択する。

B21 AUTO ADJUST メニュー

B2 AUTO... メニューで AUTO ADJUST を選択すると表示 されます。

SET PROBE ON CURSOR が表示されます。

プローブをモニター画面の中央部に置くと調整が始まります。(自動調整には時間を要します。終了するまでお待ちください。)

調整を実行しない / 中止する場合

MENU ボタンを押します。

B3 COPY FROM...メニュー

色温度データのコピー元を選択します。

PRESET VALUE...: モニター内の他のデータをコピーします。**⇒**[B31]

OTHER MONITOR...:他のモニターのデータをコピー します。⇒ B32

MEMORY STICK…: "メモリースティック"内のファイルをコピーします。 ⇒ <u>B33</u>

B31 PRESET VALUE...メニュー

コピーするデータを選択します。

D93、D65、D61、USER1、USER2、USER3、USER4、USER5 から選択します。

D93: D93 の色温度をコピーする。

D65: D65 の色温度をコピーする。

D61: D61 の色温度をコピーする。

USER1~5: USER1~5の色温度をコピーする。 D93、D65、D61 データが変更されている場合は、D93*、 D65*、D61* と表示されます。

B32 OTHER MONITOR... メニュー

コピー元に使うモニターの ID No. を指定します。

MONITOR ID...: ID No. を入力します。 ⇒ B321

NETWORK スイッチを PEER TO PEER に設定したときは選択できません。

B321 OTHER MONITOR... メニュー

コピーするデータを選択します。

D93、D65、D61、USER1、USER2、USER3、USER4、USER5 から選択します。

D93: D93 の色温度をコピーする。

D65: D65 の色温度をコピーする。

D61: D61 の色温度をコピーする。

USER1~5: USER1~5の色温度をコピーする。

D93、D65、D61 データが変更されている場合は、D93*、

D65*、D61* と表示されます。

B33 MEMORY STICK...メニュー

コピー元に使う"メモリースティック"内のファイルを選択します。

⇒[B331]

B331 MEMORY STICK メニュー

コピーするデータを選択します。

D93、D65、D61、USER1、USER2、USER3、USER4、USER5 から選択します。

D93: D93 の色温度をコピーする。

D65: D65 の色温度をコピーする。

D61: D61 の色温度をコピーする。

USER1 ~ 5: USER1 ~ 5 の色温度をコピーする。 D93、D65、D61 データが変更されている場合は、D93*、D65*、D61* と表示されます。

B4 RESTORE FACTORY DATA メニュー

色温度データを工場出荷時の設定値に戻します。 USER1 ~ 5 または工場出荷時の設定値のときは選択できません。

次のメッセージが表示されます。

RESTORE FACTORY DATA?

OK: リセットを実行する場合 ENTER (Ent) ボタンを押します。

CANCEL:リセットを実行しない場合 MENU ボタンを 押します。

B5 ANALYZE メニュー

BKM-14Lで測定した色度座標および輝度値が表示されます。

SET PROBE ON CURSOR

BKM-14L をモニターの画面の中央部に吸着します。 キャリブレーション終了後、BKM-14L は、ANALYZE 動 作が可能になります。

ANALYZE を実行しない場合

MENU ボタンを押します。

ご注意

- BKM-14Lのキャリブレーション前に、R、G、Bのビームをカットしたり、マーカーを表示させたりしないでください。BKM-14Lが検出されない可能性があります。
- ANALYZE 実行中は、BKM-14L を OPTION 端子から抜かないでください。万一、画面上に何も表示されなくなった場合は、MENU ボタンを押してください。COLOR TEMP ADJ メニューに戻ることができます。



© 入力チャンネルの設定 - INPUT CONFIGURATION メニュー



概要

入力信号に関する各種データを設定するメニューです。 入力データはチャンネルごとに設定します。まず数値ボタンを使ってチャンネル番号($1\sim30$)を指定し、その後、INPUT CONFIGURATION メニューで以下のデータを設定します。

- 信号の種類を指定する (FORMAT... メニュー)
- スロット番号を指定する (SLOT NO メニュー)
- 入力端子番号を指定する(INPUT NO メニュー)
- 画像のアスペクト比を設定する (SCREEN ASPECT メニュー)
- スキャンサイズを選択する (SCAN SIZE メニュー)
- 同期信号を選択する (SYNC MODE メニュー)
- 色温度を設定する (COLOR TEMP メニュー)
- 画像調整のプリセットを選択する(PICTURE PRESET メニュー)
- マトリクスを設定する(MATRIX...メニュー)
- アパーチャー補正の有無を選択する(APERTURE メニュー)
- アパーチャー補正量を指定する(VALUE メニュー)
- Y/C 分離フィルターを選択する(YC SEP メニュー)
- NTSC COMB フィルタを設定する(NTSC COMB FILTER メニュー)
- マーカーの表示の有無を選択する(MARKER DISPLAY メニュー)
- マーカーの表示モードを選択する (MODE... メニュー)
- 画面の水平方向の位置を調整する(H PHASE メニュー)
- チャンネル名をつける (CHANNEL NAME... メニュー)
- 他のデータをコピーする (COPY FROM... メニュー)

80~89 チャンネルの割り当て

80~89のチャンネル番号は内蔵信号の信号システム切り換え用に割り当てられています。

 $80 \sim 89$ チャンネルの選択は、 $91 \sim 97$ チャンネルの選択後のみ有効となり、選択された信号システムの内蔵信号が出力されます。

080 : 575/50I 081 : 480/60I 082 : 1080/48I 083: 1080/50I 084: 576/50P 085: 480/60P 086: 1080/60I 087: 1035/60I 088: 720/50P 089: 720/60P

91~97 チャンネルの割り当て

91~97のチャンネル番号は内蔵信号に割り当てられています。最後に選択されていた信号システムの内蔵信号が表示されます。電源 ON のとき、内蔵信号で出画した場合、信号システムは 480/60I となります。

091: プルージ信号092: 20%グレー信号093: 100%白信号

094:5段階グレースケール信号

095:クロスハッチ信号

096: ドット信号 097: 0%黒信号

スロット番号、入力番号の割り付け

現在のチャンネルを、どのスロットに割り付けるかを設定 します。

スロット番号は次のようになります。

OPTION1 (モニター外側のスロット) OPTION2

OPTION3(モニター中央のスロット)

入力番号は次のようになります。

BKM-61D が取り付けられているとき(SDI D1、SDI D1/D2 AUTO、SDI D2 NTSC、SDI D2 PAL 信号のとき): DIGITAL1 または2

BKM-61D が取り付けられているとき (COMPOSITE AUTO、NTSC、PAL、PAL-M、SECAM 信号などのアナログコンポジット信号のとき): COMPOSITE1、2または3

BKM-62HS が取り付けられているとき (SDI HD/D1 AUTO、HD-SDI、SDI D1 信号のとき): DIGITAL1 または 2

ご注意

FORMAT... が次の場合は入力信号を選択することはできません。

- BKM-61D が取り付けられていて Analog Y/C 信号のとき
- BKM-62HS が取り付けられていて Dual Link HD-SDI 信号 のとき
- BKM-68X が取り付けられていて Analog Component また は Analog RGB 信号のとき

INPUT CONFIGURATION メニューの階層構造

第1層	第2層	第3層
CHxx		
FORMAT C1	SDI/HD-SDI C11	
	DUAL LINK HD-SDI	
	C12	
	COMPOSITE C13	
	YC C14	
	COMPONENT C15	
SLOT NO		
INPUT NO		
SCREEN ASPECT		
SCAN SIZE		
SYNC MODE		
COLOR TEMP		
PICTURE		
PRESET		
MATRIX C2		
APERTURE		
VALUE		
YC SEP		
NTSC COMB		
FILTER		
MARKER		
DISPLAY		
MODE C3		
H PHASE		
CHANNEL		
NAME C4		
COPY FROM C5	OTHER CH C51	
	OTHER MONITOR C52	OTHER
		MONITOR C521
	MEMORY STICK C53	MEMORY STICK
		C531

構成メニュー

以下に、メニュー番号順に構成メニューを説明します。

メニューの見かた

- 本書では各メニューに付けた番号 (例: A11) は、画面に は表示されません。
 - ◆ 詳しくは「メニュー番号について」 (29ページ) をご覧くだ さい。
- 「➡」は、設定操作後の移行先メニューの番号を示します。「➡」を記していない場合は、そこで設定操作が完了します。

© INPUT CONFIGURATION メニュー

INPUT CONFIGURATION (1/2) メニューと INPUT CONFIGURATION (2/2) メニューがあります。 入力信号のデータをチャンネルごとに設定します。

INPUT CONFIGURATION (1/2) メニュー

CHxx:現在選択しているチャンネルが表示されます。 以下の設定は、そのチャンネルに入力される信号の データになります。

FORMAT...:信号の種類を選択します。⇒ [C1]

SLOT NO: オプションスロット番号 (OPTION1 \sim 3) を選択します。

INPUT NO:入力端子番号を選択します。

SCREEN ASPECT: アスペクト(16:9、4:3、LAST)を設定します。

16:9: アスペクト比を 16:9 に設定する。(工場出荷時の設定)

4:3: アスペクト比を 4:3 に設定する。

LAST:前回の設定を使用する。

SCAN SIZE:スキャンサイズ(NORMAL、UNDER、 LAST)を設定します。

NORMAL: オーバースキャンに設定する。(工場出 荷時の設定)

UNDER: アンダースキャンに設定する。

LAST:前回の設定を使用する。

SYNC MODE:同期信号(INT、EXT、LAST)を設定

INT:内部同期信号を使う。(工場出荷時の設定)

EXT:外部同期信号を使う。 LAST:前回の設定を使用する。

COLOR TEMP: 色温度(D93、D65、D61、USER1 ~ 5)を選択します。

D93、D65、D61 データが変更されている場合は、 D93*、D65*、D61* と表示されます。 PICTURE PRESET: 画像調整プリセット (PRESET1 ~ PRESET5) を選択します。(工場出荷時は PRESET1)

MATIRIX...: 信号システムごとのマトリクスを設定します。 **⇒**[C2]

INPUT CONFIGURATION (2/2) メニュー

APERTURE:アパーチャー補正をするかどうか (OFF、ON、LAST) を設定します。

OFF:アパーチャー補正をしない。(工場出荷時の設定)

ON: アパーチャー補正をする。**LAST**: 前回の設定を使用する。

VALUE: アパーチャー補正量 $(0 \sim 200)$ を入力します。 (工場出荷時は000)

YC SEP: Y/C 分離フィルターを選択します。

COMB: くし型フィルターを選択する。(工場出荷時の設定)

BPF/TRAP: BPF/TRAP を選択する。

NTSC COMB FILTER: NTSC COMB フィルタ(3 LINES、3D)を設定します。(工場出荷時は 3 LINES)

MARKER DISPLAY: マーカーを表示するかどうか (OFF、ON) を設定します。(工場出荷時は OFF)

MODE...: MARKER MODE メニューを表示します。 マーカーのアスペクトやセーフエリア、セーフタイト ルなどを設定します。**⇒**[C3]

H PHASE: 画面の水平方向の位置を調整 (- 100 ~ +100*) します。(工場出荷時は 000)

* 可変範囲を超えると、数値は変わりますが、画面の水平位置は変わりません。

CHANNEL NAME...: CHANNEL NAME メニューを表示します。チャンネル名を付けます。 **○**○**C4**

COPY FROM...: COPY FROM メニューを表示します。 他のチャンネルデータをコピーします。**□C5**

C1 FORMAT... メニュー

信号の種類を選択します。

SDI/HD-SDI...:シリアルデジタル信号 ⇒ C11

DUAL LINK HD-SDI...: デュアルリンクの HD-SDI 信号 ⇒ C12

COMPOSITE...: アナログコンポジット信号 **⇒**[C13]

YC...: アナログ Y/C 信号 ⇒ C14

COMPONENT...: アナログコンポーネントまたはアナログ RGB 信号 ➡[C15]

ご注意

対応する入力端子またはデコーダーがない場合は、選択できません(カーソルを合わせようとしてもスキップされます)。

[C11] SDI/HD-SDI... メニュー

シリアルデジタル信号のフォーマット(SDI またはシングルリンクの HD-SDI)を選択します。

HD-SDI/D1 AUTO: BKM-62HS 装着時に選択できます。

HD SDI: BKM-62HS 装着時に選択できます。

D1: BKM-61D、BKM-62HS 装着時に選択できます。 **D1/D2 AUTO**: BKM-61D 装着時に選択できます。

D2 NTSC: BKM-61D 装着時に選択できます。

D2 PAL: BKM-61D 装着時に選択できます。

NTSC SETUP LEVEL: NTSC セットアップレベル (0%、7.5%) を設定します。(工場出荷時は、BVM-A20F1M/A20F1A: 0%、BVM-A20F1U: 7.5%)

FILTER SW:画面を白黒表示に設定しているとき、Y/C 分離フィルタを動作させるかどうか(OFF、ON)を 設定します。(工場出荷時は OFF)

ACC SW: オートクロマコントロールの ON、OFF を設定します。(工場出荷時は OFF)

◆ HD-SDI、1125/60I 入力において、1080/60I、1035/60I の選択は 自動的に行われます。

C12 DUAL LINK HD-SDI... メニュー

HD-SDI の信号フォーマット(デュアルリンクの HD-SDI) を選択します。BKM-62HS 装着時に選択できます。

4:4:4 YPBPR

4:4:4 RGB

C13 COMPOSITE... メニュー

コンポジット信号のフォーマットを選択します。BKM-61D 装着時に選択できます。

AUTO: 入力された信号に応じて自動的に切り換えます。 フォーマットの自動切り換えは、フォーマットの判別 のため数秒かかることがあります。フォーマットが決 まっているときは、そのフォーマットに設定すること をおすすめします。

NTSC

PAL

PAL-M

SECAM

NTSC SETUP LEVEL: NTSC セットアップレベル (0%、7.5%) を設定します。(工場出荷時は、BVM-A20F1M/A20F1A: 0%、BVM-A20F1U: 7.5%)

FILTER SW:画面を白黒表示に設定しているとき、Y/C 分離フィルタを動作させるかどうか(OFF、ON)を 設定します。(工場出荷時は OFF)

ACC SW: オートクロマコントロールの ON、OFF を設定します。(工場出荷時は OFF)

[C14] YC... メニュー

Y/C 信号のフォーマットを選択します。BKM-61D 装着時 に選択できます。

AUTO: 入力された信号に応じて自動的に切り換えます。 フォーマットの自動切り換えは、フォーマットの判別 のため数秒かかることがあります。フォーマットが決 まっているときは、そのフォーマットに設定すること をおすすめします。

NTSC

PAL

PAL-M

SECAM

NTSC SETUP LEVEL: NTSC セットアップレベル (0%、7.5%) を設定します。(工場出荷時は、BVM-A20F1M/A20F1A: 0%、BVM-A20F1U: 7.5%)

ACC SW: オートクロマコントロールの ON、OFF を設定します。(工場出荷時は OFF)

C15 COMPONENT... メニュー

コンポーネント信号のフォーマットまたは RGB 信号のフォーマット(YPBPR または RGB)を選択します。BKM-68X 装着時に選択できます。

COMPONENT LEVEL: COMPONENT レベル (SMPTE/EBU-N10、BETACAM) を設定します。 (工場出荷時は SMPTE/EBU-N10)

BETACAM SETUP LEVEL: BETACAM セットアップ レベル (0%、7.5%) を設定します。(工場出荷時は、 BVM-A20F1M/A20F1A: 0%、BVM-A20F1U: 7.5%) 1125/60I SYSTEM: 1125/60I 入力時の有効走査 線(1080I(有効走査線 1080 ライン)、1035I(有効走 査線 1035 ライン)) の設定をします。(工場出荷時は 1080I)

C2 MATIRIX...メニュー

信号システムごとに使用するマトリクスを設定します。

1080/720:1080I、720Pのマトリクスデータを設定します。(工場出荷時はITU709)

1035:1035Iのマトリクスデータを設定します。(工場 出荷時は SMPTE 240M) **480/576**: 480I、480P、575I、576P のマトリクスデータを設定します。(工場出荷時は ITU601)

それぞれ ITU601、SMPTE 240M、ITU709 または USER1 ~5 を選択することができます。

ITU601、SMPTE 240M、ITU709 データが変更されている場合はITU601*、SMPTE 240M*、ITU709*と表示されます。

ご注意

[C1] FORMATメニューで設定している信号フォーマットが 4:4:4 RGB または RGB のとき、MATRIX メニューは選択で きません。

「C3] MODE... メニュー

マーカーのアスペクトやセーフエリア、セーフタイトルなどを設定します。入力信号に同期信号が無い場合、または内蔵信号が使われている場合は、選択することができません。

MARKER MODE (1/3) メニュー

マーカーのアスペクトモードやアスペクトマーカー、ブラ ンキングなどの設定をします。

ASPECT MODE:マーカーのアスペクト比を設定します。

16:9、15:9、14:9、13:9、4:3、2.39:1、2.35:1、1.85:1、1.66:1、VARIABLE から選択することができます。 (工場出荷時は 16:9)

ASPECT: ASPECT MODE で VARIABLE を選択した とき設定します。

1.00~3.00に設定できます。(工場出荷時は1.78)

H POSITION:マーカーの水平方向の表示位置を設定します。

- 100~+100に設定できます。(工場出荷時は000)

MARKER BRIGHT:マーカーの輝度を設定します。

90IRE または 40IRE に設定できます。 (工場出荷時は 90IRE)

このメニューで設定したデータは全チャンネル共通に 適用されます。

ASPECT MARKER: アスペクトマーカーを表示するかどうかを設定します。

OFF (表示しない) または ON (表示する) に設定します。(工場出荷時は OFF)

LINE: ASPECT MARKER の設定が ON のときアスペクトマーカーのラインの太さを設定します。

THICK (太い線) または THIN (細い線) に設定できます。(工場出荷時は THICK)

COLOR: ASPECT MARKER の設定が ON のときアスペクトマーカーの色を設定します。

WHITE (白)、RED (赤)、GREEN (緑)、BLUE (青)、YELLOW (黄)、CYAN (シアン)、MAGENTA (マゼンタ) から選択することができます。(工場出荷時は WHITE)

ASPECT BLANKING:エリア外のブランキングを選択します。

OFF(ブランキングを解除する)または ON(ブランキングする)に設定します(工場出荷時は OFF)。

MODE: ASPECT BLANKING の設定が ON のときブランキングのモードを設定します。

BLACK (ブランキング) または HALF (ハーフブランキング) に設定できます。(工場出荷時は HALF)

MARKER MODE (2/3) メニュー

セーフエリアマーカーやセンターマーカーの設定をします。

SAFE AREA MARKER: セーフエリアの表示モードを 設定します。

OFF (表示しない) または ON (表示する) に設定します。(工場出荷時は ON)

MODE: SAFE AREA MARKER の設定が ON のとき、 SAFE AREA MARKER の形を選択します。

SHAPE A、SHAPE B、SHAPE C から選択します。 (工場出荷時は SHAPE A)

SHAPE A		
SHAPE B		
	L	
SHAPE C	_	

AREA SIZE: SAFE AREA MARKER の設定が ON のとき、セーフエリアモードのサイズを設定します。 80%、88%、90%、93%、VARIABLE から選択することができます。 (工場出荷時は80%)

WIDTH: AREA SIZE で VARIABLE を選択したとき、 セーフエリアマーカーの幅を設定します。

050~100(%)に設定できます。(工場出荷時は080)

HEIGHT: AREA SIZE で VARIABLE を選択したとき、 セーフエリアマーカーの高さを設定します。 $050 \sim 100$ (%) に設定できます。(工場出荷時は 080) **CENTER MARKER**: センターマーカーの表示モードを 設定します。

OFF (表示しない) または ON (表示する) に設定します。(工場出荷時は OFF)


MODE: CENTER MARKER の設定が ON のとき、センターマーカーの種類を選択します。

SHORT (短い) または LONG (長い) に設定できます。(工場出荷時は SHORT)

ご注意

セーフエリアの大きさは、ASPECT MODE、16:9 ボタンの ON/OFF の状態により異なります。

例: セーフエリアサイズが 80%、ASPECT MODE が 16:9、4:3 のとき

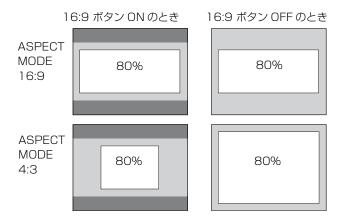

MARKER MODE (3/3) メニュー

セーフタイトルの項目を設定します。

SAFE TITLE DISPLAY: セーフタイトルの表示モードを設定します。

OFF (表示しない) または ON (表示する) に設定します。(工場出荷時は ON)

WIDTH: SAFE TITLE DISPLAY の設定が ON のとき、 セーフタイトルの幅を設定します。

005~050(%)に設定できます。(工場出荷時は020)

HEIGHT: SAFE TITLE DISPLAY の設定が ON のとき、セーフタイトルの高さを設定します。

005~050(%)に設定できます。(工場出荷時は010)

H POSITION: SAFE TITLE DISPLAY の設定が ON の とき、セーフタイトルの水平方向の表示位置を設定します。

000~100(%)に設定できます。(工場出荷時は015)

V POSITION: SAFE TITLE DISPLAY の設定が ON の ときセーフタイトルの垂直方向の表示位置を設定します。

000~100(%)に設定できます。(工場出荷時は015)

C4 CHANNEL NAME...メニュー

チャンネル名を付けます。デフォルトの名前から選択する か新規に入力します。

PROG: プログラム送出信号

EDIT:編集機からの信号 CAM: カメラからの信号 VTR: VTR からの信号

PREV: プレビューモニター

NEW NAME: 新規の名前を入力する(20 文字まで入力 可能、ただし INPUT CONFIGURATION メニューで

は先頭の8文字までが表示されます)。

C5 COPY FROM メニュー

コピー元を選択します。

OTHER CH...: モニター内の他のデータをコピーしま す。**⇒**C51

OTHER MONITOR...: 他のモニターのデータをコピー します。**⇒**[C52]

MEMORY STICK...: "メモリースティック"内のファイ ルを選択し、そのデータをコピーします。 **⇒** C53

C51 OTHER CH... メニュー

コピー元に使うチャンネル番号を指定します。

CH NO:チャンネル番号を入力します。

C52 OTHER MONITOR... メニュー

コピー元に使うモニターの ID No. を指定します。

MONITOR ID: ID No. を入力します。⇒ C521

NETWORK スイッチを PEER TO PEER に設定したときは 選択できません。

C521 OTHER MONITOR メニュー

選択したモニターのどのチャンネルをコピー元にするか指 定します。

CH NO:チャンネル番号を入力します。

C53 MEMORY STICK... メニュー

コピー元に使う"メモリースティック"内のファイルを選 択します。**⇒**[C531]

[C531] MEMORY STICK メニュー

指定したファイルのどのチャンネルをコピー元にするか指 定します。

CH NO:チャンネル番号を入力します。

□ システムの設定 - SYSTEM CONFIGURATION メニュー

概要

ネットワークやパラレルリモートコントロール機能などシ ステムに関する設定をするメニューです。

以下のデータを設定します。

- ネットワークによるリモートコントロール機能を設定す る(NETWORK...メニュー)
- パラレルリモートコントロール機能の設定をする (PARALLEL REMOTE... メニュー)
- 主電源や MONITOR I/() スイッチを入れたときのモニ ターの状態を設定をする(POWER...メニュー)
- ブランキング関連の設定をする (BLANKING SETTINGS...メニュー)
- 画面に表示させる情報を設定する(ON SCREEN SET... メニュー)
- パスワードの変更や割り付けを設定する (PASSWORD...メニュー)
- メインテナンス用の設定をする(MAINTENANCE... メ ニュー)



SYSTEM CONFIGURATION メ ニューの階層構造

第1層	第2層	第3層
NETWORK D1	MONITOR ID	
	GROUP ID	
	NETWORK	
	SETTINGS D11	
	NETWORK SW	
	SNMP SETTINGS	
	D12	
PARALLEL REMOTE	PARALLEL	
D2	REMOTE	
	1 PIN ∼ 8 PIN	PARALLEL
	D21	REMOTE D211
POWER D3	STANDBY MODE	
	POWER ON	
	STATUS	
	DEFAULT CH	
	DEGAUSS DELAY	
BLANKING	ANCILLARY	
SETTINGS D4	DATA	
	VITS BLK	
ON SCREEN SET D5	FORMAT	
	DISPLAY	
	POSITION	
	CH NO	
	POSITION	
	CH NAME	
	POSITION	
PASSWORD D6	CHANGE	CHANGE
	PASSWORD D61	PASSWORD D611
	APPLY	APPLY
	PASSWORD D62	PASSWORD D621
MAINTENANCE D7		

構成メニュー

以下に、メニュー番号順に構成メニューを説明します。

メニューの見かた

- 本書では各メニューに付けた番号 (例: A11) は、画面に は表示されません。
- ◆ 詳しくは「メニュー番号について」(29ページ)をご覧ください。
- 「➡」は、設定操作後の移行先メニューの番号を示します。「➡」を記していない場合は、そこで設定操作が完了します。

□ SYSTEM CONFIGURATION メニュー

NETWORK...: ネットワークによるリモートコントロール機能を設定します。 ⇒ [Dī]

PARALLEL REMOTE...: パラレルリモートコントロール機能の設定をします。 ⇒ [D2]

POWER...: 主電源を入れたり、外部操作により電源を入れたときのモニターの状態を設定します。 ⇒ [D3]

BLANKING SETTINGS...: ブランキングに関連する設定をします。**□**[04]

ON SCREEN SET...: 画面に表示させる情報を設定します。➡D5

PASSWORD...: パスワードの変更や割り付けを設定します。 **⇒** [D6]

MAINTENANCE...: メインテナンス用の設定をします。 **□**プ

D1 NETWORK...メニュー

MONITOR ID: モニター ID No. を入力します。 $01 \sim 99$ (工場出荷時は 01) から選択します。

GROUP ID: グループ ID No. を入力します。 $01 \sim 99$ (工場出荷時は 01) から選択します。

NETWORK SETTINGS...: IP アドレス、サブネットマスク、デフォルトゲートウェイを設定します。

□>□11

NETWORK SW: NETWORK スイッチの設定状態 (LAN、PEER TO PEER) を表示します。

SNMP SETTINGS...: CONTACT、NAME、 LOCATION、TRAPを設定します。⇒ [D12]

D11 NETWORK SETTINGS... メニュー

IP ADDRESS: IP アドレスを設定します。(工場出荷時は「192.168.000.001」)

SUBNET MASK: サブネットマスクを設定します。(工 場出荷時は「255.255.255.000」)

DEFAULT GATEWAY: デフォルトゲートウェイを設定するかどうか (OFF、ON) を選択します。(工場出荷時は OFF)

ADDRESS: デフォルトゲートウェイを設定します。 (工場出荷時は「------(無設定)」)

CANCEL:変更、確定された設定を変更前に戻します。 CONFIRM:変更、確定された設定を保存、反映します。

ご注意

NETWORK スイッチを PEER TO PEER に設定した場合、IP アドレスは、表示にかかわらず「192.168.000.001」に固定されます。

NETWORK スイッチを LAN に設定すると、表示された IP アドレスが有効となります。

D12 SNMP SETTINGS... メニュー

CONTACT メニュー:管理責任者の情報を設定します。 **NEW NAME**:新規の名前を入力する(20 文字まで)。 使用できる記号は「(」「)」「.」「-」「+」「/」 「%」「*」「#」「_」「\$」「(スペース)」の 12 種類で す。

NAME メニュー:管理用の情報(デバイス ID)を設定 します。

NEW NAME: 新規の名前を入力する (20 文字まで)。 使用できる記号は「(」「)」「.」「-」「+」「/」 「%」「*」「#」「_」「\$」「(スペース)」の 12 種類で す。

LOCATION メニュー: 設置場所の情報を設定します。 **NEW NAME**: 新規の名前を入力する (20 文字まで)。
使用できる記号は「(」「)」「.」「-」「+」「/」
「%」「*」「#」「_」「\$」「(スペース)」の 12 種類です。

TRAP メニュー:情報の送信先を設定します。TRAP1 と TRAP2 の 2 か所の設定ができます。

TRAP1: IP アドレスを設定します。(工場出荷時は 「000.000.000.000」)

TRAP2: IP アドレスを設定します。(工場出荷時は「000.000.000.000 l)

CANCEL:変更、確定された設定を変更前の値に戻します。

CONFIRM:変更、確定された設定を保存、反映します。

D2 PARALLEL REMOTE... メニュー

PARALLEL REMOTE: パラレルリモートを使用するか どうか (ON、OFF) を設定します。(工場出荷時は OFF)

1 PIN...~8 PIN...: PARALLEL REMOTE を ON に設定したときのパラレルリモート端子の各ピンへの機能を割り付けます。⇒ [D21]

D21 1 PIN... ~ 8 PIN... メニュー

選択したピンに機能を割り付けます。

□ D211

各ピンの工場出荷時の設定

1 PIN: CH01

2 PIN: CH02

3 PIN: EXT SYNC

4 PIN: MONO

5 PIN: MARKER

6 PIN: 未設定

7 PIN: 未設定

8 PIN: TALLY

D211 PARALLEL REMOTE メニュー

PARALLEL REMOTE (1/2) メニュー

CH01 ~ 30: チャンネル番号の割り付け。割り付けたいチャンネル番号を入力します。

----: 未設定

UNDER SCAN: アンダースキャンするかどうかの選択

16:9: アスペクト比を 16:9 にするかどうかの選択

H DELAY:水平同期信号を表示するかどうかの選択

V DELAY:垂直同期信号を表示するかどうかの選択

EXT SYNC:外部同期信号に同期するかどうかの選択

COMB: くし形フィルターを使用するかどうかの選択 **APERTURE**: アパーチャー補正をするかどうかの選択

MONO: 白黒画像にするかどうかの選択

PARALLEL REMOTE (2/2) メニュー

BLUE ONLY: 青信号のみを表示する(白黒表示) かど うかの選択

ROFF:赤のビームをカットするかどうかの選択

G OFF:緑のビームをカットするかどうかの選択

BOFF: 青のビームをカットするかどうかの選択

CHROMA UP: クロマを 12 dB アップするかどうかの選 _択

MARKER:チャンネルで設定したマーカーを表示するか どうかの選択

TALLY: タリーランプを ON/OFF するかどうかの選択

DEGAUSS:デガウス動作を実行するかどうかの選択 POWER OFF:モニターの電源を入/スタンバイ状態に

するかどうかの選択

◆ ピン接続については、「各部の名称と働き」の PARALLEL REMOTE 端子(14ページ)についての説明をご覧ください。



D3 POWER...メニュー

主電源を入れたり、外部操作により電源を入れたときのモニターの状態を設定します。

STANDBY MODE: MAIN POWER スイッチを ON に したときの状態 (ON、OFF) を選択します。

OFF: 直ちに動作状態になります。(工場出荷時の設定)

ON:スタンバイ状態になります。

POWER ON STATUS: 電源投入時のチャンネル設定状態 (LAST、CH) を選択します。

LAST:前回電源を OFF にする直前のチャンネル設 定になります。(工場出荷時の設定)

CH: 指定したチャンネル設定となります。

DEFAULT CH: POWER ON STATUS を CH に設定したとき指定チャンネル $(01 \sim 30)$ を選択します。(工場出荷時は 01)

DEGAUSS DELAY: ほぼ出画した状態からデガウスを 開始するまでの時間 (000 ~ 255) を指定する。希望 の時間(秒)を入力します。(工場出荷時は 000)

D4 BLANKING SETTINGS...メニュー

ブランキングに関連する設定をします。

ANCILLARY DATA: シリアルデジタル信号内の補助 データを表示するかどうか (OFF、ON) を選択しま す。(工場出荷時は ON)

VITS BLK: VITS 信号が画面上部に見えないようにする ため、垂直方向ブランキングを設定します。

000~127の範囲で設定します。(工場出荷時は000)



D5 ON SCREEN SET... メニュー

画面に表示する項目を選択します。

FORMAT DISPLAY: 信号システムの表示方法を選択します。

AUTO:一定時間表示後、自動的に消える。(工場出 荷時の設定)

ON: 常に表示される。 **OFF**: 表示されない。

POSITION:信号システムの表示位置を選択します。

TOP LEFT: 左上 TOP CENTER: 中央上 TOP RIGHT: 右上

BOTTOM LEFT: 左下(工場出荷時の設定)

BOTTOM CENTER: 中央下 BOTTOM RIGHT: 右下 CH NO:チャンネル番号の表示方法を選択します。

AUTO:一定時間表示後、自動的に消える。(工場出

荷時の設定)

ON: 常に表示される。 **OFF**: 表示されない。

POSITION: チャンネル番号の表示位置を選択します。

TOP LEFT: 左上 TOP CENTER: 中央上

TOP RIGHT: 右上(工場出荷時の設定)

BOTTOM LEFT:左下 BOTTOM CENTER:中央下 BOTTOM RIGHT:右下

CH NAME: チャンネル名の表示方法を選択します。

AUTO:一定時間表示後、自動的に消える。(工場出

荷時の設定)

ON: 常に表示される。 **OFF**: 表示されない。

POSITION: チャンネル名の表示位置を選択します。

TOP LEFT: 左上(工場出荷時の設定)

TOP CENTER: 中央上 TOP RIGHT: 右上 BOTTOM LEFT: 左下 BOTTOM CENTER: 中央下 BOTTOM RIGHT: 右下

D6 PASSWORD...

パスワードの変更や割り付けを設定します。 文字数は4文字で工場出荷時は「9999」に設定されています。

CHANGE PASSWORD...:新しいパスワードを入力します。**□**D61

APPLY PASSWORD...: メニューリストの各項目でパ スワードの確認をするかどうかを設定します。

□ D62

D61 CHANGE PASSWORD... メニュー

パスワードを変更します。

ENTER NEW PASSWORD:新しいパスワードを数字 ボタンで入力し、ENTER ボタンを押します。

⇒D611

D611 CHANGE PASSWORD メニュー

新しいパスワードを入力します。

RE-ENTER PASSWORD:確認のために作成したパスワードを再度入力して ENTER ボタンを押します。パ

スワードが登録されます。

修正するときは MENU ボタンを押します。

D62 APPLY PASSWORD...メニュー

各メニューでパスワードを有効にするかどうかを設定しま す。

PICTURE ADJ: YES または NO を選択します。 **COLOR TEMP ADJ**: YES または NO を選択します。 **INPUT CONFIGURATION**: YES または NO を選択し ます。

SYSTEM CONFIGURATION: YES または NO を選択

INDIVIDUAL ITEMS...: SYSTEM CONFIGURATION メニューの各項目を表示します。 ⇒ D621

INSTALLATION SETTINGS: YES または NO を選択 します。

FILE MANAGEMENT: YES または NO を選択します。 **CONTROLLER**: YES または NO を選択します。

KEY PROTECT: YES または NO を選択します。

D621 APPLY PASSWORD メニュー

SYSTEM CONFIGURATION メニューの各項目でパスワー ドを有効にするかどうかを設定します。

NETWORK: YES または NO を選択します。

PARALLEL REMOTE: YES または NO を選択します。

POWER: YES または NO を選択します。

BLANKING SETTINGS: YES または NO を選択しま す。

ON SCREEN SET: YES または NO を選択します。

D7 MAINTENANCE...メニュー

サービス担当者用のメインテナンス用メニューが表示され ます。

国設置調整 - INSTALLATION SETTINGS メニュー

概要

ランディング、画像の歪みなどの設置調整をするためのメ ニューです。

次の調整を実行できます。

- 地磁気の影響によるビームランディングのずれを補正す る (LANDING ADJUST... メニュー)
- 画像の位置やサイズ、コンバージェンスを調整する (ALIGNMENT... メニュー)
- CRT の色むらを調整する(DIGITAL UNIFORMITY ADJ... メニュー)

ご注意

ビームランディング調整を行ってから、デジタルユニ フォーミティ調整を行ってください。



INSTALLATION SETTINGS メ ニューの階層構造

第1層	第2層	第3層
LANDING	NS	
ADJUST E1	RESTORE FACTORY	
	DATA E11	
ALIGNMENT [E2]	ROTATION	
	H PHASE	
	V CENTER	
	H SIZE	
	V SIZE	
	SUB CONTRAST	
	H PIN	
	H PIN BAL	
	H CORNER PIN	
	H CORNER S	
	Н КЕҮ	
	H KEY BAL	
	V STATIC CONV	
	V CONV TOP	
	V CONV BOT	
	H STATIC CONV	
	RESTORE FACTORY	
	DATA	
DIGITAL	MANUAL [E31]	MANUAL ADJUST
UNIFORMITY		E311
ADJ E3		CURSOR H SIZE
		V SIZE
	AUTO FULL POINTS	
	ADJ E32	
	AUTO ONE POINT	
	ADJ E33	
	SIGNAL	
	RESTORE FACTORY	
	DATA	

構成メニュー

以下に、メニュー番号順に構成メニューを説明します。

メニューの見かた

- 本書では各メニューに付けた番号 (例: A11) は、画面に は表示されません。
- ◆ 詳しくは「メニュー番号について」(29ページ)をご覧ください。

• 「➡」は、設定操作後の移行先メニューの番号を示します。「➡」を記していない場合は、そこで設定操作が完了します。

INSTALLATION SETTINGS メニュー

LANDING ADJUST...: 地磁気の影響によるビームランディングのずれを調整します。 ⇒ [E1]

ALIGNMENT...:画像の位置やサイズ、コンバージェンスを調整します。⇒ [E2]

DIGITAL UNIFORMITY ADJ...: デジタルユニフォミティの調整をします。 ⇒ **E**3

E1 LANDING ADJUST... メニュー

地磁気の影響によるビームランディングのずれを調整します。

NS:画面の中央部上下のビームランディングのずれを調整します。

RESTORE FACTORY DATA: 工場出荷時の設定値に 戻します。 ⇒ [E11]

E11 RESTORE FACTORY DATA メニュー

設置調整を工場出荷時の設定値に戻します。 次のメッセージが表示されます。

RESTORE FACTORY DATA?

OK:工場出荷時の設定値に戻す場合は ENTER (Ent) ボタンを押します。

CANCEL:工場出荷時の設定値に戻さない場合は MENU ボタンを押します。

E2 ALIGNMENT...メニュー


UP/DOWN ボタンまたは PHASE つまみを使って、画像の 位置やサイズ、ひずみ、コンバージェンスなどを調整しま す。

ALIGNMENT (1/3) メニュー

現在モニターしている信号システム、アスペクト、スキャンサイズの画像の位置やサイズを調整します。

ROTATION: モニターを北向きまたは、南向きに設置したときの画面の回転を補正します。 このデータはすべての信号システム、アスペクト、ス

キャンサイズ共通に適用されます。

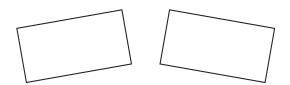

H PHASE:画像の水平位置を調整します。





V CENTER:画像の垂直位置を調整します。






H SIZE:画像の幅を調整します。





V SIZE:画像の高さを調整します。



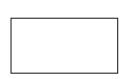

SUB CONTRAST:画像の大きさや信号システムを変更 したときのコントラストのセンター値を調整します。

ALIGNMENT (2/3) メニュー


画ひずみを調整します。

H PIN:画面の両端の縦線が直線になるように調整しま






H PIN BAL:画面の両端の縦線が直線になるように左右 のバランスを調整します。

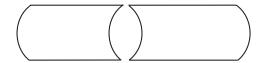



H CORNER PIN:画面の両端の縦線が直線になるよう に調整します。

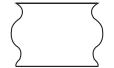





H CORNER S: 画面の両端の縦線が直線になるように調 整します。

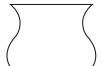

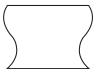

H KEY:画面の台形歪みを調整します。

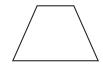

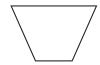

HKEY BAL:画面の台形歪みの左右のバランスを調整し ます。





ALIGNMENT (3/3) メニュー

コンバージェンスを調整します。

V STATIC CONV:画面全体の垂直コンバージェンスを 調整します。

V CONV TOP: 画面の上部の垂直コンバージェンスを調 整します。

V CONV BOT: 画面の下部の垂直コンバージェンスを調

H STATIC CONV:画面全体の水平コンバージェンスを 調整します。

RESTORE FACTORY DATA: 現在モニターしている信 号システム、アスペクト、スキャンサイズの ALIGNMENT データを工場出荷時の設定値に戻しま

次のメッセージが表示されます。

RESTORE FACTORY DATA?

OK: 工場出荷時の設定値に戻す場合は ENTER (Ent) ボタンを押します。

CANCEL: 工場出荷時の設定値に戻さない場合は MENU ボタンを押します。

E3 DIGITAL UNIFORMITY ADJ...メニュー

CRT の色むらを調整します。

調整される信号システム、アスペクト、スキャンサイズが 上部に表示されます。

MANUAL...: MANUAL つまみで調整します。 ⇒ E31

AUTO FULL POINTS ADJ: SONY 製プローブ BKM-14L を使って、画面の全領域を順番に自動調整します。 ⇒ [E32]

AUTO ONE POINT ADJ: SONY 製プローブ BKM-14L を使って、選択した調整ポイントだけを調整します。
⇒ [E33]

SIGNAL:調整に使う白色信号を選択します(工場出荷 時は EXT)。

EXT:外部入力信号を使います。調整に使う信号を入力します。

INT: 内蔵の白色信号を使います。

RESTORE FACTORY DATA: 現在モニターしている信号システム、アスペクト、スキャンサイズの

DIGITAL UNIFORMITY データを工場出荷時の設定値に戻します。

次のメッセージが表示されます。

RESTORE FACTORY DATA?

OK: 工場出荷時の設定値に戻す場合は ENTER (Ent) ボタンを押します。

CANCEL:工場出荷時の設定値に戻さない場合は MENU ボタンを押します。

E31 MANUAL... メニュー

MANUALつまみでR、G、Bのゲインを調整します。

MANUAL ADJUST: ゲイン調整を実行します。

➡ [E311] (次の画面が表示されるまで、時間がかかる ことがあります。)

CURSOR H SIZE: 水平方向のカーソルサイズ (1 \sim 5) を設定します。

V SIZE: 垂直方向のカーソルサイズ $(1 \sim 5)$ を設定します。


各項目の調整に使うつまみやボタン

RED: CONTRAST KNOB (CONTRAST つまみで R のゲインを調整する。)

GREEN: BRIGHT KNOB (BRIGHT つまみで G のゲインを調整する。)

BLUE: CHROMA KNOB (CHROMA つまみで B のゲインを調整する。)

CURSOR POSITION: 10KEY (数値ボタン (5 ボタン 以外) でカーソルの位置を下図の矢印の方向に移動する。5 ボタンでカーソルを ON/OFF する。)

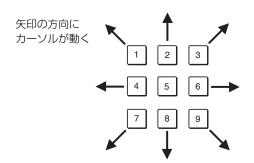

LUMINANCE: PHASE KNOB (PHASE つまみで輝度 を調整する。)

E311 MANUAL ADJUST メニュー

カーソル位置のゲインを CONTRAST (RED)、BRIGHT (GREEN)、CHROMA (BLUE)、PHASE (LUMINANCE) つまみで調整します。カーソルの移動は数値ボタンで行います。

RED/GREEN/BLUE を調整前の値に戻すには

RED/GREEN/BLUE 調整時、対応する MANUAL 調整ボタンを押すと調整前の値に戻ります。

途中で中止するには

MENU ボタンを押します。調整したデータがキャンセルされ、MANUAL... メニュー [E31] に戻ります。(前の画面が表示されるまで、時間がかかることがあります。)

調整データを確定するには

ENTER (Ent) ボタンを押します。

マニュアル調整時、画面の表示文字を消したい場合は

CHAR OFF ボタンを押します。画面から表示が消え、調整 しやすくなります。文字を表示させるには、再度 CHAR OFF ボタンを押します。

E32 AUTO FULL POINTS ADJ メニュー

SONY 製プローブ BKM-14L を使って、画面の全領域を順番に自動調整します。

AUTO FULL POINTS ADJ メニューに入る前に、BKM-14L を OPTION 端子に接続してください。

以下のメッセージが表示されます。(次の画面が表示される まで、時間がかかることがあります。)

SET PROBE ON CURSOR

次の手順でBKM-14Lを操作し、調整を行ってください。

① 画面中央のカーソルに BKM-14L を当てる。

調整が始まります。調整が終了すると、次の調整ポイントにカーソルが表示されます。

② BKM-14L をカーソルの位置に移動する。

調整が実行されます。

同様に、カーソルが表示される調整ポイントを順番に調整 します。

すべての調整が終了すると、自動的に INSTALLATION SETTINGS メニューに戻ります。

途中で中止するには

MENU ボタンを押します。調整したデータがキャンセルされ、DIGITAL UNIFORMITY ADJ... メニューに戻ります。(前の画面に戻るまで、時間がかかることがあります。)

BKM-14L をカーソルに当てないと

次のメッセージが表示され、カーソルが左右交互に移動し ます。

DO YOU WISH TO CANCEL?

CANCEL: LEFT CURSOR

CONTINUE: RIGHT CURSOR

調整を中断するときは、左側のカーソルに BKM-14L を当てます。

DIGITAL UNIFORMITY ADJ... メニューに戻ります。 調整を継続するときは、右側のカーソルに BKM-14L を当て ます。

AUTO FULL POINTS ADJ メニューに戻ります。

E33 AUTO ONE POINT ADJ メニュー

SONY 製プローブ BKM-14L を使って、選択した調整ポイントだけを調整します。

AUTO ONE POINT ADJ メニューに入る前に、BKM-14L を OPTION 端子に接続してください。

画面中央部にカーソルが点滅します。

各項目の調整に使うつまみやボタン

CURSOR POSITION: 10KEY: 数値ボタン(5 ボタン 以外)でカーソルの位置を移動する。5 ボタンでカーソル を ON/OFF する。

TO CANCEL: MENU KEY: MENU ボタンを押すと調整したデータをキャンセルして前の画面に戻る。

TO CONFIRM: ENTER KEY: ENTER (Ent) ボタン を押すと調整データが確定する。

次の手順でBKM-14Lを操作し、調整を行ってください。

① 数値ボタン(5 ボタン以外)でカーソルを希望のポイントへ移動し、ENTER(Ent)ボタンを押す。

以下のメッセージが表示され、カーソルが中央に戻り ます。

SET PROBE ON CURSOR

ご注意

カーソルを移動せずに ENTER (Ent) キーを押すと DIGITAL UNIFORMITY ADJ...メニュー に戻ります。

- ② 画面中央のカーソルに BKM-14L を当てる。 画面中央部の調整が始まります。調整実行中は IN PROGRESS と表示され、調整が終了すると、① で移 動した位置にカーソルが戻ります。
- ③ BKM-14L をカーソルの位置に移動する。 カーソル位置の調整が実行されます。調整実行中は IN PROGRESS と表示され、指定した位置の調整が終 了すると、カーソルが点滅します。

別のポイントを調整するときは

数値ボタン(5 ボタン以外)で希望の調整ポイントへカーソルを移動し、ENTER(Ent)ボタンを押します。その後、BKM-14L をカーソルの位置に移動すると調整が実行されます。

この手順を繰り返して、希望の調整ポイントの調整を行います。

調整を終了するには

指定した位置の調整終了後、数値ボタンを操作せずに ENTER (Ent) ボタンを押します。調整したデータが保存され、INSTALLATION SETTINGS メニューに戻ります。 (前の画面に戻るまで、時間がかかることがあります。)

ご注意

数値ボタンを操作してから ENTER (Ent) ボタンを押すと、調整が開始されてしまいます。

途中で中止するには

MENU ボタンを押します。調整したデータがキャンセルされ、DIGITAL UNIFORMITY ADJ... メニューに戻ります。 (前の画面に戻るまで、時間がかかることがあります。)

BKM-14L をカーソルに当てないと

次のメッセージが表示され、カーソルが左右交互に移動し ます。

DO YOU WISH TO CANCEL?

CANCEL: LEFT CURSOR

CONTINUE: RIGHT CURSOR

調整を中断するときは、左側のカーソルに BKM-14L を当て ス

DIGITAL UNIFORMITY ADJ... メニューに戻ります。 調整を継続するときは、右側のカーソルに BKM-14L を当て ます。

AUTO ONE POINT ADJ メニューに戻ります。

F システムデータの操作FILE MANAGEMENTメニュー



システムデータの保存、コピー、削除などを行うメニュー です。

次の操作を実行できます。

- "メモリースティック"にデータを保存する(SAVE TO... メニュー)
- "メモリースティック" や他のモニターからデータをコ ピーする(COPY FROM... メニュー)
- "メモリースティック"のデータを削除する(DELETE... メニュー)
- システムデータをメインテナンスする(DATA MAINTENANCE... メニュー)

FILE MANAGEMENT メニューの階 層構造

第1層	第2層	第3層
SAVE TO [F1]	SAVE TO	MEMORY STICK
	MEMORY STICK	F111
	F11	
COPY FROM F2	OTHER	OTHER MONITOR
	MONITOR F21	F211
	MEMORY STICK	MEMORY STICK
	F22	F221
DELETE F3	DELETE MEMORY	MEMORY STICK
	STICK F31	F311
DATA	BACK UP SYSTEM	
MAINTENANCE [F4]	DATA F41	
	RE-STORE	
	SYSTEM DATA	
	F42	
	RE-LOAD	RE-LOAD
	FACTORY DATA	FACTORY DATA
	F43	F431

構成メニュー

以下に、メニュー番号順に構成メニューを説明します。

メニューの見かた

- 本書では各メニューに付けた番号 (例: A11) は、画面に は表示されません。
- ◆ 詳しくは「メニュー番号について」(29ページ)をご覧ください。
- 「➡」は、設定操作後の移行先メニューの番号を示します。「➡」を記していない場合は、そこで設定操作が完了します。

F FILE MANAGEMENT メニュー

SAVE TO...: データを保存します。 ⇒ [F1]

COPY FROM...: データのコピーを実行します。 ⇒ F2

DELETE...:ファイルを削除します。⇒F3

DATA MAINTENANCE...: システムデータをメインテナンスします。 ⇒ [F4]

F1 SAVE TO... メニュー

システムデータを "メモリースティック" に保存します。 ➡[F11]

ご注意

フォーマット済みの"メモリースティック"をご使用ください。

F11 SAVE TO MEMORY STICK メニュー

データを保存するファイル名を選択するか、新規のファイル名を作成します。 ⇒ [F111]

NEW NAME:名前を入力する $(1 \sim 20 \text{ 文字})$ 。 使用できる記号は.__\$ の3種類です。

[F111] MEMORY STICK メニュー

上書きを実行して良いか確認のメッセージが表示されます。

OVERWRITE THIS FILE?

OK:上書きを実行する場合 ENTER (Ent) ボタンを押し ます

CANCEL:上書きを実行しない場合 MENU ボタンを押します。

F2 COPY FROM... メニュー

データをコピーするファイルを選択します。

OTHER MONITOR...:他のモニターのデータを選択します。⇒ [F21]

MEMORY STICK...: "メモリースティック"のファイルを選択します。 ⇒ F22

F21 OTHER MONITOR... メニュー

コピー元に使うモニターの ID No. を指定します。

MONITOR ID...: ID No. を入力します。**⇒** <u>F211</u> NETWORK スイッチを PEER TO PEER に設定したときは 選択できません。

F211 OTHER MONITOR メニュー

コピーするデータを選択します。

ALL:全データをコピーします。

PICTURE PRESET:画調整プリセットデータをコピーします。

COLOR TEMP: 色温度データをコピーします。

CH MEMORY: チャンネルメモリーデータをコピーしま

SYSTEM:システム設定データをコピーします。

[F22] MEMORY STICK... メニュー

コピー元に使う"メモリースティック"内のファイルを選択します。 ⇒ F221

F221 MEMORY STICK メニュー

コピーするデータを選択します。

ALL:全データをコピーします。

PICTURE PRESET: 画調整プリセットデータをコピー します。

COLOR TEMP: 色温度データをコピーします。

CH MEMORY: チャンネルメモリーデータをコピーします。

SYSTEM:システム設定データをコピーします。

F3 DELETE... メニュー

"メモリースティック"のファイルを削除します。 ⇒ F31

F31 DELETE MEMORY STICK メニュー

"メモリースティック"のファイルを削除します。 ファイルを選択します。 ➡ [F311]

F311 MEMORY STICK メニュー

削除を実行して良いか確認のメッセージが表示されます。

DELETE THIS FILE?

OK:削除を実行する場合 ENTER (Ent) ボタンを押します。

CANCEL:削除を実行しない場合 MENU ボタンを押します。

F4 DATA MAINTENANCE...メニュー

DATA MAINTENANCE... メニューに入るとき、パスワードの認証が行われます。

BACK UP SYSTEM DATA...: システムデータの "メモリースティック" へのバックアップが行われます。

⇒ F41

RE-STORE SYSTEM DATA...: システムデータが "メモリースティック"から読み出されます。**⇒**[F42]

RE-LOAD FACTORY DATA...: 各基板の工場出荷時の データが読み出されます。 ⇒ F43

F41 BACK UP SYSTEM DATA メニュー

データ書き込み中は、「IN PROGRESS -」が表示され「-」が点滅します。(データの書き込みには時間を要します。終 了するまでお待ちください。

F42 RE-STORE SYSTEM DATA メニュー

次のメッセージが表示され、データの読み出しの確認が行われます。

ALL DATA WILL BE RESTORED AND MONITOR WILL RESTART ARE YOU SURE?

OK: 読み出す場合は ENTER (Ent) ボタンを押します。 データの読み出し終了後、モニターは自動的に再起動 します。

CANCEL:読み出さない場合は MENU ボタンを押します。

DATA MAINTENANCE...メニューに戻ります。

F43 RE-LOAD FACTORY DATA... メニュー

スロットを選択すると、装着された入力アダプターの各基 板の工場出荷時のデータが読み出されます。

SLOT2 ~ SLOT6 から選択します。SLOT5 は VIDEO データと BLANKING データに分かれています。 ⇒ [F431]

F431 RE-LOAD FACTORY DATA メニュー

次のメッセージが表示され、データの読み出しの確認をします。

DATA RESET TO

ITS FACTORY SETTING

AND MONITOR WILL RESTART

ARE YOU SURE?

OK: 読み出す場合は ENTER (Ent) ボタンを押します。 データの読み出し終了後、モニターは自動的に再起動 します。

CANCEL: 読み出さない場合は MENU ボタンを押します。

RE-LOAD FACTORY DATA...メニューに戻ります。

G モニターに関する情報の表示– STATUS メニュー

概要

現在の設定や、使用しているチャンネルなど、いろいろな 情報を確認するときに使うメニューです。

STATUS メニューには2画面あり、以下の情報を表示できます。

- 使用しているチャンネルに関するデータと背面パネルの スロットに装着されているオプションを表示する (STATUS (1/2) メニュー)
- 使用しているモニターとコントローラーに関する情報を表示する(STATUS (2/2)メニュー)

STATUS メニューの階層構造

第1層	第2層
CH STATUS[G1]	СН
	OP
	IN
	FORMAT
	NAME
SLOT STATUS G2	MODEL NAME
	SERIAL NO
MODEL NAME	
SERIAL NO	
SOFTWARE VERSION	
OPERATION TIME	
CRT TURN ON TIME	
IP ADDR	
CONTROLLER STATUSG3	MODEL NAME
	SERIAL NO
	SOFTWARE VERSION
	IP ADDR

構成メニュー

以下に、メニュー番号順に構成メニューを説明します。

メニューの見かた

- 本書では各メニューに付けた番号(例: A11)は、画面に は表示されません。
- ◆ 詳しくは「メニュー番号について」(29ページ)をご覧ください。
- 「➡」は、設定操作後の移行先メニューの番号を示します。「➡」を記していない場合は、そこで設定操作が完了します。

G STATUS メニュー

STATUS (1/2) または STATUS (2/2) から選択します。

STATUS (1/2) メニュー

CH STATUS...:使用しているチャンネルに関する情報が表示されます。⇔[GT]

SLOT STATUS...: オプションスロット番号 1 ~ 3 (OPTION1 ~ 3) に装着されたオプションの情報が表示されます。⇔[**G2**]

HD-SDI/D1...: BKM-61D 装着時表示

SDI/COMPOSITE...: BKM-62HS 装着時表示

COMPONENT...: BKM-68X 装着時表示

EMPTY...: 未装着時表示

STATUS (2/2) メニュー

使用しているモニターと操作しているコントローラーに関する情報が表示されます。

MODEL NAME: モニターのモデル名 SERIAL NO: モニターのシリアル番号

SOFTWARE VERSION: モニターのソフトウェアの バージョン

OPERATION TIME: モニターの動作時間 (時間)

 CRT TURN ON TIME: モニターの CRT 使用時間(時

間)

IP ADDR: モニターの IP アドレス

ご注意

NETWORK スイッチを PEER TO PEER に設定しているときは、「192.168.000.001」と表示されます。

CONTROLLER STATUS...:操作しているコントローラーに関する情報を表示 ⇒ [G3]

G1 CH STATUS...メニュー

使用しているチャンネルに関する情報が表示されます。 $80\sim89$ 、 $91\sim97$ チャンネルでは、割り当てられている内蔵信号の情報が表示されます。

CH:チャンネル番号

OP: オプションスロット番号(OPTION1 ~ 3)

IN:入力端子番号

FORMAT: 入力信号のフォーマット

NAME: チャンネル名

 $80 \sim 89$ 、 $91 \sim 97$ チャンネルでは割り当てられている

内蔵信号の情報を表示しています。

G2 SLOT STATUS メニュー

オプションスロット番号 $1 \sim 3$ (OPTION1 ~ 3) 装着され たオプションの情報が表示されます。

MODEL NAME: モデル名 SERIAL NO: シリアル番号

「G3」 CONTROLLER STATUS... メニュー

操作しているコントローラーに関する情報が表示されます。

MODEL NAME: モデル名 SERIAL NO: シリアル番号

SOFTWARE VERSION: ソフトウェアのバージョン

IP ADDR: IP アドレス

ご注意

NETWORK スイッチを PEER TO PEER に設定しているときは、「192168,000,100」と表示されます。



□ コントローラーの設定− CONTROLLERメニュー



コントローラーのネットワークの設定を行うメニューです。

- モニター選択表示部の表示方法を設定する(MONITOR ID DISPLAY メニュー)
- コントローラーの IP アドレス、サブネットマスク、デフォルトゲートウェイを設定する (NETWORK SETTINGS... メニュー)
- コントローラーの NETWORK スイッチの設定状態を表示 する (NETWORK SW メニュー)

CONTROLLER メニューの階層構造

第1層	第2層	第3層
MONITOR ID		
DISPLAY [H1]		
NETWORK	IP ADDRESS	
SETTINGS H2	SUBNET MASK	
	DEFAULT GATEWAY	
	ADDRESS	
NETWORK SW		
SNMP SETTINGS	CONTACT	
H3	NAME	
	LOCATION	
	TRAP	

構成メニュー

以下に、メニュー番号順に構成メニューを説明します。

メニューの見かた

- 本書では各メニューに付けた番号(例: A11)は、画面に は表示されません。
- ◆ 詳しくは「メニュー番号について」 (29ページ) をご覧ください。
- 「⇒」は、設定操作後の移行先メニューの番号を示します。「⇒」を記していない場合は、そこで設定操作が完了します。

田 CONTROLLER メニュー

コントローラーのネットワークやシステムの設定を行うメニューです。

MONITOR ID DISPLAY: NETWORK スイッチを LAN に設定した場合のモニター選択表示部の表示方法を設定します。 ⇒ [H1]

NETWORK SETTINGS...: NETWORK SETTINGS メニューを表示します。 ⇒ [H2]

NETWORK SW: NETWORK スイッチの設定状態 (LAN、PEER TO PEER) を表示します。

BVM-A14F5U/A14F5M/A14F5A には NETWORK スイッチがなく、LAN モードで動作しているため、BVM-A14F5U/A14F5M/A14F5A をコントローラーとして使用する場合は表示されません。

SNMP SETTINGS...: CONTACT、NAME、 LOCATION、TRAPを設定します。⇒ [H3]

田 MONITOR ID DISPLAY メニュー

NETWORK スイッチを LAN に設定した場合のモニター選択表示部の表示方法を設定します。

BVM-A14F5U/A14F5M/A14F5A には NETWORK スイッチがなく、LAN モードで動作しているため、BVM-

A14F5U/A14F5M/A14F5A をコントローラーとして使用する場合は常に設定可能です。

ON: 常に表示(工場出荷時の設定)

AUTO: リモート接続操作中は常に表示、操作終了後は 一定時間経過後非表示

OFF: 非表示

H2 NETWORK SETTINGS... メニュー

IP アドレス、サブネットマスク、デフォルトゲートウェイを設定します。

IP ADDRESS: IP アドレスを設定します。(工場出荷時は「192.168.000.100」)

SUBNET MASK: サブネットマスクを設定します。(工 場出荷時は「255.255.255.0」)

DEFAULT GATEWAY: デフォルトゲートウェイを設定するかどうか (OFF、ON) を選択します。(工場出荷時は OFF)

ADDRESS: デフォルトゲートウェイを設定します。 (工場出荷時は「------(無設定)」)

CANCEL:変更、確定された設定を変更前の値に戻します。

CONFIRM:変更、確定された設定を保存、反映します。

ご注意

NETWORK スイッチを PEER TO PEER に設定した場合、IP アドレスは表示にかかわらず「192.168.000.100」に固定されます。

NETWORK スイッチを LAN に設定すると、表示された IP アドレスが有効となります。

旧3 SNMP SETTINGS...メニュー

CONTACT メニュー:管理責任者の情報を設定します。 **NEW NAME**:新規の名前を入力する(20 文字まで)。 使用できる記号は「(」「)」「.」「-」「+」「/」 「%」「*」「#」「_」「\$」「(スペース)」の 12 種類で す。

NAME メニュー:管理用の情報(デバイス ID)を設定 します。

NEW NAME: 新規の名前を入力する (20 文字まで)。 使用できる記号は「(」「)」「.」「-」「+」「/」 「%」「*」「#」「_」「\$」「(スペース)」の 12 種類です。

LOCATION メニュー: 設置場所の情報を設定します。 **NEW NAME**: 新規の名前を入力する (20 文字まで)。
使用できる記号は「(」「)」「.」「-」「+」「/」
「%」「*」「#」「_」「\$」「(スペース)」の 12 種類です。

TRAP メニュー:情報の送信先を設定します。TRAP1 と TRAP2 の 2 か所の設定ができます。

TRAP1: IP アドレスを設定します。(工場出荷時は「000.000.000.000」)

TRAP2: IP アドレスを設定します。(工場出荷時は 「000.000.000.000」)

CANCEL:変更、確定された設定を変更前の値に戻します。

CONFIRM:変更、確定された設定を保存、反映します。

□ キーロック設定 - KEY PROTECT メニュー

概要

各種設定項目の変更が効かないように設定するメニューです。

構成メニュー

以下に、メニュー番号順に構成メニューを説明します。

メニューの見かた

- 本書では各メニューに付けた番号 (例: A11) は、画面に は表示されません。
- ◆ 詳しくは「メニュー番号について」(29ページ)をご覧ください。

「➡」は、設定操作後の移行先メニューの番号を示します。 「➡」を記していない場合は、そこで設定操作が完了します。

Ⅲ KEY PROTECT メニュー

ON:コントローラー上のボタン (メニュー操作ボタン、 モニター選択ボタンを除く) が機能しなくなり、他の メニューの設定項目も変更できなくなります。

OFF:キーロックを解除します。

仕様

一般

信号方式

15.625kHz ~ 45kHz (詳細は、62ページ の「対応信号システム」をご覧くださ

(°,1)

CRT

型式 スーパーファインピッチ・トリニトロン、

アスペクト比4:3

AG ピッチ 0.3mm、90°偏向、φ30.6mm

インラインガン

有効画面サイズ

アスペクト比16:9のとき:

386 × 218mm(幅/高さ)

対角 443mm($17^{-1}/2$ 型)

アスペクト比4:3のとき:

386 × 291mm (幅/高さ)

対角 482mm (19 型)

CRT 保護 EHT 保護タイプ

ウォームアップ時間

約30分

アノード電圧

27kV (CRT カットオフ時)

色度点(中心值)

EBU 蛍光体

	Х	У
R	0.640	0.330
G	0.290	0.600
В	0.150	0.060

誤差: ± 0.005以下

消費電力 200W

(別売りのアダプター装着時)

電源 AC100 - 240V

2.1 - 0.9A, 50/60 Hz

質量 約 40kg

入出力

コントロール

OPTION: MINI-DIN 8 ピン (凹) \times 1

PARALLEL REMOTE: D-sub 9ピン (凹) × 1

SERVICE: D-sub 9 ピン (凸) \times 1 LAN (10 BASE-T/100 BASE-TX):

 $RI-45 \times 1$

DC 5V OUT: 丸型 4 ピン (凹) × 1

映像信号系

DG(微分利得) 5% 以内(輝度 0 \sim 100cd/m²) DP(微分位相) 5° 以内(輝度 0 \sim 100cd/m²) 周波数特性 48Hz \sim 30MHz + 1dB/- 3dB

直流再生 バックポーチ方式

APL10~90%の入力信号変化に対し、黒

レベルの変動は1%以下

同期系

垂直帰線時間 650 µ s 以下

水平帰線時間 3.77 μs 以下 (1080/60I、1035/60I 信号時)

画像系

ノーマルスキャン

CRT 有効画面の 5% オーバースキャン (CRT 有効画面の ± 10%)

アンダースキャン

CRT 有効画面の 3% アンダースキャン

(CRT 有効画面の± 10%)

直線性 画面高を直径とする円内で、画面高の約

0.5% 以内、円外で約 1%

色温度 D61、D65、D93 (他の色温度にも設定可)

コンバージェンスエラー

画面高を直径とする円内: 0.4mm 以下、

その他: 0.7mm 以下

標準輝度 100cd/m² (1Vp-p 基準信号、100% 白色信

号入力時)

画面高の 1% 以下($100cd/m^2$ のピーク輝

度で 10 ~ 90% APL 時)

700TV 本 (16:9)、900TV 本 (4:3) (中心 解像度

部、輝度 100cd/m² にて)

動作条件

温度 0 ~ 35 °C 推奨使用温度 20~30℃

0~90%以下(結露のないこと) 湿度

気圧 $700 \sim 1060 \text{hPa}$

保存・輸送条件

温度 $-10 \sim 40 \, ^{\circ}\mathrm{C}$ 湿度 $0 \sim 90\%$

気圧 $700 \sim 1060 \text{hPa}$

付属品

AC 電源コード(1)

3極 → 2極変換プラグ(1)(日本仕向けのみ)

AC プラグホルダー (1)

ヒューズ (1)

タリープレート(1)

4:3マスク (1)

オペレーションマニュアル (1)

メニューツリーカード (1)

ブラウン管の清掃について(1)

保証書(1)

本機は「高調波電流規格 JIS C 61000-3-2 適合品」です。

本機の仕様および外観は、改良のため予告なく変更するこ とがありますが、ご了承ください。

この装置は、情報処理装置等電波障害自主規制協議会 (VCCI) の基準に基づくクラス A 情報技術装置です。こ の装置を家庭環境で使用すると電波妨害を引き起こすこ とがあります。この場合には使用者が適切な対策を講ず るよう要求されることがあります。



対応信号システム

システム名称	走査線総数 /	有効走査線総数/フレーム	フレームレート (Hz)	スキャン方式	アスペクト比	スタンダード	画面上の表示 *3
575/50I	625	575	25	2:1 インターレース	16:9/4:3	Rec.ITU-R BT.601	575/50I
480/59.94I	525	483	30/1.001	2:1 インターレース	16:9/4:3	Rec.ITU-R BT.601	480/60I
576/50P	625	576	50	プログレッシブ	16:9/4:3	Rec.ITU-R BT.1358	576/50P
480/59.94P	525	483	60/1.001	プログレッシブ	16:9/4:3	SMPTE 293M/ Rec.ITU-R BT.1358	480/60P
1080/24PsF	1125	1080	24 24/1.001	2:1 インターレース	16:9	SMPTE RP211	1080/48I
1080/50I*1	1125	1080	25	2:1 インターレース	16:9	SMPTE 274M	1080/50I
1035/60I	1125	1035	30/1.001	2:1 インターレース	16:9	SMPTE 240M/ SMPTE 260M/ BTA S-001B	1035/60I
1080/60I*2	1125	1080	30 30/1.001	2:1 インターレース	16:9	SMPTE 274M	1080/60I
720/50P	750	720	50	プログレッシブ	16:9	SMPTE 296M	720/50P
720/60P	750	720	60 60/1.001	プログレッシブ	16:9	SMPTE 296M	720/60P

^{*} 1 1080/25PsF にも適用 * 2 1080/30PsF にも適用 * 3 入力信号が無いとき、対応しない信号システムのときは画面上の表示は NO SYNC となります。

対応信号フォーマット

	信号フォーマット		信号システム	BKM-61D	BKM-62HS	BKM-68X	スタンダード
アナログコン	ポジット			•			
NTCC	セットアップレベル	0	490 /E0 04I		~	~	CMDTE 170M
NTSC	セットノッノレベル	7.5	480/59.94I	0	×	×	SMPTE 170M
PAL			575/50I	0	×	×	Rec.ITU-R BT. 470
PAL-M			480/59.94I	0	×	×	Rec.ITU-R BT. 470
SECAM			575/50I	0	×	×	Rec.ITU-R BT. 470
アナログ (Y/C	()	Т					T
NTSC	セットアップレベル	7.5	480/59.94I	0	×	×	
PAL	1	II.	575/50I	0	×	×	
AL-M			480/59.94I	0	×	×	
ECAM			575/50I	0	×	×	
アナログコン	ポーネント		-				•
			1035/60I *	×	×	0	SMPTE 240M/ BTA S-001B
			1080/60I *	×	×	0	
			1080/50I	×	×	0	SMPTE 274M
			1080/30PsF *	×	×	0	
			1080/25PsF	×	×	0	SMPTE RP 211
			1080/24PsF *	×	×	0	
			720/60P *	×	×	0	SMPTE 296M
			720/50P	×	×	0	
			480/59.94P	×	×	0	SMPTE 293M/ Rec.ITU-R BT.1358
			576/50P	×	×	0	Rec.ITU-R BT.1358
			480/59.94I	×	×	0	
1ンポーネン	N10/SMPTE		575/50I	×	×	0	EBU N10
トレベル	Beta	0 7.5	480/59.94I	×	×	0	
プナログ RGB		1					
			1035/60I *	×	×	0	SMPTE 240M/ BTA S-001B
			1080/60I *	×	×	0	
			1080/50I	×	×	0	SMPTE 274M
			1080/30PsF *	×	×	0	
			1080/25PsF	×	×	0	SMPTE RP 211
			1080/24PsF *	×	×	0	1
			720/60P *	×	×	0	
			720/50P	×	×	0	SMPTE 296M
			480/59.94P	×	×	0	SMPTE 293M/ Rec.ITU-R BT.1358
			576/50P	×	×	0	Rec.ITU-R BT.1358
			480/59.94I	×	×	0	Rec.ITU-R BT.601
			575/50I	×	×	0	Rec.ITU-R BT.601
01			ı		,		
			480/59.94I	0	0	×	
			100/ 03.311		\circ	^	SMPTE 259M

信号フォーマット		信号システム	BKM-61D	BKM-62HS	BKM-68X	スタンダード	
D2							
NTSC	セットアップレベル	7.5	480/59.94I	0	×	×	SMPTE 259M
PAL	•		575/50I	0	×	×	
HD SDI (10	bit システムのみ)						
Single Link	4:2:2	YPBPR	1035/60I *	×	0	×	SMPTE 292M
Single Link	4:2:2	YPBPR					SMPTE 292M
Dual Link	4:4:4	YPBPR	1080/60I *	×	0	×	SMPTE 372M
Duai Lilik	4.4.4	GBR					SIMIT I E 37ZIVI
Single Link	4:2:2	YPBPR				×	SMPTE 292M
Dual Link	4:4:4	YPBPR	1080/50I	×	0		SMPTE 372M
Duai Lilik	4.4.4	GBR					SIMIT I E 37ZIVI
Single Link	4:2:2	YPBPR		SMPTE 292M			
Dual Link	4:4:4	YPBPR	1080/30PsF *	×	0	×	SMPTE 372M
Duai Lilik	4.4.4 GB	GBR					SIMI TE STZIVI
Single Link	4:2:2	YPBPR					SMPTE 292M
Dual Link	4:4:4	YPBPR	1080/25PsF	×	0	×	SMPTE 372M
Duai Lilik	1.1.1	GBR					SWII 112 STZWI
Single Link	4:2:2	YPBPR					SMPTE 292M
Dual Link 4:4:4	4:4:4	YPBPR 1	1080/24PsF *	×	0	O ×	SMPTE 372M
Daar Diiik	1.1.1	GBR					0.011 115 015101
Single Link	4:2:2	YPBPR	720/60P *	×	0	×	SMPTE 292M
Single Link	4:2:2	YPBPR	720/50P	×	0	×	SMPTE 292M


^{*}フレームレートは、1/1.001 にも対応

外形寸法図


単位: mm

BKM-15R 取り付け時


前面

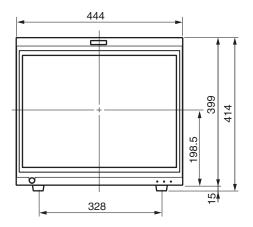


前面

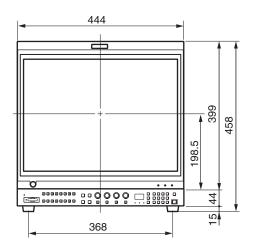


側面

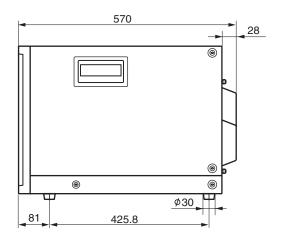


側面

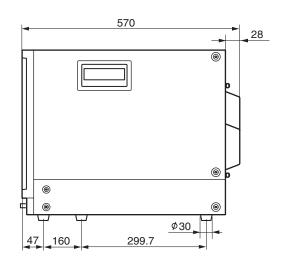

背面

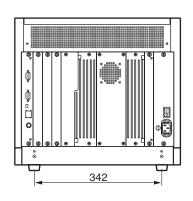

背面

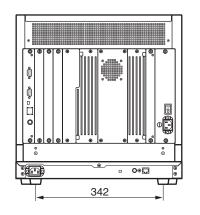




単位: mm

色温度調整用プローブを使用するときの接続ケーブルについて


ソニー製 BKM-14L 以外の色温度調整用プローブを使用するには、特別なケーブルでモニターに接続する必要があります。

以下に、接続ケーブルのコネクター仕様および結線のしか たを示します。


UDT INSTRUMENTS 社製プローブ SLS 9400-FC のための接続ケーブル

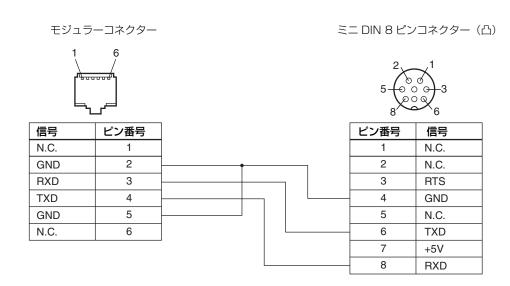


KONICA MINOLTA 社製プローブ CA-100 のための接続ケーブル

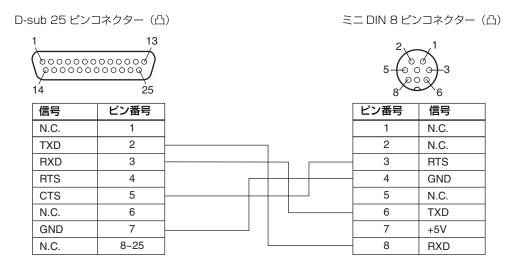


KONICA MINOLTA 社製プローブ CA-100plus のための接続ケーブル

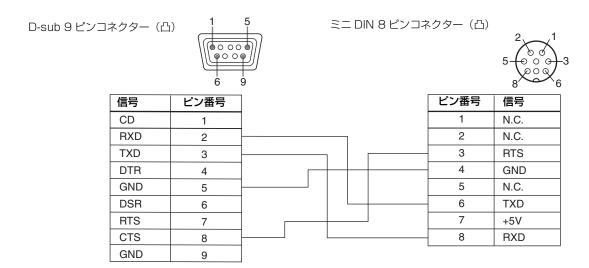

DK-TECHNOLOGIES 社製プローブ PM 5639 のための接続ケーブル (DK-TECHNOLOGIES 社製ケーブル PM 5639/00 相当品)

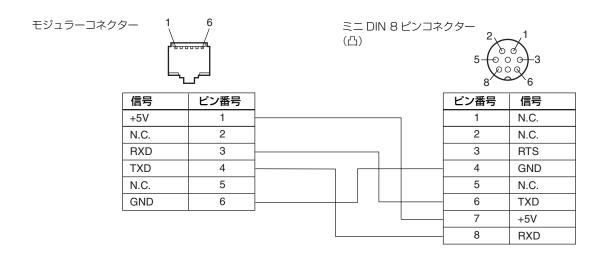

THOMA 社製プローブ TF6 のための接続ケーブル

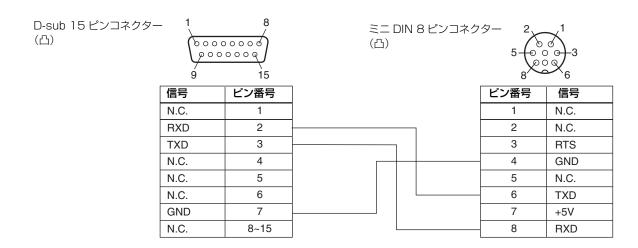

メニュー項目索引

以下は、本機のメニュー項目をアルファベット順に並べ、 その説明が出ている本書のページとメニュー番号、その項 目の属するメニュー選択層を示しています。

A ALIGNMENT ANALYZE ANALYZE APPLY PASSWORD 49 BE COLOR TEMP ADJ X=x- AUTO 35 AII PICTURE ADJ X=x- AUTO ADJUST 35 AII PICTURE ADJ X=x- AUTO ADJUST 36 BE COLOR TEMP ADJ X=x- AUTO ADJUST 37 AUTO ADJUST 38 BE COLOR TEMP ADJ X=x- AUTO PULL POINTS ADJ AUTO OND FOINT ADJ 39 BE BACK UP SYSTEM DATA BLANKING SETTINGS BACK UP SYSTEM DATA BLANKING SETTINGS CHANGE PASSWORD CHANGE PASSWORD GEI COLOR TEMP ADJ X=x- COLOR TEMP ADJ X=x- COLOR TEMP ADJ X=x- COLOR TEMP ADJ COMPONENT 45 COLOR TEMP ADJ COMPONENT 46 COMPONENT 47 COMPOSITE CONTROLLER CONTROLLER 58 BI CONTROLLER STATUS 57 GEI CONTROLLER STATUS 57 GEI CONTROLLER STATUS 57 GEI CONTROLLER STATUS 57 GEI CONTROLLER ADJ X=x- CONTROLLER STATUS 57 GEI CONTROLLER STATUS 57 GEI CONTROLLER ADJ X=x- TONTROLLER ADJ		メニュー項目	ページ	メニュー番号	属するメニュー選択層
APPLY PASSWORD AUTO 35 AII PICTURE ADJ X=x= AUTO ADJUST 36 BE COLOR TEMP ADJ X=x= AUTO ADJUST 37 BEIL COLOR TEMP ADJ X=x= AUTO PILL POINTS ADJ AUTO ONE POINT ADJ BEIL COLOR TEMP ADJ X=x= AUTO ONE POINT ADJ SI BEIL COLOR TEMP ADJ X=x= AUTO ONE POINT ADJ SI BEIL COLOR TEMP ADJ X=x= AUTO ONE POINT ADJ SI BEIL AUTO ONE POINT ADJ BEIL AUTO ONE POINT ADJ SI BEIL BEACK UP SYSTEM DATA BEACK UP SYSTEM DATA BEIL MARAGEMENT X=x= BLANKING SETTINGS SYSTEM CONFIGURATION X=x= CHANGE PASSWORD 48 BEIL SYSTEM CONFIGURATION X=x= CHANGE PASSWORD 48 BEIL COLOR TEMP ADJ COLOR TEMP ADJ COLOR TEMP ADJ COMPONENT 43 COSI COMPONENT 43 COMPOSITE CONTROLLER CONTROLLER SI CONTROLLER CONTROLLER SI CONTROLLER SI CONTROLLER SI CONTROLLER SI CONTROLLER SI CONTROLLER SI COLOR TEMP ADJ X=x= CONTROLLER SI CONTROLLER SI COLOR TEMP ADJ X=x= CONTROLLER SI COLOR TEMP ADJ X=x= DELETE DELETE MEMORY STICK DELETE DELETE MEMORY STICK DELETE DELETE MEMORY STICK DELETE MEMORY	A	ALIGNMENT	50	E2	INSTALLATION SETTINGS $\times = = = = = = = = = = = = = = = = = = $
AUTO 35		ANALYZE	39	B5	COLOR TEMP ADJ メニュー
AUTO ADJUST 35		APPLY PASSWORD	49	D62	SYSTEM CONFIGURATION $x=x-1$
AUTO ADJUST 35 AUTO FULL POINTS ADJ AUTO FULL POINTS ADJ 52 E32 INSTALLATION SETTINGS		AUTO	35	A1	PICTURE ADJ メニュー
BEI COLOR TEMP ADJ ★= ± = AUTO FULL POINTS ADJ 52 E32 INSTALLATION SETTINGS ★= ± − AUTO ONE POINT ADJ 53 E33 INSTALLATION SETTINGS ★= ± − AUTO ONE POINT ADJ 53 E33 INSTALLATION SETTINGS ★= ± − BACK UP SYSTEM DATA 55 E41 FILE MANAGEMENT ★= ± − BLANKING SETTINGS 48 D45 SYSTEM CONFIGURATION ★= ± − CHANNEC SETTINGS 48 D45 SYSTEM CONFIGURATION ★= ± − CHANNEC NAME 45 D46 SYSTEM CONFIGURATION ★= ± − CHANNEL NAME 45 D46 INPUT CONFIGURATION ★= ± − COLOR TEMP ADJ ↓ = ± − COLOR TEMP ADJ ↓ = ± − COMPONENT 43 G45 INPUT CONFIGURATION ★= ± − COMPONITE 42 G43 INPUT CONFIGURATION ★= ± − CONTROLLER ★= ± − S5 D45 STATUS ★=			38	B2	COLOR TEMP ADJ メニュー
AUTO FULL POINTS ADJ AUTO ONE POINT ADJ 53 BACK UP SYSTEM DATA B BACK UP SYSTEM DATA B BLANKING SETTINGS 48 BACK UP SYSTEM DATA B BLANKING SETTINGS 48 BACK UP SYSTEM CONFIGURATION X=x- BLANKING SETTINGS 48 BACK UP SYSTEM CONFIGURATION X=x- BLANKING SETTINGS 57 GSI STATUS X=x- CHANGE PASSWORD 48 BBSI SYSTEM CONFIGURATION X=x- CHANNEL NAME COLOR TEMP ADJ 36 BI COLOR TEMP ADJ COMPONENT 43 COMPONENT 43 COMPOSITE CONTROLLER 58 BI CONTROLLER 58 BI CONTROLLER 59 BSI COLOR TEMP ADJ S=x- COPY FROM 36 BSI COLOR TEMP ADJ S=x- SSTATUS X=x- COPY FROM 36 BSI COLOR TEMP ADJ S=x- SSTATUS X=x- COPY FROM 36 BSI COLOR TEMP ADJ S=x- SSTATUS X=x- SSTATUS		AUTO ADJUST	35	A11	PICTURE ADJ メニュー
AUTO ONE POINT AD] 53 E33 INSTALLATION SETTINGS メニュー			39	B21	COLOR TEMP ADJ メニュー
B BACK UP SYSTEM DATA 55		AUTO FULL POINTS ADJ	52	E32	INSTALLATION SETTINGS $ \ \ \ \ \ \ \ \ \ \ \ \ \$
BLANKING SETTINGS		AUTO ONE POINT ADJ	53	E33	INSTALLATION SETTINGS メニュー
C CH STATUS 57 GI STATUS ⅓=±− CHANGE PASSWORD 48 DBI SYSTEM CONFIGURATION ⅓=±− CHANNEL NAME 45 C4 INPUT CONFIGURATION ⅙=±− COLOR TEMP ADJ 36 B COLOR TEMP ADJ ⅙=±− COMPONENT 43 C15 INPUT CONFIGURATION ⅙=±− COMPOSITE 42 C33 INPUT CONFIGURATION ⅙=±− CONTROLLER 58 H CONTROLLER ⅓=±− CONTROLLER STATUS 57 G3 STATUS ⅙=±− COPY FROM 36 A3 PICTURE ADJ ⅙=±− COPY FROM 36 A3 PICTURE ADJ ⅙=±− 45 C5 INPUT CONFIGURATION ⅙=±− 55 E2 FILE MANAGEMENT ⅙=±− 55 E3 FILE MANAGEMENT ⅙=±− DELETE 55 E3 INSTALLATION SETTINGS ⅙=±− DK-TECHNOLOGIES 36 B COLOR TEMP ADJ ⅙=±− DWAL LINK HD-SDI 42 C12 INPUT CONFIGURATION ⅙=±− F PILE MANAGEMENT 54 E	В	BACK UP SYSTEM DATA	55	F41	FILE MANAGEMENT メニュー
CHANGE PASSWORD 48 Deil System Configuration x=z= CHANNEL NAME 45 C4 INPUT CONFIGURATION x=z= COLOR TEMP ADJ 36 B COLOR TEMP ADJ x=z= COMPONENT 43 C55 INPUT CONFIGURATION x=z= CONTROLLER 58 H CONTROLLER x=z= CONTROLLER STATUS 57 G3 STATUS x=z= COPY FROM 36 A3 PICTURE ADJ x=z= COLOR TEMP ADJ x=z= COLOR TEMP ADJ x=z= CONTROLLER STATUS 57 G3 STATUS x=z= COPY FROM 36 A3 PICTURE ADJ x=z= 55 F2 FILE MANAGEMENT x=z= D DATA MAINTENANCE 55 F3 FILE MANAGEMENT x=z= DELETE DELETE DELETE MEMORY STICK 55 F3 FILE MANAGEMENT x=z= DIGITAL UNIFORMITY ADJ 52 E3 INSTALLATION SETTINGS x=z= DUAL LINK HD-SDI 42 C12 INPUT CONFIGURATION x=z= F FILE MANAGEMENT 54 F FILE MANAGEMENT 54 F FILE MANAGEMENT 55 F3 INPUT CONFIGURATION x=z= F FORMAT 42 C1 INPUT CONFIGURATION x=z= INSTALLATION SETTINGS x=z= K KEY PROTECT 59 II KEY PROTECT x=z= KNICA MINOLTA 6 B COLOR TEMP ADJ x=z=		BLANKING SETTINGS	48	D4	SYSTEM CONFIGURATION メニュー
CHANNEL NAME CHANNEL NAME COLOR TEMP ADJ 36 B COLOR TEMP ADJ 36 B COLOR TEMP ADJ 37 COMPONENT 43 CISS INPUT CONFIGURATION X=x= COMPOSITE COMPOSITE CONTROLLER 58 H CONTROLLER X=x= CONTROLLER STATUS 57 GSI STATUS X=x= COPY FROM 36 ASI PICTURE ADJ X=x= 45 COLOR TEMP ADJ X=x= CONTROLLER STATUS 57 GSI STATUS X=x= 45 COPY FROM 36 ASI PICTURE ADJ X=x= 45 COLOR TEMP ADJ X=x= 45 COLOR TEMP ADJ X=x= 45 ESI FILE MANAGEMENT X=x= DELETE DELETE DELETE DELETE DELETE DELETE DELETE DIGITAL UNIFORMITY ADJ SE DUAL LINK HD-SDI 42 CISS INPUT CONFIGURATION X=x= FILE MANAGEMENT X=x= DUAL LINK HD-SDI 42 CISS INPUT CONFIGURATION X=x= FORMAT 42 CISS INPUT CONFIGURATION X=x= INSTALLATION SETTINGS X	С	CH STATUS	57	G1	STATUS メニュー
COLOR TEMP ADJ 36 B COLOR TEMP ADJ X = 2 - COMPONENT 43 CIS INPUT CONFIGURATION X = 2 - COMPOSITE 42 CONTROLLER 58 H CONTROLLER X = 2 - CONTROLLER STATUS 57 GG STATUS X = 2 - COPY FROM 36 A3 PICTURE ADJ X = 2 - COPY FROM 36 A3 PICTURE ADJ X = 2 - COPY FROM 36 B3 COLOR TEMP ADJ X = 2 - COPY FROM 36 A3 PICTURE ADJ X = 2 - E5 INPUT CONFIGURATION X = 2 - E5 INPUT CONFIGURATION X = 2 - E5 FILE MANAGEMENT X = 2 - DELETE 55 E4 FILE MANAGEMENT X = 2 - DELETE MEMORY STICK 55 E3 FILE MANAGEMENT X = 2 - DIGITAL UNIFORMITY ADJ 52 DIGITAL UNIFORMITY ADJ 52 DISTALLATION SETTINGS X = 2 - DUAL LINK HD-SDI 42 CI2 INPUT CONFIGURATION X = 2 - FORMAT 42 E1 INPUT CONFIGURATION X = 2 - INSTALLATION SETTINGS X = 2 - K KEY PROTECT 59 II KEY PROTECT X = 2 - KONICA MINOLTA 36 B COLOR TEMP ADJ X = 2 - INSTALLATION SETTINGS X = 2 - K KEY PROTECT X = 2 - K KEY PROTECT X = 2 - K KONICA MINOLTA 36 B COLOR TEMP ADJ X = 2 - INSTALLATION SETTINGS X = 2 - K KEY PROTECT X = 2 - K KONICA MINOLTA 36 B COLOR TEMP ADJ X = 2 - INSTALLATION SETTINGS X = 2 - K KONICA MINOLTA 36 COLOR TEMP ADJ X = 2 - INSTALLATION SETTINGS X = 2 - K KONICA MINOLTA 36 COLOR TEMP ADJ X = 2 - INSTALLATION SETTINGS X = 2 - K KONICA MINOLTA		CHANGE PASSWORD	48	D61	SYSTEM CONFIGURATION メニュー
COMPONENT		CHANNEL NAME	45	C4	INPUT CONFIGURATION メニュー
COMPOSITE 42 Ci3		COLOR TEMP ADJ	36	В	COLOR TEMP ADJ メニュー
CONTROLLER 58		COMPONENT	43	C15	INPUT CONFIGURATION メニュー
CONTROLLER STATUS 57 633 STATUS X = x - COPY FROM 36 A3 PICTURE ADJ X = x - 39 B3 COLOR TEMP ADJ X = x - 45 C5 INPUT CONFIGURATION X = x - 55 F2 FILE MANAGEMENT X = x - DELETE 55 F3 FILE MANAGEMENT X = x - DELETE MEMORY STICK 55 F31 FILE MANAGEMENT X = x - DIGITAL UNIFORMITY ADJ 52 E3 INSTALLATION SETTINGS X = x - DK-TECHNOLOGIES 36 B COLOR TEMP ADJ X = x - DUAL LINK HD-SDI 42 C12 INPUT CONFIGURATION X = x - F FILE MANAGEMENT 54 F FILE MANAGEMENT X = x - FORMAT 42 C1 INPUT CONFIGURATION X = x - INPUT CONFIGURATION 40 C INPUT CONFIGURATION X = x - INSTALLATION SETTINGS 49 E INSTALLATION SETTINGS X = x - K KEY PROTECT 59 II KEY PROTECT X = x - KONICA MINOLTA 36 B COLOR TEMP ADJ X = x - KONICA MINOLTA		COMPOSITE	42	C13	INPUT CONFIGURATION メニュー
COPY FROM 36		CONTROLLER	58	H	CONTROLLER
39 B3 COLOR TEMP ADJ メニュー 45 C5 INPUT CONFIGURATION メニュー 55 F2 FILE MANAGEMENT メニュー 55 F4 FILE MANAGEMENT メニュー 55 F3 FILE MANAGEMENT メニュー 56 F3 FILE MANAGEMENT メニュー 57 DELETE MEMORY STICK 55 F3 FILE MANAGEMENT メニュー 57 DIGITAL UNIFORMITY ADJ 52 E3 INSTALLATION SETTINGS メニュー 56 DUAL LINK HD-SDI 42 C12 INPUT CONFIGURATION メニュー 57 FILE MANAGEMENT 54 F FILE MANAGEMENT メニュー 58 F1 FILE MANAGEMENT 59 F1 F1 F1 F1 F1 F1 F1 F		CONTROLLER STATUS	57	G 3	STATUS メニュー
45 G5 INPUT CONFIGURATION X=z- 55 F2 FILE MANAGEMENT X=z- D DATA MAINTENANCE 55 F4 FILE MANAGEMENT X=z- DELETE 55 F3 FILE MANAGEMENT X=z- DELETE MEMORY STICK 55 F31 FILE MANAGEMENT X=z- DIGITAL UNIFORMITY ADJ 52 E3 INSTALLATION SETTINGS X=z- DK-TECHNOLOGIES 36 B COLOR TEMP ADJ X=z- DUAL LINK HD-SDI 42 G12 INPUT CONFIGURATION X=z- F FILE MANAGEMENT 54 F FILE MANAGEMENT X=z- FORMAT 42 C1 INPUT CONFIGURATION X=z- INPUT CONFIGURATION X=z- INSTALLATION SETTINGS 49 E INSTALLATION SETTINGS X=z- K KEY PROTECT 59 II KEY PROTECT X=z- KONICA MINOLTA 36 B COLOR TEMP ADJ X=z-		COPY FROM	36	A3	PICTURE ADJ メニュー
D DATA MAINTENANCE 55 F2 FILE MANAGEMENT $\mathcal{A} = \mathcal{A} = \mathcal{A}$ DELETE 55 F3 FILE MANAGEMENT $\mathcal{A} = \mathcal{A} = \mathcal{A}$ DELETE MEMORY STICK 55 F31 FILE MANAGEMENT $\mathcal{A} = \mathcal{A} = \mathcal{A}$ DIGITAL UNIFORMITY ADJ 52 E3 INSTALLATION SETTINGS $\mathcal{A} = \mathcal{A} = \mathcal{A}$ DIAL LINK HD-SDI 42 C12 INPUT CONFIGURATION $\mathcal{A} = \mathcal{A} = \mathcal{A}$ FILE MANAGEMENT 54 F FILE MANAGEMENT $\mathcal{A} = \mathcal{A} = \mathcal{A}$ FORMAT 42 C1 INPUT CONFIGURATION $\mathcal{A} = \mathcal{A} = \mathcal{A}$ I INPUT CONFIGURATION 40 C INPUT CONFIGURATION $\mathcal{A} = \mathcal{A} = \mathcal{A}$ INSTALLATION SETTINGS 49 E INSTALLATION SETTINGS $\mathcal{A} = \mathcal{A} = \mathcal{A}$ KEY PROTECT 59 II KEY PROTECT $\mathcal{A} = \mathcal{A} = \mathcal{A}$ KONICA MINOLTA 36 B COLOR TEMP ADJ $\mathcal{A} = \mathcal{A} = \mathcal{A}$			39	B3	COLOR TEMP ADJ メニュー
D DATA MAINTENANCE DELETE DELETE DELETE MEMORY STICK DIGITAL UNIFORMITY ADJ DK-TECHNOLOGIES DUAL LINK HD-SDI FILE MANAGEMENT X=1- DUAL LINK HD-SDI FILE MANAGEMENT X=1- DUAL LINK HD-SDI FILE MANAGEMENT X=1- DUAL LINK HD-SDI FILE MANAGEMENT FILE MANAGEMENT FORMAT 1 INPUT CONFIGURATION X=1- INSTALLATION SETTINGS 49 E INSTALLATION SETTINGS X=1- KEY PROTECT 59 II KEY PROTECT X=1- KONICA MINOLTA B COLOR TEMP ADJ X=1-			45	C5	INPUT CONFIGURATION メニュー
DELETE 55 F3 FILE MANAGEMENT $\mathcal{I} = \mathcal{I} = $			55	F2	FILE MANAGEMENT メニュー
DELETE MEMORY STICK DIGITAL UNIFORMITY ADJ DK-TECHNOLOGIES DUAL LINK HD-SDI FILE MANAGEMENT X=1- DUAL LINK HD-SDI FILE MANAGEMENT FILE MANAGEMENT FILE MANAGEMENT FORMAT INPUT CONFIGURATION X=1- INSTALLATION SETTINGS FILE MANAGEMENT X=1- INPUT CONFIGURATION X=1- INSTALLATION SETTINGS FILE MANAGEMENT X=1- FORMAT LINPUT CONFIGURATION X=1- INSTALLATION SETTINGS X=1- KEY PROTECT S9 INSTALLATION SETTINGS X=1- KONICA MINOLTA B COLOR TEMP ADJ X=1-	D	DATA MAINTENANCE	55	F4	FILE MANAGEMENT メニュー
DIGITAL UNIFORMITY ADJ 52 E3 INSTALLATION SETTINGS $\mathcal{S} = \mathbb{I} =$		DELETE	55	F3	FILE MANAGEMENT メニュー
DK-TECHNOLOGIES DUAL LINK HD-SDI 42 C12 INPUT CONFIGURATION \$\(\sigma = \sigma - \) F FILE MANAGEMENT FORMAT INPUT CONFIGURATION \$\(\sigma = \sigma - \) INPUT CONFIGURATION \$\(\sigma = \sigma - \) INPUT CONFIGURATION \$\(\sigma = \sigma - \) INSTALLATION SETTINGS 49 E INSTALLATION SETTINGS \$\(\sigma = \sigma - \) K KEY PROTECT S9 II KEY PROTECT \$\(\sigma = \sigma - \) KONICA MINOLTA 36 B COLOR TEMP ADJ \$\(\sigma = \sigma - \) COLOR TEMP ADJ \$\(\sigma = \sigma - \)		DELETE MEMORY STICK	55	F31	FILE MANAGEMENT メニュー
DUAL LINK HD-SDI 42 G12 INPUT CONFIGURATION $\mathcal{S}=\mathcal{I}=\mathcal{I}$ F FILE MANAGEMENT 54 F FILE MANAGEMENT $\mathcal{S}=\mathcal{I}=\mathcal{I}$ FORMAT 42 G1 INPUT CONFIGURATION $\mathcal{S}=\mathcal{I}=\mathcal{I}=\mathcal{I}$ I INPUT CONFIGURATION 40 G INPUT CONFIGURATION $\mathcal{S}=\mathcal{I}=\mathcal{I}=\mathcal{I}=\mathcal{I}=\mathcal{I}=\mathcal{I}=\mathcal{I}=I$		DIGITAL UNIFORMITY ADJ	52	E3	INSTALLATION SETTINGS
F FILE MANAGEMENT 54 F FILE MANAGEMENT \mathcal{S} \mathcal{S} F FILE MANAGEMENT \mathcal{S} \mathcal{S} \mathcal{S} \mathcal{S} FORMAT 42 C1 INPUT CONFIGURATION \mathcal{S} \mathcal{S} \mathcal{S} INPUT CONFIGURATION \mathcal{S} \mathcal{S} \mathcal{S} INSTALLATION SETTINGS 49 E INSTALLATION SETTINGS \mathcal{S} \mathcal{S} \mathcal{S} \mathcal{S} INSTALLATION SETTINGS \mathcal{S} \mathcal{S} INSTALLATION SETTINGS \mathcal{S} \mathcal{S} \mathcal{S} \mathcal{S} INSTALLATION SETTINGS \mathcal{S}		DK-TECHNOLOGIES	36	В	COLOR TEMP ADJ メニュー
FORMAT I INPUT CONFIGURATION \$40 INPUT CONFIGURATION \$\frac{1}{2} = \frac{1}{2} = \f		DUAL LINK HD-SDI	42	C12	INPUT CONFIGURATION メニュー
I INPUT CONFIGURATION 40 © INPUT CONFIGURATION $\times = \bot = $	F	FILE MANAGEMENT	54	F	FILE MANAGEMENT メニュー
INSTALLATION SETTINGS 49 E INSTALLATION SETTINGS $\!$		FORMAT	42	C1	INPUT CONFIGURATION メニュー
K KEY PROTECT 59 II KEY PROTECT メニュー KONICA MINOLTA 36 B COLOR TEMP ADJ メニュー	I	INPUT CONFIGURATION	40	C	INPUT CONFIGURATION メニュー
KONICA MINOLTA 36 B COLOR TEMP ADJ メニュー		INSTALLATION SETTINGS	49	E	INSTALLATION SETTINGS $\lambda = 1$
-	К	KEY PROTECT	59		KEY PROTECT メニュー
L LANDING ADJUST 50 E1 INSTALLATION SETTINGS メニュー	L	KONICA MINOLTA	36	В	COLOR TEMP ADJ メニュー
	L	LANDING ADJUST	50	E1	INSTALLATION SETTINGS メニュー



	- 75	. 0 . 5 !!	·- ====	
	メニュー項目	ページ	メニュー番号	属するメニュー選択層
M	MAINTENANCE	49	D7	SYSTEM CONFIGURATION メニュー
	MANUAL	37	B1	COLOR TEMP ADJ メニュー
		52	E31	INSTALLATION SETTINGS メニュー
	MANUAL ADJUST	35	A2	PICTURE ADJ メニュー
		38	B11	COLOR TEMP ADJ メニュー
		52	E311	INSTALLATION SETTINGS メニュー
	MATRIX	43	C2	INPUT CONFIGURATION メニュー
	MEMORY STICK	36	A33	PICTURE ADJ メニュー
		39	B33	COLOR TEMP ADJ メニュー
		45	C53	INPUT CONFIGURATION メニュー
		54	F111	FILE MANAGEMENT メニュー
		55	F22	FILE MANAGEMENT
		55	F311	FILE MANAGEMENT
	MODE	43	C3	INPUT CONFIGURATION メニュー
	MONITOR ID	39	B321	COLOR TEMP ADJ メニュー
	MONITOR ID DISPLAY	58	H1	CONTROLLER メニュー
N	NETWORK	46	D1	SYSTEM CONFIGURATION メニュー
	NETWORK SETTINGS	46	D11	SYSTEM CONFIGURATION メニュー
		58	H2	CONTROLLER メニュー
О	ON SCREEN SET	48	D5	SYSTEM CONFIGURATION
	OTHER CH	45	C51	INPUT CONFIGURATION メニュー
	OTHER MONITOR	36	A32	PICTURE ADJ メニュー
		39	B32	COLOR TEMP ADJ メニュー
		45	C52	INPUT CONFIGURATION メニュー
		55	F21	FILE MANAGEMENT メニュー
		55	F211	FILE MANAGEMENT
Р	PARALLEL REMOTE	47	D2	SYSTEM CONFIGURATION メニュー
	PASSWORD	48	D6	SYSTEM CONFIGURATION
	PICTURE ADJ	34	Α	PICTURE ADJ メニュー
	POWER	48	D3	SYSTEM CONFIGURATION メニュー
	PRESET VALUE	36	A31	PICTURE ADJ メニュー
		39	B31	COLOR TEMP ADJ メニュー
R	RE-LOAD FACTORY DATA	55	F43	FILE MANAGEMENT メニュー
	RESTORE FACTORY DATA	39	B4	COLOR TEMP ADJ メニュー
		50	E11	INSTALLATION SETTINGS メニュー
	RE-STORE SYSTEM DATA	55	F42	FILE MANAGEMENT メニュー
S	SAVE TO	54	F1	FILE MANAGEMENT メニュー
	SAVE TO MEMORY STICK	54	F11	FILE MANAGEMENT メニュー
	SDI/HD-SDI	42	C11	INPUT CONFIGURATION メニュー
	SLOT STATUS	57	G2	STATUS メニュー
	SNMP SETTINGS	47	D12	SYSTEM CONFIGURATION メニュー
		59	H3	CONTROLLER メニュー
	STATUS	56	G	STATUS メニュー
	SYSTEM CONFIGURATION	45	D	SYSTEM CONFIGURATION メニュー
Т	THOMA	36	В	COLOR TEMP ADJ メニュー
U	UDT INSTRUMENTS	36	B	COLOR TEMP ADJ メニュー
Y	YC	43	C14	INPUT CONFIGURATION メニュー
1	1 PIN ∼ 8 PIN	47	D21	SYSTEM CONFIGURATION メニュー



WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

WARNING THIS APPARATUS MUST BE EARTHED.

AVERTISSEMENT

Afin de réduire les risques d'incendie ou d'électrocution, ne pas exposer cet appareil à la pluie ou à l'humidité.

Afin d'écarter tout risque d'électrocution, garder le coffret fermé. Ne confier l'entretien de l'appareil qu'à un personnel qualifié.

AVERTISSEMENT
CET APPAREIL DOIT ETRE RELIE A LA TERRE.

WARNUNG

Um die Gefahr von Bränden oder elektrischen Schlägen zu verringern, darf dieses Gerät nicht Regen oder Feuchtigkeit ausgesetzt werden.

Um einen elektrischen Schlag zu vermeiden, darf das Gehäuse nicht geöffnet werden. Überlassen Sie Wartungsarbeiten stets nur qualifiziertem Fachpersonal.

WARNUNG

DIESES GERÄT MUSS GEERDET WARDEN.

WARNING

- 1. Use the approved Power Cord (3-core mains lead) / Appliance Connector / Plug with earthing-contacts that conforms to the safety regulations of each country if applicable.
- Use the Power Cord (3-core mains lead) / Appliance Connector / Plug conforming to the proper ratings (Voltage, Ampere).

If you have questions on the use of the above Power Cord / Appliance Connector / Plug, please consult a qualified service personnel.

For the customers in USA (BVM-A20F1U)

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

All interface cables used to connect peripherals must be shielded in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

WARNING

Using this unit at a voltage other than 120 V may require the use of a different line cord or attachment plug, or both. To reduce the risk of fire or electric shock, refer servicing to qualified service personnel.

For the customers in Canada (BVM-A20F1U)

This Class A digital apparatus complies with Canadian ICES-003.

Pour les utilisateurs au Canada (BVM-A20F1U)

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

For the customers in Europe (BVM-A20F1M/BVM-A20F1A)

This product with the CE marking complies with both the EMC Directive (89/336/EEC) and the Low Voltage Directive (73/23/EEC) issued by the Commission of the European Community. Compliance with these directives implies conformity to the following European standards:

- EN60950-1: Product Safety
- EN55103-1: Electromagnetic Interference (Emission)
- EN55103-2: Electromagnetic Susceptibility (Immunity) This product is intended for use in the following Electromagnetic Environment: E4 (controlled EMC environment, ex. TV studio).

Pour les clients européens (BVM-A20F1M/BVM-A20F1A)

Ce produit portant la marque CE est conforme à la fois à la Directive sur la compatibilité électromagnétique (EMC) (89/336/CEE) et à la Directive sur les basses tensions (73/23/CEE) émises par la Commission de la Communauté européenne.

La conformité à ces directives implique la conformité aux normes européennes suivantes:

- EN60950-1: Sécurité des produits
- EN55103-1: Interférences électromagnétiques (émission)
- EN55103-2: Sensibilité électromagnétique (immunité) Ce produit est prévu pour être utilisé dans l'environnement électromagnétique suivant: E4 (environnement EMC contrôlé, ex. Studio de télévision).

Für Kunden in Europa (BVM-A20F1M/BVM-A20F1A)

Dieses produkt besitzt die CE-Kennzeichnung Und erfüllt die EMV-Richtlinie (89/336/EWG) sowie die

Niederspannungsrichtlinie (73/23/EWG) der EG-Kommission. Angewandte Normen:

- EN60950-1: Sicherheitsbestimmungen
- EN55103-1: Elektromagnetische Verträglichkeit (Störaussendung)
- EN55103-2: Elektromagnetische Verträglichkeit (Störfestigkeit),

für die folgenden elektromagnetischen Umgebungen: E4 (kontrollierter EMV-Bereich, z.B. Fernsehstudio)

Table of Contents

Chapter 1	Overview		
		Precautions	(
		Overview	
		Features	
		Options	
		Connector Panel Configuration	
		Installing a Decoder Adaptor	10
		Location and Function of Parts	
		Front Panel of Monitor	1
		Rear Panel of Monitor	12
		BKM-15R Monitor Control Unit (Optional)	14
		Inserting/Ejecting the "Memory Stick"	19
		Notes on "Memory Stick"	19
		Installation of the 4:3 Mask	
		Connections	
		Connecting to the BKM-15R	2
		Connecting to the Network	
		Selecting the Monitor/Group	
		Selecting the Default Settings	
Chapter 2	Menu		

Basic Menu Operations	25
Menu Operation Buttons	25
Displaying the Menu	26
Menu Operation	26
Menu Structure	29
A Picture Adjustment – PICTURE ADJ Menu	31
Overview	31
Structure of the PICTURE ADJ Menu	31
Setting Lists in the PICTURE ADJ Menu	31
B Adjusting the Color Temperature	
- COLOR TEMP ADJ Menu	33
Overview	33
Structure of the COLOR TEMP ADJ Menu	34
Setting Lists in the COLOR TEMP ADJ Menu	34

	© Setting the Input Configuration – INPUT CONFIGURATION Menu	37
	Overview	
	Structure of the INPUT CONFIGURATION Menu	
	Setting Lists in the INPUT CONFIGURATION Menu	
	D System Configuration	
	- SYSTEM CONFIGURATION Menu	42
	Overview	
	Structure of the SYSTEM CONFIGURATION Menu	
	Setting Lists in the SYSTEM CONFIGURATION Menu	43
	E Installation Settings	40
	- INSTALLATION SETTINGS Menu	
	Overview	
	Structure of the INSTALLATION SETTINGS Menu	
	Setting Lists in the INSTALLATION SETTINGS Menu	4/
		50
	Overview	
	Structure of the FILE MANAGEMENT Menu	
	Setting Lists in the FILE MANAGEMENT Menu	
	G Displaying Information On the Monitor	
	– STATUS Menu	52
	Overview	52
	Structure of the STATUS Menu	52
	Setting Lists in the STATUS Menu	53
	⊞ Setting the Controller – CONTROLLER Menu	
	Overview	54
	Structure of the CONTROLLER Menu	54
	Setting Lists in the CONTROLLER Menu	54
		55
	Overview	55
	Setting Lists in the KEY PROTECT Menu	55
Appendixes		
	Specifications	56
	Available Signal Systems	
	Available Signal Formats	59
	Dimensional Drawing	61
	Connection Cable Specifications	
	for Color Temperature Probes	
	Menu Index	64
	Menu Index	

Overview

Chapter

Precautions

On safety

- Operate the unit only with a power source as specified in "Specifications" section.
- The nameplate indicating operating voltage, power consumption, etc., is located at the rear.
- Should any solid object or liquid fall into the cabinet, unplug the unit and have it checked by qualified personnel before operating it any further.
- Do not drop or place heavy objects on the power cord. If the power cord is damaged, turn off the power immediately. It is dangerous to use the unit with a damaged power cord.
- Unplug the unit from the wall outlet if it is not to be used for several days or more.
- Disconnect the power cord from the AC outlet by grasping the plug, not by pulling the cord.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.

On installation

- Allow adequate air circulation to prevent internal heat build-up.
 - Do not place the unit on surfaces (rugs, blankets, etc.) or near materials (curtains, draperies) that may block the ventilation holes.
- Do not install the unit in a location near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, excessive dust, mechanical vibration or shock.

On cleaning

To keep the unit looking brand-new, periodically clean it with a mild detergent solution. Never use strong solvents such as thinner or benzine, or abrasive cleansers since they will damage the cabinet. As a safety precaution, unplug the unit before cleaning it.

On repacking

Do not throw away the carton and packing materials. They make an ideal container which to transport the unit. When shipping the unit to another location, repack it as illustrated on the carton.

If you have any questions about this unit, contact your authorized Sony dealer.

On rack mounting

When the monitor is mounted on a rack, the temperature around the monitor may rise due to heat generated from other equipment and reduced air circulation, causing damage to the monitor. To prevent this, keep the space around the monitor (1U or more space above and below the monitor), and install a ventilation fan or take other effective countermeasures so that the temperature around the monitor is within the specified range: operating temperature range of 0 to 35 °C (32 to 95°F).

On magnetism

- Do not place the unit near any objects or pieces of equipment which generate magnetism, such as magnets, speakers, electric clocks, toys using magnets, health appliances, etc. Magnetism will cause picture bounce, oscillations or picture discoloration.
- Also, the picture may become fuzzy or the colors may not reproduce correctly due to earth magnetism. This depends on direction that the unit is installed. This is not equipment failure. In such a case, simply degauss the unit.

On the CRT

- Dust accumulates on the CRT easily. Clean the CRT when necessary with a soft cloth.

 The surface of the CRT is easily scratched; therefore, do not rub or touch the surface of the CRT unnecessarily since this may result in a scratched picture tube.
- If you touch the surface of the CRT, you may feel a weak electrical shock. This is simply static electricity that is generated on the surface of the CRT. It will not affect the human body.

On displaying the 4:3 signal

The 16:9 mask has been attached to the monitor at the factory. If the 16:9 button is pressed to change to the 4:3 aspect mode in this condition, the upper and lower portions of the image is hidden by the mask. To display the 4:3 image, replace the 16:9 mask with the supplied 4:3 mask.

For details, see "Installation of the 4:3 Mask" on page 21.

Overview

The BVM-A20F1U/A20F1M/A20F1A is 20-inch¹⁾ Trinitron^{®2)} Color Video Monitor. They are suitable for television stations or video production houses, where precise image reproduction is required.

Features

Multiformat

The monitor supports the principal formats (480I/480P/720P/1080I) for the digital broadcasts, NTSC and PAL color systems whose horizontal frequency is between 15.625 kHz and 45 kHz.³⁾

High resolution picture tube

The HR Trinitron picture tube produces a clear, high resolution image.

Aperture	Resolution at the center of the picture
0.3 mm	900 TV lines (4:3) 700 TV lines (16:9)

Separate control unit

Using a separate control unit reduces the space needed for the equipment.

The monitor is controlled by an optional BKM-15R Monitor Control Unit. The BVM-A20F1U/A20F1M/A20F1A can be connected to the BKM-15R via an optional BKM-35H Monitor Control Unit Attachment Kit.

Remote control function in the network connection (Ethernet control)

Up to 32 monitors and control units (max. 4) can be connected by the Ethernet (10BASE-T/100BASE-TX) connection. You can control individual monitors or monitor groups simply by entering monitor ID or group ID No.. You can also execute the same operation on all connected monitors, or put all connected monitors into the same setup and adjustment state.

^{1) 20-}inch refers to the CRT size of the monitor. For effective picture size, see "Specifications" on page 59.

²⁾ Trinitron® is a registered trademark of Sony Corporation.

³⁾ For details on the signal format, see "Available Signal Systems" on page 58 and "Available Signal Formats" on page 59.

Setup and adjustment with the "Memory Stick"

You can use a "Memory Stick" to save and load monitor setup and adjustment data via the BKM-15R Monitor Control Unit. If your system includes more than one monitor, you can use the "Memory Stick" to exchange data between monitors. This makes it easy to put all monitors in your system into the same setup and adjustment state.

Auto chroma/phase/matrix and white balance functions

The chroma, phase and matrix of the decoder are automatically adjusted with the auto chroma/phase/matrix function and the color temperature is automatically adjusted with the auto white balance function by using the BKM-14L Auto Setup Probe, etc.

Safe area display

The safe area display function equipped as standard displays the important image area.

Expandable input capability

The input connector configuration can be easily modified by simply inserting the optional adaptor into the input option slot at the rear of the monitor. Up to three adaptors can be installed.

Stable color temperature

The internal beam current feedback circuit maintains a constant color temperature over long periods of time.

Blue-only mode convenient for monitoring noise

All three CRT cathodes can be driven with a blue signal, producing a monochrome display. This mode is convenient for chroma and phase adjustment, and for monitoring VTR noise.

Matrix selection

The ITU601, ITU709 and SMPTE 240M matrix modes can be selected for individual input signals. The individual matrix data can be memorized in USER1 to 5 by adjusting the auto chroma/phase/matrix.

Digital uniformity circuit

Uniform white can be reproduced on every point of the screen, even in the peripheral area, thanks to the built-in digital uniformity circuit. The uniformity can be adjusted to match the installation conditions of the monitor. Automatic adjustment is also possible using the optional BKM-14L auto setup probe.

Other features

- Has relay contact parallel remote control connector.
- Built-in test signal generator for crosshatch, 100% white signal, 20% gray signal, gray scale, and PLUGE (Picture Line Up Generating Equipment).
- H delay/V delay function for checking of the horizontal and vertical synchronization signals.
- Auto and manual degaussing.
- Built-in CRT protection circuit.

- The monitor may be mounted in an EIA-standard 19-inch rack, using an optional BKM-30E20 Rack Mount Kit.
- The appearance of the monitor can be changed to 16:9 or 4:3 display by the replacement of a mask.
- Remote Maintenance function for checking the device information (Model Name, Serial No, IP Address and Software Version) and error information by connecting to Sony e-Support System with an SNMP protocol.

Options

For external control

BKM-15R Monitor Control Unit

A controller, allowing control of BVM-A series monitor. A controller, allowing you to control multiple monitors from one control unit.

BKM-14L Auto Setup Probe

A probe, allowing the automatic adjustment of the monitor's color temperature.

The probe is also used for white uniformity adjustment.

For installation

BKM-30E20 Rack Mount Kit

Rack mount kit for mounting the BVM-A20F1U/A20F1M/A20F1A in an EIA standard 19-inch rack.

BKM-35H Monitor Control Unit Attachment Kit

Assembly kit for attaching a BKM-15R Monitor Control Unit to the BVM-A20F1U/A20F1M/A20F1A.

SMF-700 Monitor Interface Cable

Used to connect the BVM-A20F1U/A20F1M/A20F1A monitor to the BKM-15R Monitor Control Unit.

Input adaptors

The input connector panel is configured by sliding the optional decoder adaptor or input expansion adaptor into the input option slot at the rear of the monitor. Up to three adaptors can be installed to the monitor.

The input signal type for each connector of the adaptor is set with the INPUT CONFIGURATION menu, in accordance with the configuration of the connector panel.

Note

When installing the adaptor, be sure to perform the necessary input signal setup with the INPUT CONFIGURATION menu. If the setup is not performed, the adaptors may not function correctly.

For information about the INPUT CONFIGURATION menu, see "[C] Setting the Input Configuration – INPUT CONFIGURATION Menu" on page 37.

BKM-61D SDI/Analog Multi Input Adaptor

Includes decoders for serial digital signals (525/625 component and NTSC/PAL composite) and analog composite signals (NTSC/PAL/PAL-M/SECAM). Input/output connectors for two serial digital channels and three analog channels are equipped.

Note

The signal from the MONITOR OUT connector of the BKM-61D does not satisfy the ON-LINE signal specifications.

BKM-62HS HD SDI/SDI Input Adaptor

Includes a decoder for HD serial digital signals and serial digital component (525/625) signals and input/output connectors for two serial digital signal. Dual-Link input is also available for HD serial digital signals.

Note

The signal from the MONITOR OUT connector of the BKM-62HS does not satisfy the ON-LINE signal specifications.

BKM-68X Analog Component Input Adaptor

Analog component signals or analog RGB signals are input. Input/output connectors for one channel are equipped.

Connector Panel Configuration

By adding the optional decoder adaptor or input expansion adaptors, the input/output connector panel can be assembled in a wide variety of configurations. The signals that each of the adaptors' connectors supports are given in the right table. The type of signal to be applied to each input/output connector is set with the INPUT CONFIGURATION menu.

Note

The BKM-61D cannot provide proper active-through outputs if a signal whose input No. format is not selected in the INPUT CONFIGURATION menu is input. (If AUTO is selected, input a signal which has the same format with the signal monitored last.)

For information about the INPUT CONFIGURATION menu, see "[C] Setting the Input Configuration – INPUT CONFIGURATION Menu" on page 37.

Input signal	Input Adaptor	SDI/ Analog Multi Input Adaptor BKM-61D	HD SDI/SDI Input Adaptor BKM-62HS	Analog Component Input Adaptor BKM-68X
Serial Digital	Component 525/625	0	0	
Input	Composite NTSC	0		
	Composite PAL	0		
	HD-SDI		0	
Analog Input	Composite NTSC	0		
	Composite PAL	0		
	Composite PAL-M	0		
	Composite SECAM	0		
	YРвРR 525/ 625			0
	GBR 525/ 625			0
	Y/C NTSC	0		
	Y/C PAL	0		
	Y/C PAL-M	0		
	Y/C SECAM	0		
	YP _B P _R /GBR 1080/48I			0
	YP _B P _R /GBR 1080/50Ι			0
	YP _B P _R /GBR 576/50P			0
	YP _B P _R /GBR 480/60P			0
	YРвРя/GBR 1035/60I			0
	YРвРя/GBR 1080/60I			0
	YP _B P _R /GBR 720/50P			0
	YP _B P _R /GBR 720/60P			0
Number Inputs	of digital	2	2	_
Number Input	of analog	3	-	1

O: Signal can be reproduced.


Installing a Decoder Adaptor

Each decoder adaptor can be installed in any input option slot on the rear panel.


Note

Turn off the main power of the monitor and disconnect the AC power cord before installing or removing adaptors.


Remove the cover of an input option slot on the rear panel of the monitor.

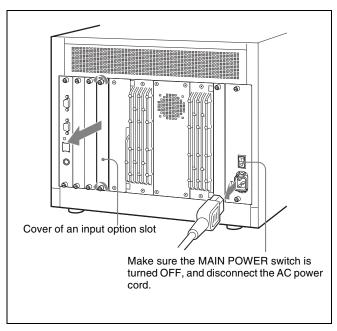

2 Insert the adaptor under the positioning mark on the top of the slot (on the left of the screw hole).

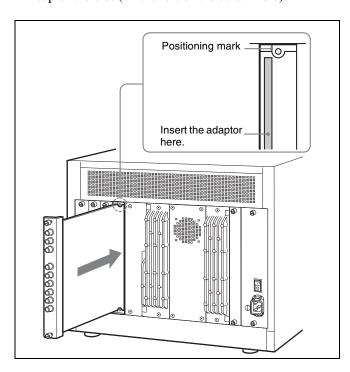


3 Push the adaptor in until it is firmly seated in the connector inside the monitor, then tighten the two screws to secure the adaptor.

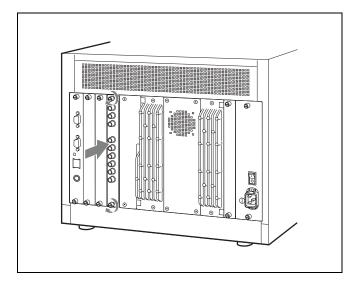

Notes


- The left side of the cover is equipped with shielded projections. Handle the cover carefully so as not to damage them.
- When the removed cover is reattached, check the up/ down side of the cover. The shielded projections should face the left side.

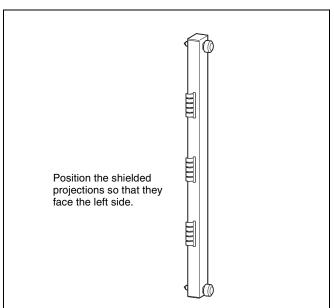

 If the shielded projections are damaged or the cover is attached in the wrong direction, the monitor may not conform to the radiation standards.

Location and Function of Parts

Front Panel of Monitor

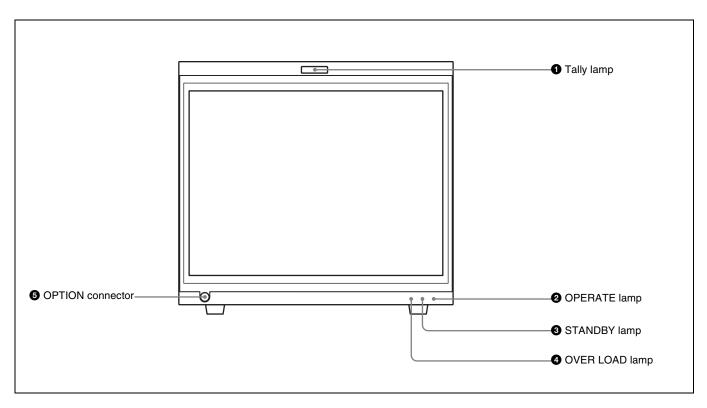

1 Tally lamp

With factory settings, the tally lamp lights when pins No. 8 and No. 9 of the PARALLEL REMOTE connector on the rear panel are shorted. By changing the setting in the PARALLEL REMOTE menu, different pins on the PARALLEL REMOTE connector can be used to control the tally lamp.

For information about the PARALLEL REMOTE menu, see "D System Configuration – SYSTEM CONFIGURATION Menu" on page 42.

2 OPERATE lamp

Lights when the monitor is put into operation mode from standby mode (see 3 STANDBY lamp) by pressing the MONITOR I/(1) switch of the BKM-15R.

Note

When the STANDBY lamp is blinking, the monitor cannot be put into operation mode (internal data initialization is taking place). Wait until the STANDBY lamp is steadily lit

3 STANDBY lamp

Lights when the monitor is in standby mode. The monitor will be in standby mode under the following conditions:

- The MAIN POWER switch (on the rear panel) is turned on (the STANDBY lamp will blink for a few moments after the switch is turned on, then will light).
- The monitor is changed from operation mode to standby mode by external control.

4 OVER LOAD lamp


Lights to warn of CRT overload.

When the OVER LOAD lamp is lit, use the unit with the contrast or brightness reduced.

6 OPTION connector

Used to connect the auto setup probe (BKM-14L, etc).

Rear Panel of Monitor

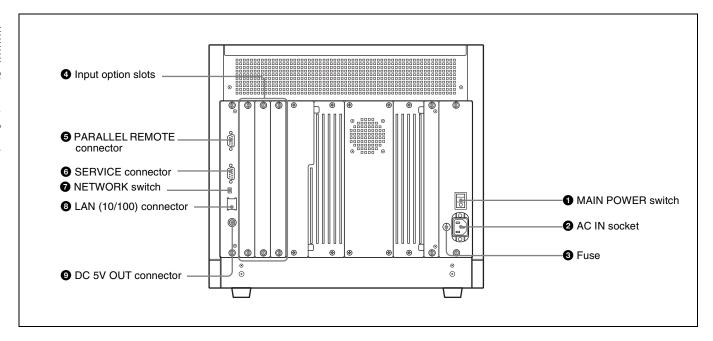


1 MAIN POWER switch

When turned on, the monitor enters operation mode. By setting in the SYSTEM CONFIGURATION menu, the monitor can also be set to enter standby mode when the MAIN POWER switch is turned on.

For information about the SYSTEM CONFIGURATION menu, see "D System Configuration – SYSTEM CONFIGURATION Menu" on page 42.

2 AC IN socket (3-pin)

Connects the monitor to an AC power source, via the supplied AC power cord.

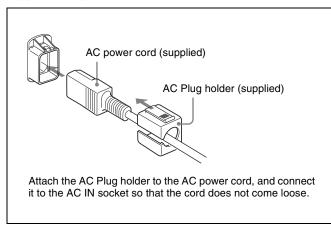

3 Fuse


Use a T4AH fuse.

4 Input option slots

The monitor may be fitted with optional input adaptors.

6 PARALLEL REMOTE connector (female, D-sub 9-pin)

Forms a parallel switch and controls the monitor externally. The pin assignment and factory setting function assigned to each pin are given below.

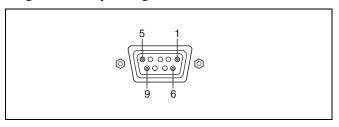

Pin number	Function
1	Set input signal channel 1 (numeric keypad function)
2	Set input signal channel 2 (numeric keypad function)
3	Select sync signal (SYNC button function)
4	Set the screen to monochrome, or set for automatic switching based on the input signal (MONO button function)
5	Marker (set in the channel) ON/OFF (MARKER button function)
6, 7	Not connected
8	Tally lamp ON/OFF
9	Ground

All pin function assignments can be changed with the PARALLEL REMOTE menu.

For information about the PARALLEL REMOTE menu, see "D System Configuration – SYSTEM CONFIGURATION Menu" on page 42.

To switch each function between on and off or between enable and disable, change pin connections in the following way.

ON or enabled: Short each pin and pin 9 together. **OFF or disabled:** Leave each pin open.

6 SERVICE terminal (male, D-sub 9-pin)

This connector is for use by service personnel only.

7 NETWORK switch

Set to LAN for the network connections. Set to PEER TO PEER when the monitor is connected directly to the LAN (10/100) connector of the BKM-15R (1 to 1 connection).

8 LAN (10/100) connector (10BASE-T/100BASE-TX) Connect to the network by using a 10BASE-T/100BASE-TX LAN cable (shield type, optional) or to the LAN (10/100) connector of the BKM-15R. Or connect to the LAN (10/100) connector of the BKM-15R by using the SMF-700 or the cable supplied with the BKM-35H.

CAUTION


- When an optional LAN cable is connected, use a shield type cable to prevent miss-operation due to noises. Also, to directly connect the monitor to the LAN (10/100) connector of the BKM-15R (NETWORK switch is set to PEER TO PEER) (1 to 1 connection), use a straight (shield type) cable.
- For safety, do not connect the connector for peripheral device wiring that might have excessive voltage to this port.

Follow the instructions for this port.

• The connection speed may be affected by the network system. This unit does not guarantee the communication speed or quality of 10BASE-T/100BASE-TX.

9 DC 5V OUT connector (female)

Supplies the DC power for the BKM-15R. Connect to the DC 5V IN connector of the BKM-15R with the SMF-700 or the cable supplied with the BKM-35H.

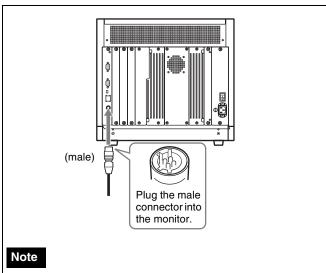


Be sure to plug the male connector of the cable into the DC 5V OUT connector on the monitor.

BKM-15R Monitor Control Unit (Optional)

The following is the location and function of parts and controls of the optional BKM-15R Monitor Control Unit.

Front

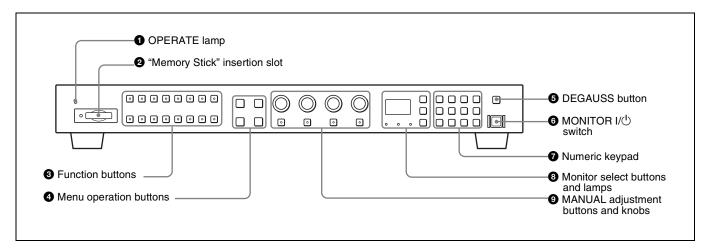

1 OPERATE lamp

The lamp lights when the unit is turned on.


2 "Memory Stick" insertion slot

The standard and duo type "Memory Stick" is available. Insert the "Memory Stick" (optional).

For inserting/ejecting the "Memory Stick", see page 19.

3 Function buttons

Change the operation conditions for the monitor. Each time the button is pressed, the LED turns on and turns off, and the operation conditions are changed.

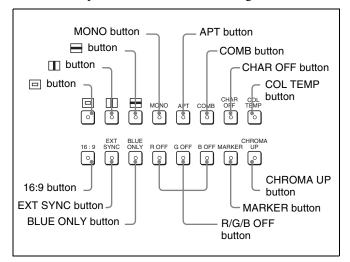

□ (Under scan) button: When this button is pushed in (ON), the picture is under scanned by 3%, and four ends of the raster is displayed on the screen.

- ☐ (H delay) button: When this button is pushed in (ON), the picture moves horizontally, and a horizontal sync signal appears.
 - Brightness of the picture increases automatically, and it makes it easy to check the sync part.
 - When the

 button is pressed in H delay mode, a pulse cross picture is displayed.
- - Brightness of the picture increases automatically, and it makes it easy to check the sync part.
 - When the

 □ button is pressed in V delay mode, a pulse cross picture is displayed.

MONO button: When this button is pushed in (ON), a monochrome picture is displayed. When the buttons is off, the monitor switches automatically between color and monochrome mode, depending on the color discrimination of the optional decoder.

Note

The MONO button does not function with the RGB signal input.

APT button : When this button is pushed in (ON), the frequency response can be modified. The degree of modification is set with the INPUT CONFIGURATION menu.

For information about the aperture modification frequency for each signal system, see "Aperture modification frequency for each signal system" on page 18.

For information about the INPUT CONFIGURATION menu, see "[C] Setting the Input Configuration – INPUT CONFIGURATION Menu" on page 37.

COMB button: Turn the comb filter on and off.

This function is available when the BKM-61D SDI/
analog multi input adaptor is installed. (For NTSC,
PAL and PAL-M only)
The comb filter is set in the YC SEP menu and NTSC
COMB FILTER menu of the INPUT
CONFIGURATION menu.

For information about the YC SEP menu and the NTSC COMB FILTER menu, see "[C] Setting the Input Configuration – INPUT CONFIGURATION Menu" on page 37.

- **CHAR OFF button:** When this button is pushed in (ON), the characters disappear from the monitor on the MANUAL menu of some menus.
- **COL TEMP button:** When this button is pushed in (ON), you can access directly the MANUAL menu.
- **16:9 button:** When this button is pushed in (ON), the aspect ratio changes to 16:9, and when set to OFF, the aspect ratio changes to 4:3.

The aspect ratio is fixed to 16:9 when the signal of some signal formats is input. For details, see "Available Signal Systems" on page 58.

EXT SYNC button: This is available when BKM-68X analog component input adaptor (optional) is installed. When this button is pushed in (ON), the signal from the BKM-68X synchronizes to the sync signal input to the SYNC connectors on the rear panel (EXT SYNC). When set to OFF, it synchronizes to the sync signal included in the signals being monitored (INT SYNC).

Notes

- When INT SYNC is selected, use a component or Y/C signals including a sync signal on the Y signal, and use RGB signal including a sync signal on the G signal.
- This does not function when an analog composite signal,
 Y/C signal or serial digital signal is monitored.

- **BLUE ONLY button:** When this button is pushed in (ON), red and green signals are cut, and only the blue signal is displayed as a monochrome picture. It makes it easy to adjust CHROMA and to check VTR noise.
- **R/G/B OFF button:** When these buttons are pushed in (ON), R (red), G (green), and B (blue) beams are cut respectively.
- MARKER button: When this button is pushed in (ON), a marker is displayed on the screen.

 The display mode of the marker is set in the MARKER MODE menu of the INPUT CONFIGURATION menu.


For information about the MARKER MODE menu, see " [C] Setting the Input Configuration – INPUT CONFIGURATION Menu" on page 37.

Note

When EXT SYNC is selected, the marker may not be shown in the correct position.

CHROMA UP button: When this button is pushed in (ON), the chroma setting increases 12 dB.

4 Menu operation buttons

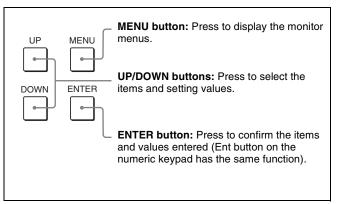

For more information about menu operation, see "Basic Menu Operations" on page 25.

6 DEGAUSS button

Press to degauss the CRT (every time the monitor is turned on, the CRT is degaussed automatically). To degauss again, wait for more than five minutes.


6 MONITOR I/ switch

Press to turn on the monitor or set it in standby mode. By setting with the monitor select button, it is possible to turn on the power of the specified monitors only, or of all monitors at the same time, or set in standaby mode.

For monitor select buttons, see ""Selecting the Monitor/ Group" on page 23.

7 Numeric keypad

Use to designate the channel number for the input signal to be monitored, or to enter the setting values with the menus.

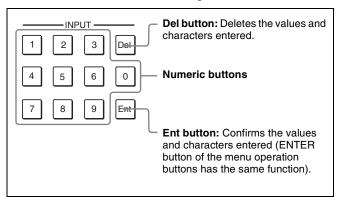


Channel number entry method

When selecting a channel number from 1 to 9, press onedigit channel number on the numeric keypad. When selecting a channel number from 10 to 99, press 0 button, then press the two-digit channel number.


8 Monitor select buttons and lamps

When multiple monitors are connected by the network connection, one particular monitor, monitor group or all monitors are selected by setting the MONITOR ID No., GROUP ID No. or ALL.

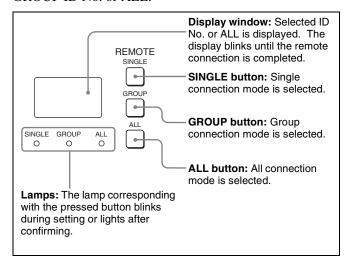

9 MANUAL adjustment buttons and knobs


Each press of one of these buttons turns the button's green LED on or off. When the corresponding button is on (lit), it is possible to manually adjust the contrast, brightness, chroma and phase by turning the corresponding knobs. The PHASE knob is also used to enter the setting values with the menus. It is possible to set the preset value for each adjusting item with the PICTURE ADJ menu.

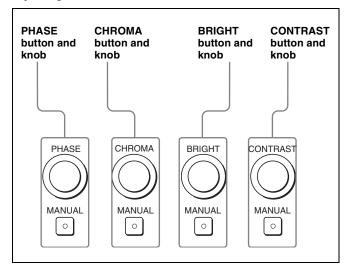

For information about the PICTURE ADJ menu, see "APPLICTURE ADJ Menu" on page 31.

Notes


- The signal phase cannot be adjusted when using the SECAM, PAL, PAL-M, analog component or SDI (component serial digital or composite PAL) format.
- The phase and chroma cannot be adjusted when using RGB signals.

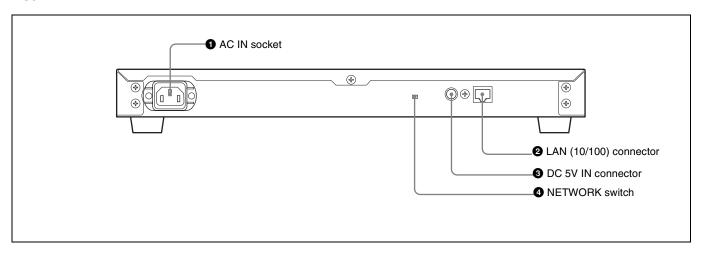

1 AC IN socket (3-pin)

Connects the monitor control unit to an AC power source, via the supplied AC power cord.

The AC IN connector takes precedence over the DC 5V IN connector. When the AC power is used, the connection to the DC 5V IN connector is not necessary.

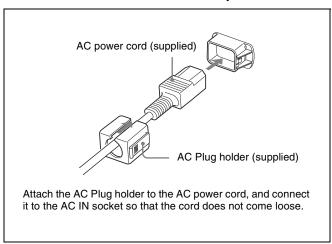

2 LAN (10/100) connector (10BASE-T/100BASE-TX)

Connect to the network by using a 10BASE-T/100BASE-TX LAN cable (shield type, optional) or to the LAN (10/100) connector of the monitor. Or connect to the LAN (10/100) connector of the monitor by using the SMF-700 or the cable supplied with the BKM-35H.

CAUTION

- When an optional LAN cable is connected, use a shield type cable to prevent miss-operation due to noises. Also, to directly connect the BKM-15R to the LAN (10/100) connector of the monitor (NETWORK switch is set to PEER TO PEER) (1 to 1 connection), use a straight (shield type) cable.
- For safety, do not connect the connector for peripheral device wiring that might have excessive voltage to this port.


Follow the instructions for this port.

• The connection speed may be affected by the network system. This unit does not guarantee the communication speed or quality of 10BASE-T/100BASE-TX.

3 DC 5V IN connector (male)

Connect to the DC 5V OUT connector of the monitor by using the SMF-700 or the cable supplied with the BKM-35H

The power is supplied from the monitor via this cable. The connection to the AC IN socket is not necessary. When the AC power cord is connected, this connector does not function.

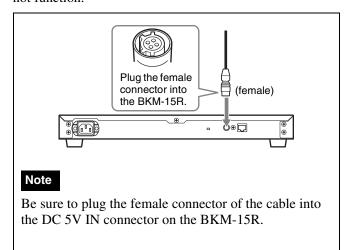

4 NETWORK switch

Set to LAN for the network connections. Set to PEER TO PEER, when the BKM-15R is connected directly to the LAN (10/100) connector of the monitor (1 to 1 connection).

Aperture modification frequency for each signal system

Signal system	Serial diç	jital input		Analog input	
	SDI	HD SDI	Composite (Y/C)	Component (YPBPR)	GBR
575/50I	5 MHz		5 MHz	5 MHz	5 MHz
480/60I	5 MHz		5 MHz	5 MHz	5 MHz
1080/481		25 MHz		25 MHz	25 MHz
1080/50I		25 MHz		25 MHz	25 MHz
576/50P				25 MHz	25 MHz
480/60P				25 MHz	25 MHz
1035/60I		25 MHz		25 MHz	25 MHz
1080/60I		25 MHz		25 MHz	25 MHz
720/50P		25 MHz		25 MHz	25 MHz
720/60P		25 MHz		25 MHz	25 MHz

An empty frame in the table means that the signal cannot be input or the aperture modification cannot operate for that signal even if it is input.

Inserting/Ejecting the "Memory Stick"

This product has a slot that can take both standard size and Duo size. All products with a slot such as this are equipped with a system which automatically measures the size of an inserted medium. For this reason, both the standard-size "Memory Stick" and smaller "Memory Stick Duo"/ "Memory Stick PRO Duo" can be used with this product without a "Memory Stick Duo" adaptor.


Proceed as illustrated to insert and eject an optional "Memory Stick".

See each menu for information about operations on "Memory Stick" data.

Note

Do not eject the "Memory Stick" while data is being saved or loaded.


To insert the "Memory Stick"

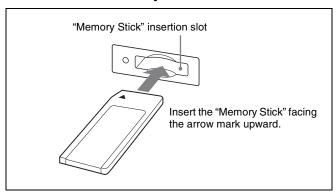

Notes

- "Memory Stick Duo"/"Memory Stick PRO Duo" can be used without a "Memory Stick Duo" adaptor.
- Be sure to insert the "Memory Stick" in the correct direction. Forcing the "Memory Stick" in the wrong way may damage it.
- Insert only the "Memory Stick" into the "Memory Stick" slot. Attempting to insert other objects into the "Memory Stick" slot may damage the product.

To eject the "Memory Stick"

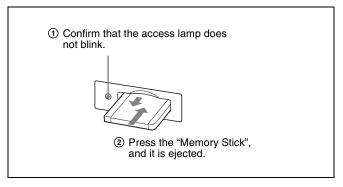

Notes on "Memory Stick"

What is "Memory Stick"?

"Memory Stick", "Memory Stick PRO", "Memory Stick Duo", ..., MEMORY STICK PRO, and MEMORY STICK DUO are trademarks of Sony Corporation.

"Memory Stick" is a compact, portable and versatile IC (Integrated Circuit) recording medium with a data capacity that exceeds that of a floppy disk. "Memory Stick" is specially designed for exchanging and sharing digital data among "Memory Stick"-compatible products. Because it is removable, "Memory Stick" can also be used for external data storage.

"Memory Stick" is available in two sizes: standard size and compact "Memory Stick Duo" size.

Types of "Memory Stick"

"Memory Stick" is available in the following six types to meet various functional requirements.

"Memory Stick"

Stores any type of data except copyright-protected data that require MagicGate copyright protection technology.

"Memory Stick (MagicGate/High-Speed Transfer Compatible)"

Equipped with MagicGate copyright protection technology and allows high-speed data transfer.

This type of "Memory Stick" can be used with "Memory Stick"-compliant, "MagicGate Memory Stick"-compliant, and "Memory Stick PRO"-compliant products. 1)

1) Operation is not guaranteed for all of the compliant products (Some products may not accept this type of "Memory Stick.")

This model is not compliant with high-speed data transfer with this type of "Memory Stick."

"MagicGate Memory Stick"

Equipped with MagicGate copyright protection technology.

This model is not compliant.

"Memory Stick-ROM"

Stores prerecorded, read-only data. You cannot record on "Memory Stick-ROM" or erase the prerecorded data.

"Memory Stick" (with Memory Select Function)

Composed of multiple 128 MB memory units.

The mechanical switch at the back of the "Memory Stick" allows you to select the memory unit to be used depending on usage.

The memory units cannot be used simultaneously and continuously.

"Memory Stick PRO"

"Memory Stick" with MagicGate copyright protection technology, exclusive for "Memory Stick PRO"-compliant products.

"Memory Stick Duo"/"Memory Stick PRO Duo"

This model is the "Memory Stick" of the Duo size.

Available types of "Memory Stick"

- "Memory Stick", "Memory Stick PRO", "Memory Stick Duo" and "Memory Stick PRO Duo" are used for this model. However the data displayed on this unit is not protected by the MagicGate copyright protection technology because this model is not compliant with the "MagicGate" standard.
- Although an operation check of this product has been performed with a "Memory Stick" of up to 4GB, please note that operation is not guaranteed for every type of "Memory Stick".


Note on data read/write speed

Data read/write speed may vary depending on the combination of the "Memory Stick" and "Memory Stick" compliant product you use.


What is MagicGate?

MagicGate is copyright protection technology developed by Sony Corporation.

Before using a "Memory Stick"

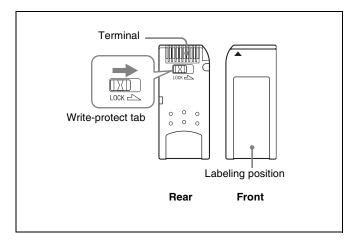

Before using a "Memory Stick Duo"/ "Memory Stick PRO Duo"

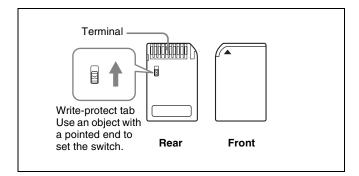

Notes

- You cannot record or erase data when the write-protect tab on the "Memory Stick" is set to LOCK.
- Image data may be damaged in the following cases:
 - If you remove the "Memory Stick," or turn the power off when the access lamp is lit or flashing
 - If you use a "Memory Stick" near static electricity or a magnetic field
- We recommend backing up important data.
- Do not attach anything other than the supplied label to the "Memory Stick" labeling position.
- Attach the label so that it does not stick out beyond the labeling position.
- Carry and store the "Memory Stick" in its case.
- Do not touch the connector of the "Memory Stick" with anything, including your finger or metallic objects.
- Do not strike, bend, or drop the "Memory Stick."
- Do not disassemble or modify the "Memory Stick."
- Do not allow the "Memory Stick" to get wet.
- Do not use or store the "Memory Stick" in a location that is:
 - Extremely hot, such as in a car parked in the sun
 - Under direct sunlight
 - Very humid or subject to corrosive substances
- Do not insert multiple "Memory Sticks" at the same time. This may cause damage to the product.
- When you use "Memory Stick Duo"/"Memory Stick PRO Duo" with this product, be sure to insert it in the right direction. Inserting it in the wrong direction may cause damages to the product.
- "Memory Stick Duo"/"Memory Stick PRO Duo" should be kept away from small children to prevent them from accidentally swallowing it.
- Up to 1000 files can be memorized in one "Memory Stick". When more than 1000 files are created, the warning "TOO MANY FILES" is displayed. Delete an unused file using the DELETE menu in the FILE MANAGEMENT menu.

For the DELETE menu in the FILE MANAGEMENT menu, see "F System Data Operation – FILE MANAGEMENT Menu" on page 50.


• Up to 20 characters can be used for the file name. When more than 20 characters are used for the file name, the file is not displayed.

Installation of the 4:3 Mask


When the aspect ratio is switched from 16:9 to 4:3, replace the 16:9 mask with the supplied 4:3 mask.

Installing the 4:3 mask

Remove the 16:9 mask by pulling the top side out and then lifting up from the bottom side.

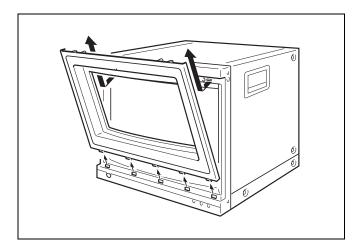

2 Install the 4:3 mask (supplied) by inserting the bottom side and then pressing the top in.

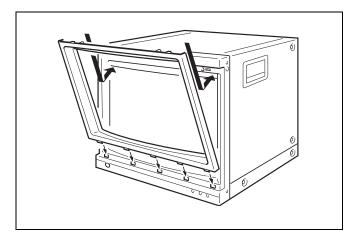


Replacing the 16:9 mask

Remove the 4:3 mask and replace the 16:9 mask using the same procedures as those for installing the 4:3 mask.

Connections

Connecting to the BKM-15R

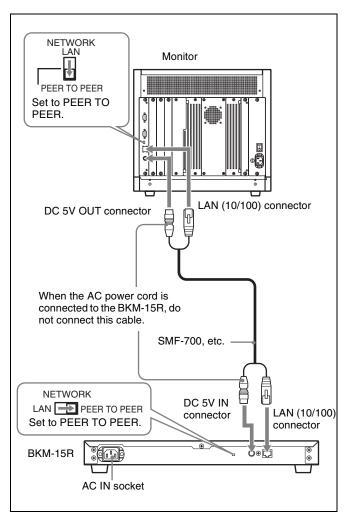

Notes

- Turn off the MAIN POWER switch of the monitor before connecting the units.
- Set the NETWORK switch of the monitor and the BKM-15R to PEER TO PEER.
- Connect the LAN (10/100) connector of the monitor and the LAN (10/100) connector of the BKM-15R by using a 10BASE-T/100BASE-TX straight LAN cable (shield type, optional), the SMF-700 or the cable supplied with the BKM-35H.
- When an optional LAN cable is connected, use a shield type cable to prevent miss-operation due to noises.
- Connect the DC 5V OUT connector of the monitor and the DC 5V IN connector of the BKM-15R by using the SMF-700 or the cable supplied with the BKM-35H.
 The power is supplied from the monitor via this cable.
 The connection to the AC IN socket is not necessary.




Using the BKM-15R with the AC power

Connect the AC power cord supplied with the BKM-15R to the AC IN socket.

The AC IN connector takes precedence over the DC 5V IN connector.

When the AC power is used, the connection to the DC 5V IN connector is not necessary.

Connecting to the Network

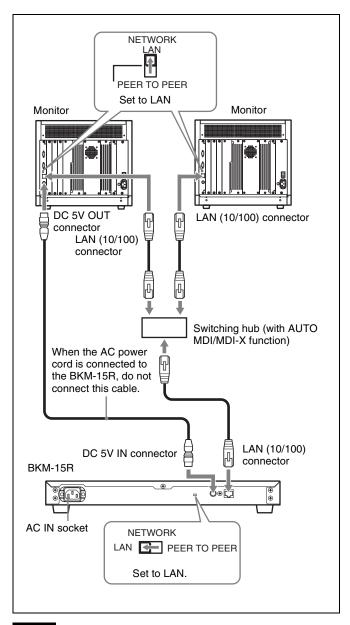

Notes

- Turn off the MAIN POWER switch of the monitor before connecting the units.
- Set the NETWORK switch of the monitors and the BKM-15R to LAN.
- Connect to the network by using a 10BASE-T/ 100BASE-TX cable (shield type, optional).

- When an optional LAN cable is connected, use a shield type cable to prevent miss-operation due to noises.
- Up to 32 monitors and the BKM-15R (max. 4) can be connected.
- The monitor is controlled by the BKM-15R within the same subnetwork router.
- Use an optional switching hub with auto select function (AUTO MDI/MDI-X) of a straight/cross cable.
- Connect the DC 5V OUT connector of the monitor and the DC 5V IN connector of the BKM-15R by using the SMF-700 or the cable supplied with the BKM-35H. The power is supplied from the monitor via the DC 5V cable. The connection to the AC IN socket is not necessary.

Using the BKM-15R with the AC power

Connect the AC power cord supplied with the BKM-15R to the AC IN socket.

The AC IN connector takes precedence over the DC 5V IN connector.

When the AC power is used, the connection to the DC 5V IN connector is not necessary.

Chapter 1 Overview

Selecting the Monitor/Group

When the multiple monitors are connected by the network connections, you can connect the monitors from the control unit by designating the monitor ID No. or group ID No..

About monitor ID No. and group ID No.


The BKM-15R Monitor Control Unit is able to control the multiplex monitors connected via the LAN (10/100) connector. By giving each monitor a monitor ID No. and

group ID No., it is possible to control just a specific monitor or monitor group.

With the NETWORK menu, each monitor can be set with a monitor ID No. or group ID No., between 1 and 99. The monitor select buttons are used to select a particular monitor or group by entering a monitor ID No. or group ID No..

For the network menu, see " D System Configuration – SYSTEM CONFIGURATION Menu" on page 42.

About monitor select buttons and lamps

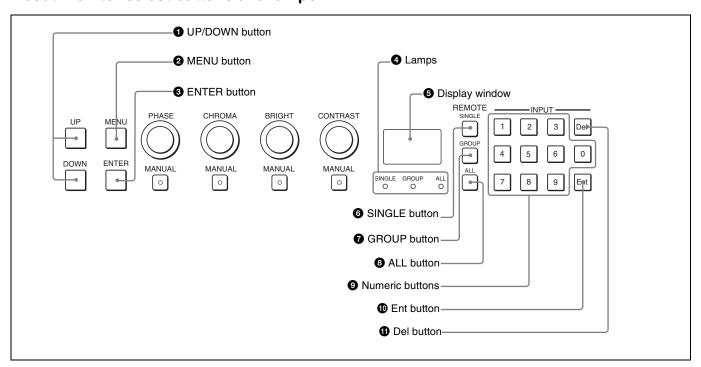

Pin number	Function
UP button	Increases the ID No
DOWN button	Decreases the ID No
2 MENU button	In setting mode, goes back to the previous setting.
ENTER button	Confirms the setting.
4 Lamps	The lamp corresponding with the pressed button blinks during setting ID No. or lights after confirming.
Display window	Selected monitor ID No., group ID No. or ALL is displayed. The display blinks until the remote connection is completed.

Pin number	Function
6 SINGLE button	Selects SINGLE connection mode. The monitor ID number is displayed on all connected monitors when the button is held pressed.
⑦ GROUP button	Selects GROUP connection mode. The group ID number is displayed on all connected monitors when the button is held pressed.
3 ALL button	Selects ALL connection mode.
Numeric buttons	Enters the ID No
Ent button	Confirms the setting.
Del button	Deletes the ID No

Remote connection

- 1 Set the different IP address to each monitor and controller.
- 2 Set the different monitor ID No. to each monitor and if necessary, group ID No..
- 3 Set the NETWORK switch (on the rear) of the monitor and the controller to LAN.
- 4 Select the connection mode by pressing the SINGLE, GROUP or ALL button.

The lamp corresponding with the pressed button flashes and lights after recognizing the monitor.

5 Select the monitor ID No. for the single connection mode or group ID No. for the group connection mode by pressing the UP/DOWN or numeric button.

Up to 99 is entered as the monitor ID or group ID No..

6 Press the ENTER **3** or Ent **10** button to confirm the setting.

The monitor ID No., group ID No. or ALL is displayed in the display window.

After setting steps 1 to 3, follow steps 4 to 6 for the remote connection.

Notes

- When no assigned monitor ID No. or group ID No. is selected, setting is not changed and the previous connection status is maintained.
- When there is same monitor ID No., the ID No. with the lower IP address is selected.
- When the different monitor ID No. is set but the same IP address as that of another monitor is set, the monitor cannot be connected to the network.
- To remotely control monitors connected in the network, the MONITOR ID, GROUP ID or IP address of monitors should be correctly set in the NETWORK menu and NETWORK SETTINGS menu of the SYSTEM CONFIGURATION menu. Also, the IP address of the monitor should be correctly set in the NETWORK SETTINGS menu of the CONTROLLER menu.

For information about the NETWORK menu and NETWORK SETTINGS menu, see "[D] System Configuration – SYSTEM CONFIGURATION Menu" on page 42.

For information about the NETWORK SETTINGS menu, see "H Setting the Controller – CONTROLLER Menu" on page 54.

Selecting the Default Settings

BVM-A20F1M only

When you turn on the unit for the first time after purchasing it, select the area where you intend to use this unit from among the options. When the area is set, the color temperature of CH1 to CH30 is set to the default value of each area.

	Color temperature
JAPAN	D93
OTHER AREA	D65

1 Turn on the power.

The SELECT SETTING screen appears.

SELECT SETTING

JAPAN
COLOR TEMP: D93

OTHER AREA
COLOR TEMP: D65

2 Select the area where you intend to use the unit by using the menu operation buttons (*see page 25*).


Menu



Basic Menu Operations

Menu Operation Buttons

The menu is operated using the menu operation buttons on the BKM-15R Monitor Control Unit (optional).

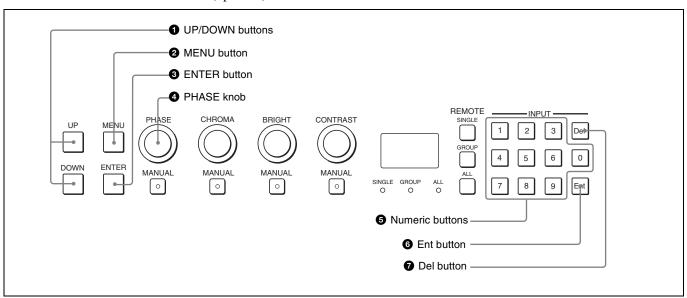

The functions of the menu operation buttons are described below.


Button	Function
UP button	Moves the cursor upward. In setting mode, increases the setting and adjustment values.
DOWN button	Moves the cursor downward. In setting mode, decreases the setting and adjustment values.
MENU button	Displays the menus. Goes back to the menu of the upper level (on the Main Menu, goes back to the normal picture).
3 ENTER button	Executes the items selected and settings.

Button	Function
4 PHASE knob	By turning this knob clockwise, the cursor moves upward. In setting mode, increases the setting and adjustment values (has the same function as UP button). By turning this knob counterclockwise, the cursor moves downward. In setting mode, decreases the setting and adjustment values (has the same function as DOWN button).
6 Numeric buttons	Enters the numerical values.
6 Ent button	Executes the items selected and settings.
Del button	Deletes the values and characters entered.

Displaying the Menu

Press the MENU button.

The main menu is displayed on the screen.

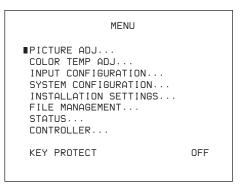

When you select one item on the main menu, the level 1 menu corresponding to the selected item on the main menu appears.


For information about the items on the main menu, see "Menu Structure" on page 29.

Note

Menu settings displayed in blue cannot be changed.

About menu numbers

For purposes of explanation in this manual, the menu number is used, the alphabet determines the classification of menu on the main menu, and the numbers determine the level and the order. These menu numbers are not shown on the screen.

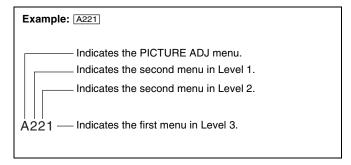


Note

Only when the explanation is required, the menu number is used. The menu number is not counted when explanation is not required.

Menu Operation

Follow the steps described below to display the menu and perform the adjustment or setup you wish.

- Press the MENU button.
 The main menu is displayed.
- 2 Using the UP or DOWN button or PHASE knob, move the cursor to the desired item. (Example: select the INPUT CONFIGURATION... menu by pressing the DOWN button.)

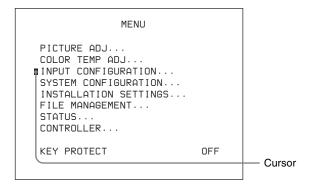


3 Press the ENTER button or Ent button.

The Level 1 of the selected menu is displayed.

```
INPUT CONFIGURATION
CHO<sub>1</sub>
■FORMAT...
                  SDI HD/D1 AUTO
  SLOT NO
                          OPTION1
   INPUT NO
                         DIGITAL1
 SCREEN ASPECT
                              16:9
 SCAN SIZE
                           NORMAL
 SYNC MODE
 COLOR TEMP
                               D93
PICTURE PRESET
                          PRESET1
 MATRIX...
```

4 Repeat steps 2 and 3 until the desired menu is displayed.

For more information about setting and adjustments, see below.

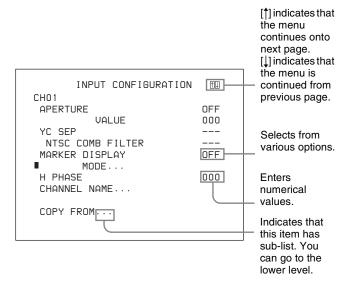

To abort menu operation

Press the MENU button. The menu of the upper level is displayed.

The setting or adjustment being performed is canceled, and data loading or saving is aborted.


If "NG" or "ERROR" appears during menu operation

Press the MENU button to return to the menu in use.

Choosing one of two or more selections Selecting in setting mode

1 Using the UP or DOWN button or PHASE knob, move the cursor to the desired item and press the ENTER or Ent button.

The selected item is displayed in yellow text and set to setting mode.

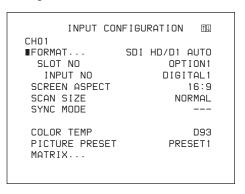

- **2** Using the UP or DOWN button or PHASE knob, change the setting.
- **3** Press the ENTER or Ent button.

The setting is confirmed (The item is displayed in white text again).

Selecting from the setting list

1 Using the UP or DOWN button or PHASE knob, move the cursor to the desired item in the setting list.

```
PARALLEL REMOTE(2/2) 1 PIN
BLUE ONLY
R OFF
G OFF
B OFF
CHROMA UP

MARKER
TALLY
DEGAUSS
POWER OFF
```


2 Press the ENTER or Ent button.

The display returns to the menu of the upper level, and the selected setting is executed.

Entering a numerical value

1 Using the UP or DOWN button or PHASE knob, move the cursor to the desired item and press the ENTER or Ent button.

The selected item is displayed in yellow text and set to setting mode.

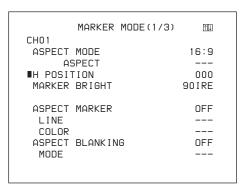


- **2** Set the value in one of the following three ways:
 - Enter the value directly using the numeric keypad and press the ENTER or Ent button.
 - Select the value using the UP or DOWN button.
 - Select the value using the PHASE knob.
- **3** Press the ENTER or Ent button.

The setting is confirmed (The item is displayed in white text again).


Entering characters

1 Display the setting menu and set the cursor to NEW NAME using the UP or DOWN button or PHASE knob.

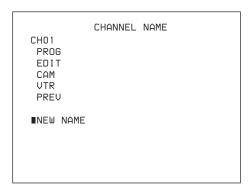

2 Press the ENTER or Ent button.

"?" is displayed in yellow. The "?" indicates the position where character input is possible.

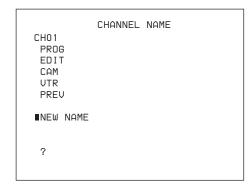

3 Select the character you wish to enter using the UP or DOWN button or PHASE knob.

When you press the UP button, or turn the PHASE knob clockwise, the characters and symbols appear in the order shown below.

A B......Y Z 0 1......8 9 (,) :;
$$. - + / \& (space)$$
?


If you press the DOWN button or turn the PHASE knob counterclockwise, the characters and symbols appear in the reverse order described above.

The usable symbols are limited depending on the menu.

"(space)" is not used as a first character of a sentence.

4 Press the ENTER or Ent button.

The selected character is entered.

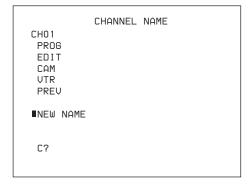

5 Repeat steps **3** and **4** until all the characters are entered, then press the ENTER or Ent button.

The selected characters are confirmed, and the display returns to the menu of the previous level.

To correct the entered character

Press the Del button on the numeric keypad. The character on the left side of the "?" (in yellow) is deleted.

Menu Structure

The main menu and Level 1 are shown below. Detailed information on the menu levels is described at the top of each menu explanation.

Main menu	Level 1	Functions
PICTURE ADJ 🖪		Adjusts the picture. (page 31)
	PRESET VALUE	Selects the preset data to be adjusted. (page 31)
	AUTO A1	Sets the chroma/phase/matrix automatically. (page 32)
	MANUAL ADJUST A2	Sets the preset values for the phase/chroma/brightness/contras with the MANUAL adjustment knob. (page 32)
	COPY FROM A3	Copies the other picture preset data. (page 33)
COLOR TEMP ADJ B		Adjusts the color temperature. (page 33)
	PRESET VALUE	Selects the color temperature data to be adjusted. (page 34)
	MANUAL B1	Sets the color temperature with the MANUAL knob. (page 34)
	AUTO B2	Sets the color temperature automatically. (page 35)
	COPY FROM B3	Copies the other color temperature. (page 36)
	RESTORE FACTORY DATA B4	Resets the color temperature. (page 36)
	ANALYZE B5	Reads the color temperature and luminance value. (page 36)
NPUT CONFIGURATION C		Sets the data for the input signals. (page 37)
	CHxx	Current channel is indicated. (page 38)
	FORMAT C1	Selects the signal format. (page 39)
	SLOT NO	Selects the slot number. (page 38)
	INPUT NO	Selects the input connector number. (page 38)
	SCREEN ASPECT	Sets the aspect ratio. (page 38)
	SCAN SIZE	Sets the scan size. (page 38)
	SYNC MODE	Sets the sync signal. (page 38)
	COLOR TEMP	Selects the color temperature. (page 38)
	PICTURE PRESET	Selects the picture adjustment preset. (page 39)
	MATIRIX C2	Sets the matrix of the signal system. (page 40)
	APERTURE	Chooses whether to use aperture adjustment or not. (page 39)
	VALUE	Enters the aperture adjustment value. (page 39)
	YC SEP	Selects Y/C separation filter. (page 39)
	NTSC COMB FILTER	Sets the NTSC COMB ilter. (page 39)
	MARKER DISPLAY	Chooses whether or not to display the marker. (page 39)
	MODE C3	Sets the marker aspect, safe area, safe title, etc. (page 40)
	H PHASE	Adjusts the horizontal picture position. (page 39)
	CHANNEL NAME C4	Sets the channel name. (page 41)
	COPY FROM C5	Copies the data from other channel. (page 42)

SYSTEM CONFIGURATION D NETWORK D1 PARALLEL REMOTE D2 POWER D3 BLANKING SETTINGS D4 ON SCREEN SET D5	Sets the system of the remote control function, LAN, etc. (page 42) Sets the IP address, subnet mask and default gateway. (page 43) Sets the remote control function. (page 44) Sets the condition of the monitor when the main power or MONITOR I/(¹) switch is turned on. (page 44) Adjusts the data for the picture. (page 45) Sets the data for the screen display. (page 45)
PARALLEL REMOTE D2 POWER D3 BLANKING SETTINGS D4 ON SCREEN SET D5	Sets the remote control function. (page 44) Sets the condition of the monitor when the main power or MONITOR I/U switch is turned on. (page 44) Adjusts the data for the picture. (page 45)
POWER D3 BLANKING SETTINGS D4 ON SCREEN SET D5	Sets the condition of the monitor when the main power or MONITOR I/(¹) switch is turned on. (page 44) Adjusts the data for the picture. (page 45)
BLANKING SETTINGS D4 ON SCREEN SET D5	MONITOR I/U switch is turned on. (page 44) Adjusts the data for the picture. (page 45)
ON SCREEN SET D5	1 2 1
	Sets the data for the screen display. (page 45)
	1 , 1 9 ,
PASSWORD D6	Sets the passwords for the menu. (page 45)
MAINTENANCE D7	Displays the menu for maintenance. (page 45)
INSTALLATION SETTINGS E	Sets the initial value of landing, alignment, etc. (page 46)
LANDING ADJUST E1	Corrects the shift of beam landing caused by the earth's magnetism. (page 47)
ALIGNMENT E2	Adjusts the position and size of the picture. (page 47)
DIGITAL UNIFORMITY ADJ E3	Adjusts the color unevenness of the CRT. (page 48)
FILE MANAGEMENT F	Saves, copies and deletes the system data. (page 50)
SAVE TO F1	Writes the data. (page 51)
COPY FROM F2	Reads or copies the data. (page 51)
DELETE F3	Deletes the file. (page 51)
DATA MAINTENANCE F4	Services the system data. (page 51)
STATUS G	Displays the information about the monitor or options installed in the monitor. (page 52)
CH STATUS G1	Displays the information of the used channel. (page 53)
SLOT STATUS G2	Displays the data about the optional board installed in the option slot 1 to 3. (page 53)
MODEL NAME	Displays the model name. (page 53)
SERIAL NO	Displays the serial number. (page 53)
SOFTWARE VERSION	Displays the software version. (page 53)
OPERATION TIME	Displays the operation time. (page 53)
CRT TURN ON TIME	Displays how long the CRT is used. (page 53)
IP ADDR	Displays the IP address of the monitor. (page 53)
CONTROLLER STATUS G3	Displays the information on the controller. (page 53)
CONTROLLER [H]	Sets the network of the controller. (page 54)
MONITOR ID DISPLAY [H1]	Sets the display method of the monitor select display window. (page 54)
NETWORK SETTING H2	Displays the NETWORK SETTING menu. (page 54)
NETWORK SW	Sets the Ethernet connections. (page 54)
SNMP SETTINGS H3	Sets CONTACT, NAME, LOCATION and TRAP. (page 54)
KEY PROTECT []	Sets whether or not to lock the buttons on the control unit. (page 55)

A Picture Adjustment - PICTURE ADJ Menu

Overview

The auto chroma/phase/matrix adjustment and preliminary adjustment of contrast/brightness/chroma/phase to set the preset value to each knob are carried out.

- Selecting the preset data to be adjusted (PRESET VALUE menu)
- Auto chroma/phase/matrix adjustment (AUTO... menu)

An external color bar signal is necessary.

Matrix data is changed or reset to the default setting.

- Adjustment the preset values for phase/chroma/ brightness/contrast with the MANUAL knobs (MANUAL ADJUST menu)
- Copying data (COPY FROM... menu)
 Other data in the monitor, other monitors or "Memory Stick" is copied.

Structure of the PICTURE ADJ Menu

Level 1	Level 2	Level 3
PRESET VALUE		
AUTO A1	AUTO ADJUST A11	
	MATRIX VALUE	
	MATRIX RESET	
	COLOR BAR	
MANUAL ADJUST		
COPY FROM A3	PRESET VALUE	
	OTHER MONITOR	OTHER MONITOR [A321]
	MEMORY STICK	MEMORY STICK A331

Setting Lists in the PICTURE ADJ Menu

This section explains the setting lists displayed in the menu.

How to read the setting lists

• For purposes of explanation, each setting list is preceded by a menu number. These numbers are not displayed on the screen.

For more information on the menu number, see "About menu numbers" on page 26.

• The arrow mark (⇒) refers you to another setting list that appears after you make the setting, or to an operation that is to be carried out as a result of the setting.

A PICTURE ADJ menu

PRESET VALUE: The picture adjustment preset data set in the INPUT CONFIGURATION menu is displayed. To change the picture adjustment preset data to be adjusted, select from PRESET1, PRESET2, PRESET3, PRESET4 and PRESET5.

When the picture adjustment preset data is changed

When the preset data is changed and you press the MENU button to return to the main menu, the following message appears to confirm the setting.

CHANGE INPUT CONFIG?

PRESET VALUE

PRESETX (previous preset data) → **PRESETX** (new preset data)

OK: Press the ENTER or Ent button to change the preset data.

The preset data set in the INPUT CONFIGURATION menu is changed to the new data.

CANCEL: Press the MENU button to cancel changing the preset data and to return to the main menu.

The setting of the preset data is remained but the data set in the INPUT CONFIGURATION menu is not changed.

For information about the INPUT CONFIGURATION menu, see "[C] Setting the Input Configuration – INPUT CONFIGURATION Menu" on page 37.

AUTO...: Set the chroma/phase/matrix automatically. ⇒ A1

MANUAL ADJUST: Set the picture adjustment preset values for the phase/chroma/brightness/ contrast with the MANUAL knobs. ⇒ A2

COPY FROM...: Copy the other picture preset data. ⇒ A3

A1 AUTO... menu

Set the automatic adjustment of chroma/phase/matrix. The chroma/phase/matrix data is reset to the default setting (1000).

AUTO ADJUST: Start automatic adjustment. ⇒ A11

MATRIX VALUE: The matrix data set in the INPUT CONFIGURATION menu is displayed. To change the matrix data to be adjusted, select from ITU601, SMPTE 240M, ITU709 or USER 1 to 5.

When ITU601, SMPTE 240M or ITU709 data is changed, they are displayed as ITU601*, SMPTE 240M* or ITU709*.

When the matrix data is changed

When the matrix data is changed and you press the MENU button to return to the main menu, the following message appears to confirm the setting.

CHANGE INPUT CONFIG? MATRIX VALUE (1080/720)

Previous matrix data → New matrix data

MATRIX VALUE (1035)

Previous matrix data → New matrix data

MATRIX VALUE (480/576)

Previous matrix data → New matrix data

OK: Press the ENTER or Ent button to change the matrix data.

The matrix data set in the INPUT CONFIGURATION menu is changed to the new data.

CANCEL: Press the MENU button to cancel changing the matrix data and to return to the main menu.

The setting of the matrix data is remained but the matrix data set in the INPUT CONFIGURATION menu is not changed.

For information about the INPUT CONFIGURATION menu, see "[C] Setting the Input Configuration – INPUT CONFIGURATION Menu" on page 37.

MATRIX RESET: Reset the matrix data to the default setting.

When the setting of USER1 to 5 or default setting is used, this menu is not selectable.

The following confirmation message appears.

RESET FACTORY DATA?

OK: To reset the data, press the ENTER (Ent) button

CANCEL: To cancel, press the MENU button.

COLOR BAR: Select the color bar signal.

FULL FIELD 8: 100% full-field 8-color bar (white, yellow, cyan, green, magenta, red, blue and black) (default)

SMPTE: SMPTE standard color bar

EIA: EIA standard color bar (effective for 480/60I and 575/50I signals only)

MULTI FORMAT: Color bar standardized by SMPTE RP219/ARIB STD-B28

Notes

- When you execute the AUTO menu, EXT SYNC button should be set to OFF (INT SYNC).
 ON (EXT SYNC) will cause an error abortion of auto adjustment procedure.
- When the signal format set in the FORMAT menu of the INPUT CONFIGURATION menu is 4:4:4 RGB or RGB, MATRIX VALUE or MATRIX RESET is not selectable.

A11 AUTO ADJUST menu

Start automatic adjustment. (It may take some time to adjust automatically.)

To cancel adjustment

Press the MENU button.

A2 MANUAL ADJUST menu

Adjust values by turning the PHASE, CHROMA, BRIGHT, and/or CONTRAST knobs. After adjustment, press the ENTER or Ent button to confirm the adjusted values.

PHASE: xxxx CHROMA: xxxx BRIGHT: xxxx CONTR: xxxx

When you want to erase characters from the screen while adjusting manually

Press the CHAR OFF button. The characters disappear. To display characters, press the CHAR OFF button again.

To reset the setting to the default

Press the corresponding MANUAL button. The adjusted value is reset to 1000 (default).

To cancel adjustment

Press the MENU button. The adjustment data is cleared.

To confirm adjustment

Press the ENTER (Ent) button.

A3 COPY FROM... menu

Copy picture adjustment preset data.

PRESET VALUE...: Copy other data in the monitor.
⇒ A31

OTHER MONITOR...: Copy data from another monitor. ⇒ A32

MEMORY STICK...: Copy data from a file in the "Memory Stick". ⇒ A33

Note

Matrix data is not copied.

A31 PRESET VALUE... menu

Copy data from another channel or common data.
Select one from among PRESET1, PRESET2, PRESET3, PRESET4 and PRESET5.

A32 OTHER MONITOR... menu

Assign the ID No. of the source monitor.

MONITOR ID...: Enter the ID No. of the monitor. ⇒ A321

When the NETWORK switch is set to PEER TO PEER, this is not selectable.

A321 OTHER MONITOR menu

Copy data from another selected monitor.
Select one from among PRESET1, PRESET2, PRESET3,
PRESET4 and PRESET5.

A33 MEMORY STICK... menu

Select a file in the source "Memory Stick". ⇒ A331

A331 MEMORY STICK menu

Copy data in the selected file. Select one from among PRESET1, PRESET2, PRESET3, PRESET4 and PRESET5.

B Adjusting the Color Temperature – COLOR TEMP ADJ Menu

Overview

The color temperature is adjusted.

Use the factory setting value or the adjusted value as a base value to shorten the adjustment time.

- Selecting the preset data to be adjusted (PRESET VALUE menu)
- Knob adjustment (MANUAL... menu)

You can adjust the bias and gain with the MANUAL knobs.

• Automatic adjustment (AUTO... menu)

You can use the following probes for automatic adjustment of color temperature. Except for the Sony BKM-14L, a cable is required to connect the color analyzer to the monitor.

Manufacturer	Probe Model Name
SONY	BKM-14L (no cable required)
KONICA MINOLTA	CA-100, CA-100plus
DK-TECHNOLOGIES	PM 5639
THOMA	TF6
UDT INSTRUMENTS	SLS 9400-FC

For more information about the cable specification required and about the connection, see "Connection Cable Specifications for Color Temperature Probes" on page 62.

• Copying other data (COPY FROM... menu)

Other data in this monitor, other monitors or "Memory Stick" is copied.

• Resetting to the default setting (RESTORE FACTORY DATA menu)

Color temperature data is reset to the default setting.

• Displaying the measured color coordinate and luminance (ANALYZE menu)

The color coordinate and luminance are measured by BKM-14L.

Before adjusting the color temperature

We recommend that you perform automatic adjustment using the AUTO... All menu of the PICTURE ADJ menu.

Structure of the COLOR TEMP ADJ Menu

Level 1	Level 2	Level 3
PRESET VALUE		
MANUAL B1	MANUAL ADJUST B11	
	ORIGINAL VALUE	
	SIGNAL	
	CONT/BRT HOLD	
AUTO B2	AUTO ADJUST B21	
	TARGET COLOR TEMP	
	Х	
	Υ	
	LOW LIGHT (20 IRE)	
	HIGH LIGHT (100 IRE)	
	PROBE	
	CONT/BRT HOLD	
COPY FROM	PRESET VALUE B31	
B3	OTHER MONITOR	OTHER MONITOR
	MEMORY STICK	MEMORY STICK
RESTORE FACTORY DATA B4		
ANALYZE B5		

Setting Lists in the COLOR TEMP ADJ Menu

This section explains the setting lists displayed in the menu.

How to read the setting lists

 For purposes of explanation, each setting list is preceded by a menu number. These numbers are not displayed on the screen.

For more information on the menu number, see "About menu numbers" on page 26.

• The arrow mark (⇒) refers you to another setting list that appears after you make the setting, or to an operation that is to be carried out as a result of the setting.

B COLOR TEMP ADJ menu

PRESET VALUE: The color temperature data set in the INPUT CONFIGURATION menu is displayed. To change the color temperature data to be adjusted, select from D93, D65, D61, USER1, USER2, USER3, USER4 and USER5.

When D93, D65 or D61 data is changed, they are displayed as D93*, D65* or D61*.

When the color temperature data is changed

When the preset data is changed and you press the MENU button to return to the main menu, the following message appears to confirm the settings.

CHANGE INPUT CONFIG? COLOR TEMP PRESET

$DXX^* \rightarrow USERX$

(previous color temp value) → (new color temp value)

OK: Press the ENTER or Ent button to change the color temperature data.

The color temperature data set in the INPUT CONFIGURATION menu is changed to the new data.

CANCEL: Press the MENU button to cancel changing the color temperature data and to return to the main menu.

The setting of the color temperature data is remained but the color temperature data set in the INPUT CONFIGURATION menu is not changed.

For information about the INPUT CONFIGURATION menu, see "[C] Setting the Input Configuration – INPUT CONFIGURATION Menu" on page 37.

MANUAL...: Adjust the color temperature with the MANUAL knob. ⇒ В1

AUTO...: Adjust the color temperature automatically ⇒ B2

COPY FROM...: Copy the other color temperature. ⇒ ВЗ

RESTORE FACTORY DATA: Reset the color temperature to the default setting. ⇒ B4

ANALYZE: Read the color temperature and luminance value. ⇒ B5

B1 MANUAL... menu

MANUAL ADJUST: Adjust the gain and bias with the knobs. ⇒ B11

ORIGINAL VALUE: Set the initial value.

Select one from among D93, D65, D61, USER1, USER2, USER3, USER4 and USER5.

When D93, D65 or D61 data is changed, they are displayed as D93*, D65* or D61*.

SIGNAL: Select the white signal to be used for adjustment.

INT: Use an internal signal. Simultaneously with the adjustment of the gain and bias, the 100 IRE and 20 IRE signals are automatically switched.

EXT: Use an external input signal. When adjusting the gain and bias, input the proper signal (default).

CONT/BRT HOLD: Select the contrast and brightness settings to the center or adjusted value by the manual adjustment of the white balance (OFF or ON).

ON: The contrast and brightness are set to the value before adjusting. (default)

OFF: The contrast and brightness are set to the center value (1000) when the white balance is adjusted.

The contrast and brightness is not changed after adjusting (center value: 1000).

B11 MANUAL ADJUST menu

Adjust the gain and bias. To shift between gain adjustment and bias adjustment, press the UP/DOWN buttons.

Knobs for each adjustment

After adjustment, press the ENTER or Ent button to confirm the setting.

RED: CONTRAST KNOB (Adjust the R gain or bias with the CONTRAST knob.)

GREEN: BRIGHT KNOB (Adjust the G gain or bias with the BRIGHT knob.)

BLUE: CHROMA KNOB (Adjust the B gain or bias with the CHROMA knob.)

LUMINANCE: PHASE KNOB (Adjust luminance with the PHASE knob.)

To reset RED/GREEN/BLUE to the value before adjustment

When you are adjusting the gain or bias using the MANUAL adjustment knobs, you can reset the setting to the one before adjustment by pressing the corresponding MANUAL button.

To reset all of the settings at the same time, press the MANUAL button of PHASE.

Note

You cannot reset the setting after you press the ENTER or Ent button.

To cancel adjustment

Press the MENU button. The adjustment data is cleared.

To confirm adjustment

Press the ENTER (Ent) button.

Using the COL TEMP (short-cut) button

You can display the MANUAL menu that corresponds to the color temperature set to the image on the screen.

B2 AUTO... menu

Set the color temperature automatically.

AUTO ADJUST: Start adjustment. ⇒ B21

TARGET COLOR TEMP: Select the adjustment value to be used.

You can select one from among D93, D65, D61 and ANY.

X: Enter the x coordinate.

Y: Enter the y coordinate.

LOW LIGHT (20IRE): Enter the luminance (cd/m²) for low light.

HIGH LIGHT (100IRE): Enter the luminance (cd/m²) for high light.

PROBE: Select the probe to adjust the color temperature automatically.

Selection of the probe

BKM-14L: Use BKM-14L.

CA-100: Use CA-100 or CA-100 plus.

PM 5639: Use PM 5639.

TF6: Use TF6.

SLS 9400-FC: Use SLS 9400-FC.

- If you cannot execute an AUTO ADJUST menu operation when using the Sony BKM-14L probe, try again after disconnecting and reconnecting the probe.
- When using the KONICA MINOLTA CA-100plus probe, set the RS-232C communication environment to CA-100 compatible mode (BAUD RATE setting: 9600 bps).
- When using the THOMA TF6 probe, set the TF6 PRINT menu to off.

CONT/BRT HOLD: Select the contrast and brightness settings to the center or adjusted value after the auto adjustment of the white balance (OFF or ON). The contrast and brightness are set to the center value (1000) when the white balance is adjusted automatically.

ON: The contrast and brightness are set to the value before adjusting. (default)

OFF: The contrast and brightness are set to the center value (1000) after adjusting.

To start adjustment, proceed as follows.

When you use the previously adjusted values for adjustment, you can start adjustment by selecting AUTO ADJUST without performing step ①, step ② and step ③.

① Select the color temperature to be used in TARGET COLOR TEMP.

When ANY is selected, enter the values of the CIE 1931 color system x and y coordinates.

- **2** Enter values for LOW LIGHT and HIGH LIGHT.
- **3** Select the probe (default setting is BKM-14L).
- (4) Select AUTO ADJUST.

B21 AUTO ADJUST menu

This menu is displayed when AUDO ADJUST is selected in the B2 AUTO... menu.

The following message appears.

SET PROBE ON CURSOR

Attach the probe on the center of the CRT to start automatic adjustment. (It may take some time to adjust automatically.)

To cancel/stop the adjustment

Press the MENU button.

B3 COPY FROM... menu

Copy other matrix data.

OTHER MONITOR...: Copy data from another monitor. ⇒ B32

MEMORY STICK...: Copy data from a file in the "Memory Stick". ⇒ B33

B31 PRESET VALUE... menu

Select the data to be copied.

Select one from among D93, D65, D61, USER1, USER2, USER3, USER4 and USER5.

D93: Copy the color temperature of D93.

D65: Copy the color temperature of D65.

D61: Copy the color temperature of D61.

USER1 to 5: Copy the color temperature of USER1 to 5.

When D93, D65 or D61 data is changed, they are displayed as D93*, D65* or D61*.

B32 OTHER MONITOR... menu

Assign the ID No. of the source monitor.

MONITOR ID...: Enter the ID No. of the monitor. ⇒B321

When the NETWORK switch is set to PEER TO PEER, this is not selectable.

B321 OTHER MONITOR... menu

Select the data from another selected monitor.

Select one from among D93, D65, D61, USER1, USER2, USER3, USER4 and USER5.

D93: Copy the color temperature of D93.

D65: Copy the color temperature of D65.

D61: Copy the color temperature of D61.

USER1 to 5: Copy the color temperature of USER1 to 5

When D93, D65 or D61 data is changed, they are displayed as D93*, D65* or D61*.

B33 MEMORY STICK... menu

Select the file in the source "Memory Stick". ⇒ B331

B331 MEMORY STICK menu

Select the data from a file in the "Memory Stick" Select one from among D93, D65, D61, USER1, USER2, USER3, USER4 and USER5.

D93: Copy the color temperature of D93.

D65: Copy the color temperature of D65.

D61: Copy the color temperature of D61.

USER1 to 5: Copy the color temperature of USER1 to 5.

When D93, D65 or D61 data is changed, they are displayed as D93*, D65* or D61*.

B4 RESTORE FACTORY DATA menu

Reset the color temperature to the default setting.

You cannot select this when USER1 to 5 is selected or the setting is the default value. The following message appears to confirm the data reset operation.

RESTORE FACTORY DATA?

OK: Press the ENTER or Ent button to reset the data. **CANCEL:** Press the MENU button to cancel the reset operation.

B5 ANALYZE menu

Perform operation according to the message to enable the BKM-14L to read the color system and luminance value.

SET PROBE ON CURSOR

Attach the probe on the center of the CRT.

Once the probe has carried out calibration, it can start to analyze the monitor's performance.

To cancel the analysis

Press the MENU button.

Notes

- Do not cut the R, G, or B beam or display the marker before carrying out calibration of BKM-14L. It may cause non-detection of BKM-14L.
- During analyzing, do not disconnect BKM-14L from the OPTION connector. If nothing has been displayed on the monitor, press the MENU button. The display returns to the COLOR TEMP ADJ menu.

C Setting the Input **Configuration – INPUT CONFIGURATION Menu**

Overview

Data pertaining to the input signals are set with this menu. Set the input data for each channel.

A channel number (1 to 30) is entered with the numeric

The following data can be set with the INPUT CONFIGURATION menu.

- Assigning the signal format (FORMAT...menu)
- Assigning the slot number (SLOT NO menu)
- Assigning the input connector number (INPUT NO
- Setting the aspect ratio (SCREEN ASPECT menu)
- Selecting the scan size (SCAN SIZE menu)
- Selecting the sync mode (SYNC MODE menu)
- Setting the color temperature (COLOR TEMP
- Selecting the picture preset (PICTURE PRESET
- Setting the matrix (MATRIX... menu)
- Activating/deactivating the aperture adjustment (APERTURE menu)
- Assigning the aperture value (VALUE menu)
- Selecting the Y/C separation filter (YC SEP menu)
- Selecting the NTSC COMB filter (NTSC COMB FILTER menu)
- Selecting the marker display (MARKER DISPLAY)
- Selecting the marker mode (MODE... menu)
- Adjusting H phase (H PHASE menu)
- Assigning the channel name (CHANNEL NAME...
- Copying from other data (COPY FROM... menu)

Channels 80 to 89 assignment

The channel numbers from 80 to 89 are assigned to switch the signal system of the internal signals.

The channels 80 to 89 can be selected after selecting channels 91 to 97 and the internal signal of the selected signal system is output.

080: 575/50I 081: 480/60I 082: 1080/48I 083: 1080/50I 084: 576/50P 085: 480/60P 086: 1080/60I 087: 1035/60I 088: 720/50P 089: 720/60P

Channels 91 to 97 assignment

The channel numbers from 91 to 97 are assigned to internal signals. The internal signal of the last signal system is displayed. When the power is ON and the picture is displayed by the internal signal, the signal system is 480/

091: PLUGE signal (Picture Line Up Generating **Equipment**)

092: 20% gray signal 093: 100% white signal

094: five-step gray scale signal

095: cross-hatch signal

096: dot signal

097: 0% black signal

Assigning slot and connector numbers

Set which input connector on which slot will be assigned to the current channel.

The slot number is as follows.

OPTION1 (outside of the monitor)

OPTION2

OPTION3 (inside of the monitor)

The input number is as follows.

When BKM-61D is installed (signal SDI D1, SDI D1/D2 **AUTO, SDI D2 NTSC or SDI D2 PAL):** DIGITAL1 or 2 When BKM-61D is installed (analog composite signal COMPOSITE AUTO, NTSC, PAL, PAL-M or SECAM): COMPOSITE1, 2 or 3

When BKM-62HS is installed (signal SDI HD/D1 **AUTO, HD-SDI or SDI D1):** DIGITAL1 or 2

Notes

When FORMAT... is set to the following, you cannot select the input number.

- when BKM-61D is installed and Analog Y/C signal is
- when BKM-62HS is installed and Dual Link HD-SDI signal is input
- when BKM-68X is installed and Analog Component or Analog RGB signal is input

Structure of the INPUT CONFIGURATION Menu

Level 1	Level 2	Level 3
CHxx		
FORMAT C1	SDI/HD-SDI C11	
	DUAL LINK HD-SDI	
	COMPOSITE C13	
	YC C14	
	COMPONENT C15	
SLOT NO		
INPUT NO		
SCREEN ASPECT		
SCAN SIZE		
SYNC MODE		
COLOR TEMP		
PICTURE PRESET		
MATRIX C2		
APERTURE		
VALUE		
YC SEP		
NTSC COMB FILTER		
MARKER DISPLAY		
MODE C3		
H PHASE		
CHANNEL NAME		
COPY FROM C5	OTHER CH C51	
	OTHER MONITOR	OTHER MONITOR
	MEMORY STICK	MEMORY STICK

Setting Lists in the INPUT CONFIGURATION Menu

This section explains the setting lists displayed in the menu.

How to read the setting lists

• For purposes of explanation, each setting list is preceded by a menu number. These numbers are not displayed on the screen.

For more information on the menu number, see "About menu numbers" on page 26.

• The arrow mark (⇒) refers you to another setting list that appears after you make the setting, or to an operation that is to be carried out as a result of the setting.

C INPUT CONFIGURATION menu

This menu is composed by the INPUT CONFIGURATION (1/2) and INPUT CONFIGURATION (2/2) menus.

Set input signal data for each channel.

INPUT CONFIGURATION (1/2) menu

CHxx: Current channel is indicated. The settings below will be stored as information about the signal to be connected to this channel.

FORMAT...: Select the input signal type. ⇒ C1 **SLOT NO:** Enter the option slot number (OPTION1 to

INPUT NO: Enter the input connector number.

SCREEN ASPECT: Select the aspect ratio (16:9, 4:3, LAST).

16:9: Set the aspect ratio to 16:9 (default).

4:3: Set the aspect ratio to 4:3.

LAST: Use the previous setting.

SCAN SIZE...: Select the scan size (NORMAL, UNDER, LAST).

NORMAL: Set the scan size to over scan (default).

UNDER: Set the scan size to under scan.

LAST: Use the previous setting.

SYNC MODE: Select the sync signal (INT, EXT, LAST).

INT: Use an internal sync signal (default).

EXT: Use an external sync signal.

LAST: Use the previous setting.

COLOR TEMP: Select the color temperature (D93, D65, D61 or USER1 to 5).

When D93, D65 or D61 data is changed, they are displayed as D93*, D65* or D61*.

- **PICTURE PRESET:** Select the picture adjustment preset (PRESET1 to 5) (default setting is PRESET1).
- MATRIX...: Displays the MATRIX menu. Set the matrix of each signal format. ⇒ C2

INPUT CONFIGURATION (2/2) menu

APERTURE: Choose whether or not to use aperture adjustment (OFF, ON, LAST).

OFF: Do not use aperture adjustment (default).

ON: Use aperture adjustment.

LAST: Use the previous setting.

VALUE: Enter the aperture adjustment value (0 to 200) (default setting is 000).

YC SEP: Select Y/C separation filter.

COMB: Use the comb filter (default).

BPF/TRAP: Select BPF/TRAP.

NTSC COMB FILTER: Select the NTSC COMB FILTER (3 LINES or 3D) (default setting is 3 LINES).

MARKER DISPLAY: Choose whether or not to display the marker (OFF or ON) (default setting is OFF).

MODE...: Display the MARKER MODE menu. Set the marker aspect, safe area, safe title, etc. ⇒ C3

H PHASE: Set the horizontal picture position (-100 to +100*) (default setting is 000).

* When the setting value is out of range, the display is changed but the horizontal position of the picture is not changed.

CHANNEL NAME...: Display the CHANNEL NAME menu. Give the channel a name. ⇒ C4

COPY FROM...: Display the COPY FROM menu. Copy other channel data. ⇒ C5

C1 FORMAT... menu

Select the signal format.

SDI/HD-SDI...: Serial digital signal ⇒ C11

DUAL LINK HD-SDI...: Dual link HD-SDI signal ⇒ C12

COMPOSITE...: Analog composite signal ⇒ C13

YC...: Analog Y/C signal ⇒ C14

COMPONENT...: Analog component or RGB signal ⇒ C15

Note

If there is no input connector or decoder corresponding to a format, that format will not be selectable (the cursor will skip over that item).

C11 SDI/HD-SDI... menu

Select the serial digital signal format (SDI or single link HD-SDI).

HD-SDI/D1 AUTO: Select when BKM-62HS is installed.

HD SDI: Select when BKM-62HS is installed.

D1: Select when BKM-61D or BKM-62HS is installed.

D1/D2 AUTO: Select when BKM-61D is installed.

D2 NTSC: Select when BKM-61D is installed.

D2 PAL: Select when BKM-61D is installed.

NTSC SETUP LEVEL: Select the NTSC SETUP LEVEL (0 % or 7.5 %) (default setting is 7.5 % for BVM-A20F1U, 0 % for BVM-A20F1M/A20F1A).

FILTER SW: Set the Y/C separation filter (OFF or ON) when the picture is set to black and white mode (default setting is OFF).

ACC SW: Select the auto chroma control ON or OFF (default setting is OFF).

1080/60I or 1035/60I is selected automatically for the HD-SDI 1125/60I input signal.

C12 DUAL LINK HD-SDI... menu

Select the dual link HD-SDI signal format when BKM-62HS is installed.

4:4:4 YPBPR

4:4:4 RGB

C13 COMPOSITE... menu

Select the composite signal format when BKM-61D is installed.

AUTO: The format of the input signal is detected and switched automatically.

It will take a few seconds to detect the format of an input signal. It is recommended that a particular format be selected if it is determined.

NTSC

PAL

PAL-M

SECAM

NTSC SETUP LEVEL: Select the NTSC SETUP LEVEL (0 % or 7.5 %) (default setting is 7.5 % for BVM-A20F1U, 0 % for BVM-A20F1M/A20F1A).

FILTER SW: Set the Y/C separation filter (OFF or ON) when the picture is set to black and white mode (default setting is OFF).

ACC SW: Select the auto chroma control ON or OFF (default setting is OFF).

C14 YC... menu

Select the Y/C signal format when BKM-61D is installed. **AUTO:** The format of the input signal is detected and switched automatically.

It will take a few seconds to detect the format of an input signal. It is recommended that a particular format be selected if it is determined.

NTSC

PAL

PAL-M

SECAM

NTSC SETUP LEVEL: Select the NTSC SETUP LEVEL (0 % or 7.5 %) (default setting is 7.5 % for BVM-A20F1U, 0 % for BVM-A20F1M/A20F1A).

ACC SW: Select the auto chroma control ON or OFF (default setting is OFF).

C15 COMPONENT... menu

Select the component signal format or RGB signal format (YPBPR or RGB) when BKM-68X is installed.

COMPONENT LEVEL: Select the COMPONENT LEVEL (SMPTE/EBU-N10 or BETACAM) (default setting is SMPTE/EBU-N10).

BETACAM SETUP LEVEL: Select the BETACAM SETUP LEVEL (0 % or 7.5 %) (default setting is 7.5 % for BVM-A20F1U, 0 % for BVM-A20F1M/A20F1A).

1125/60I SYSTEM: Select the active lines (1080I (1080 active lines) or 1035I (1035 active lines)) when 1125/60I signal is input (default setting is 1080I).

C2 MATRIX... menu

Set the matrix for each signal system.

1080/720: Select the matrix data of 1080I and 720P (default setting is ITU709).

1035: Select the matrix data of 1035I (default setting is SMPTE 240M).

480/576: Select the matrix data of 480I, 480P, 575I and 576P (default setting is ITU601).

ITU601, SMPTE 240M, ITU709 or USER1 to 5 is selectable in each item.

When ITU601, SMPTE 240M or ITU709 data is changed, they are displayed as ITU601*, SMPTE 240M* or ITU709*.

Note

When the signal format set in the C1 FORMAT menu is 4:4:4 RGB or RGB, MATRIX menu is not selectable.

C3 MODE... menu

Set the marker aspect, safe area, safe title, etc.

If a signal without the sync signal is input or the internal sync signal is used, this menu is not selectable.

MARKER MODE (1/3) menu

Set the marker aspect mode, aspect marker, blanking, etc.

ASPECT MODE: Set the marker aspect ratio of the picture.

You can select one from among 16:9, 15:9, 14:9, 13:9, 4:3, 2.39:1, 2.35:1, 1.85:1, 1.66:1 and VARIABLE (default setting is 16:9).

ASPECT: Set when VARIABLE is selected in ASPECT MODE.

Set 1.00 to 3.00 (default setting is 1.78).

H POSITION: Set the horizontal position of the marker.

Set -100 to +100 (default setting is 000).

MARKER BRIGHT: Set the luminance of the marker.

Set 90IRE or 40IRE (default setting is 90IRE). The data set in this menu is common to all the channels.

ASPECT MARKER: Select whether or not to display the safe area.

Set to OFF (not display) or ON (display) (default setting is OFF).

LINE: Set the thickness of the aspect marker when ASPECT MARKER is set to ON.

Set to THICK or THIN (default setting is THICK).

COLOR: Set the color of the aspect marker when ASPECT MARKER is set to ON.

Set to WHITE, RED, GREEN, BLUE, YELLOW, CYAN or MAGENTA (default setting is WHITE).

ASPECT BLANKING: Select the blanking outside the area.

Set to OFF (blanking is released) or ON (blanking) (default setting is OFF).

MODE: Set the blanking mode when ASPECT BLANKING is set to ON.

Set BLACK (blanking) or HALF (half blanking) (default setting is HALF).

MARKER MODE (2/3) menu


Set the safe area marker or center marker.

SAFE AREA MARKER: Select whether or not to display the safe area.

Set to OFF (not display) or ON (display) (default setting is ON).

MODE: Select the display mode for safe area when SAFE AREA MARKER is set to ON.

Set to SHAPE A, SHAPE B or SHAPE C (default setting is SHAPE A).

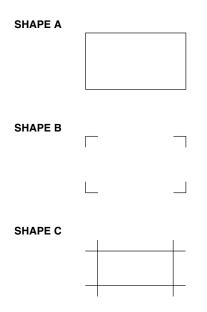

AREA SIZE: Set the size of the safe area mode when SAFE AREA MARKER is set to ON.

Set to 80%, 88%, 90%, 93% or VARIABLE (default setting is 80%).

WIDTH: Set the width of the safe area marker when AREA SIZE is set to VARIABLE.

Set to 050 to 100(%) (default setting is 080).

HEIGHT: Set the height of the safe area marker when AREA SIZE is set to VARIABLE.

Set to 050 to 100(%) (default setting is 080).

CENTER MARKER: Select whether or not to display the center marker.


Set to OFF (not display) or ON (display) (default setting is OFF).

MODE: Select the display mode of the center marker when CENTER MARKER is set to ON. Set to SHORT or LONG (default setting is SHORT).

Note

The size of the safe area is as follows depending on the ASPECT MODE and 16:9 button ON/OFF setting.

Example: Safe area size 80%, ASPECT MODE 16:9 or 4:3

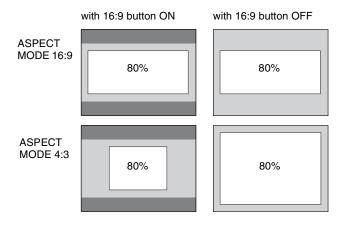

MARKER MODE (3/3) menu

Set the safe title.

SAFE TITLE DISPLAY: Select whether or not to display the safe title.

Set to OFF (not display) or ON (display) (default setting is ON).

WIDTH: Set the width of the safe title when SAFE TITLE DISPLAY is set ON.

Set to 005 to 050(%) (default setting is 020).

HEIGHT: Set the height of the safe title when SAFE TITLE DISPLAY is set ON.

Set to 005 to 050(%) (default setting is 010).

H POSITION: Set the horizontal position of the safe title when SAFE TITLE DISPLAY is set to ON. Set to 000 to 100(%) (default setting is 015).

V POSITION: Set the vertical position of the safe title when SAFE TITLE DISPLAY is set to ON. Set to 000 to 100(%) (default setting is 015).

C4 CHANNEL NAME... menu

Give the channel a name. Select a preset name, or enter a new one.

PROG: Program signal **EDIT:** Signal from an editor **CAM:** Camera signal

VTR: Signal from a VTR PREV: Preview monitor

NEW NAME: Enter a new name. (Up to 20 characters can be entered and up to 8 characters from the head of the name are displayed in the INPUT CONFIGURATION menu).

C5 COPY FROM menu

Select the source to be copied from.

OTHER CH...: Copy other data in this monitor. ⇒ C51

OTHER MONITOR...: Copy data from another monitor. ⇒ C52

MEMORY STICK...: Copy data from a file in the "Memory Stick". ⇒ C53

C51 OTHER CH... menu

Assign the source channel number to be copied.

CH NO: Enter the channel number.

C52 OTHER MONITOR... menu

Assign the ID No. of the source monitor.

MONITOR ID: Enter the ID No. of the monitor from which to copy data. ⇒ C521

When the NETWORK switch is set to PEER TO PEER, this is not selectable.

C521 OTHER MONITOR menu

Assign the channel of the selected monitor from which to copy data.

CH NO: Enter the channel number.

C53 MEMORY STICK... menu

Select the file name in the source "Memory Stick". ⇒ C531

C531 MEMORY STICK menu

Assign the channel of the selected file from which to copy data.

CH NO: Enter the channel number.

System ConfigurationSYSTEMCONFIGURATION Menu

Overview

The system such as the network, parallel remote control function, etc. is set with this menu.

The following are set.

- Setting the remote control function of the network (NETWORK... menu)
- Setting for the parallel remote control functions (PARALLEL REMOTE... menu)
- Power-up condition of the monitor (POWER... menu)
- Setting of the details about the blanking (BLANKING SETTINGS... menu)
- Setting the data about the screen display (ON SCREEN SET... menu)
- Setting the passwords for the menu (PASSWORD... menu)
- Displaying the menu for maintenance (MAINTENANCE... menu)

Structure of the SYSTEM CONFIGURATION Menu

Level 1	Level 2	Level 3
NETWORK D1	MONITOR ID	
	GROUP ID	
	NETWORK SETTINGS D11	
	NETWORK SW	
	SNMP SETTINGS	
PARALLEL REMOTE D2	PARALLEL REMOTE	
	1 PIN 8 PIN	PARALLEL REMOTE D211
POWER D3	STANDBY MODE	
	POWER ON STATUS	
	DEFAULT CH	
	DEGAUSS DELAY	
BLANKING	ANCILLARY DATA	
SETTINGS D4	VITS BLK	
ON SCREEN SET	FORMAT DISPLAY	
D5	POSITION	
	CH NO	
	POSITION	
	CH NAME	
	POSITION	
PASSWORD D6	CHANGE PASSWORD D61	CHANGE PASSWORD D611
	APPLY PASSWORD D62	APPLY PASSWORD
MAINTENANCE D7		

Setting Lists in the SYSTEM CONFIGURATION Menu

This section explains the setting lists displayed in the menu.

How to read the settin lists

• For purposes of explanation, each setting list is preceded by a menu number. These numbers are not displayed on the screen.

For more information on the menu number, see "About menu numbers" on page 26.

• The arrow mark (⇒) refers you to another setting list that appears after you make the setting, or to an operation that is to be carried out as a result of the setting.

D SYSTEM CONFIGURATION Menu

NETWORK...: Set the remote control function of the network. ⇒ D1

PARALLEL REMOTE...: Set the parallel remote control function. ⇒ D2

POWER...: Set the condition of the monitor when the main power is turned on or the power is turned on by remote operation. ⇒ D3

BLANKING SETTINGS...: Adjust the data for the blanking. ⇒ □4

ON SCREEN SET...: Set the data for the screen display. ⇒ D5

PASSWORD...: Set the passwords for the menu. ⇒ D6

MAINTENANCE...: Display the menu for maintenance. ⇒ D7

D1 NETWORK... menu

MONITOR ID: Enter a monitor ID No.. Set to 01 to 99 (default setting is 01).

GROUP ID: Enter a group ID No..

Set to 01 to 99 (default setting is 01).

NETWORK SETTINGS...: Set the IP address, subnet mask and default gateway. ⇒ D11

NETWORK SW: Display the setting of the NETWORK switch (LAN or PEER TO PEER).

SNMP SETTINGS...: Set CONTACT, NAME, LOCATION and TRAP. ⇒ D12

D11 NETWORK SETTINGS... menu

IP ADDRESS: Set the IP address (default is "192.168.000.001").

SUBNET MASK: Set the subnet mask (default is "255.255.255.000").

DEFAULT GATEWAY: Set the default gateway on or off (default setting is OFF).

ADDRESS: Set the default gateway (default is "---.-- (no setting)").

CANCEL: Select to cancel the setting. **CONFIRM:** Select to save the setting.

Note

When the NETWORK switch is set to PEER TO PEER, the IP address is set to "192.168.000.001" regardless of the display on the monitor.

When the NETWORK switch is set to LAN, the IP address is set to the displayed one.

D12 SNMP SETTINGS... menu

CONTACT menu: Set the information of the administrator.

NEW NAME: Enter a new name (up to 20 characters).

The usable symbols are "(", ")", ".", "-", "+", "/", "%", "*", "#", "_", "\$" and "(space)" (12 symbols).

NAME menu: Set the information for the administration (device ID).

NEW NAME: Enter a new name (up to 20 characters).

The usable symbols are "(", ")", ".", "-", "+", "/", "%", "*", "#", "_", "\$" and "(space)" (12 symbols).

LOCATION menu: Set the location information.

NEW NAME: Enter a new name (up to 20 characters).

The usable symbols are "(", ")", ".", "-", "+", "/", "%", "*", "#", "_", "\$" and "(space)" (12 symbols).

TRAP menu: Set the address to send the information. TRAP1 and TRAP2 are set.

TRAP1: Set the IP address (default setting is "000.000.000.000").

TRAP2: Set the IP address (default setting is "000.000.000.000").

CANCEL: Select to cancel the changed or confirmed setting.

CONFIRM: Select to save the changed or confirmed setting.

D2 PARALLEL REMOTE... menu

PARALLEL REMOTE: Select whether or not to use the PARALLEL REMOTE functions (OFF or ON) (default setting is OFF).

1 PIN... - 8 PIN...: Assign the function to each pin of the PARALLEL REMOTE connector when PARALLEL REMOTE is set to ON. ⇒ D21

D21 1 PIN... - 8 PIN... menu

Assign a function to the selected pin. ⇒ D211

The factory settings for each pin

1 PIN: CH01

2 PIN: CH02

3 PIN: EXT SYNC

4 PIN: MONO

5 PIN: MARKER

6 PIN: unused

7 PIN: unused

8 PIN: TALLY

D211 PARALLEL REMOTE menu

PARALLEL REMOTE (1/2) menu

CH01 to 30: Select a channel number. Enter the desired channel number with the numeric button.

---: Set to unused.

UNDER SCAN: Set under scan on or off.

16:9: Set a 16:9 aspect ratio on or off.

H DELAY: Set the horizontal sync display on or off.

V DELAY: Set the vertical sync display on or off.

EXT SYNC: Set the synchronization to external sync signals enabled or disabled.

COMB: Set the comb filter on or off.

APERTURE: Set the correction of frequency characteristics enabled or disabled.

MONO: Set monochrome display on or off.

PARALLEL REMOTE (2/2) menu

BLUE ONLY: Set the blue signal pictures display (monochrome) on or off.

R OFF: Set cutting red beams enabled or disabled.

G OFF: Set cutting green beams enabled or disabled.

B OFF: Set cutting blue beams enabled or disabled.

CHROMA UP: Set 12 dB up of the chroma setting value on or off.

MARKER: Set the marker set in the channel on or off.

TALLY: Set tally lamp on or off.

DEGAUSS: Set degaussing on or off.

POWER OFF: Set the monitor power on or standby.

For the pin assignment, see "PARALLEL REMOTE connector" in Location and Function of Parts on page 12.

D3 POWER... menu

Set the condition of the monitor when the main power is turned on or the power is turned on by remote operation.

STANDBY MODE: Select the power-up condition (OFF or ON) when the MAIN POWER switch is turned on.

OFF: Operation mode (default)

ON: Standby mode

POWER ON STATUS: Select the power-up input channel (LAST or CH).

LAST: Set the channel to the channel that was selected at the time the power was last turned off (default).

CH: Set the channel to a specific channel number.

DEFAULT CH: Select the channel (01 to 30) when the POWER ON STATUS is set to CH (default setting is 01).

DEGAUSS DELAY: Set the period from the time when the picture is almost displayed to the beginning of degaussing (000 to 255) (default setting is 000). Enter the desired time (in seconds).

D4 BLANKING SETTINGS... menu

Adjust the data for the blanking.

ANCILLARY DATA: Select whether or not to display the ancillary data in the serial digital signal (OFF or ON) (default setting is ON).

VITS BLK: Adjust vertical blanking so that VITS signals are not visible in the upper part of the screen.

Set to 000 to 127 (default setting is 000).



D5 ON SCREEN SET... menu

Set the data about the screen display.

FORMAT DISPLAY: Select the display mode of the signal system.

AUTO: Disappears after being displayed for a while (default).

ON: Displayed. **OFF:** Not displayed.

POSITION: Select the display position for the signal system.

TOP LEFT, TOP CENTER, TOP RIGHT, BOTTOM LEFT (default), BOTTOM CENTER, **BOTTOM RIGHT**

CH NO: Select the display mode of the channel number

AUTO: Disappears after being displayed for a while (default).

ON: Displayed. **OFF:** Not displayed.

POSITION: Select the display position for the

channel number.

TOP LEFT, TOP CENTER, TOP RIGHT (default), BOTTOM LEFT, BOTTOM CENTER, BOTTOM **RIGHT**

CH NAME: Select the display mode of the channel name

AUTO: Disappears after being displayed for a while (default).

ON: Displayed. **OFF:** Not displayed.

POSITION: Select the display position for the

channel name.

TOP LEFT (default), TOP CENTER, TOP RIGHT, BOTTOM LEFT, BOTTOM CENTER, BOTTOM

RIGHT

D6 PASSWORD... menu

Set the password for the menu

Enter four characters. Default setting is "9999".

CHANGE PASSWORD...: Change the password. □ D61

APPLY PASSWORD...: Assign the password to a menu item. ⇒ D62

D61 CHANGE PASSWORD... menu

Change the password.

ENTER NEW PASSWORD: Enter a new password with the number button and press the ENTER button. ⇒ D611

D611 CHANGE PASSWORD menu

Create a new password.

RE-ENTER PASSWORD: Enter the new password again and press the ENTER button. The password is registered.

To change it, press the MENU button.

D62 APPLY PASSWORD... menu

Select whether or not to apply the password to each menu.

PICTURE ADJ: Select YES or NO.

COLOR TEMP ADJ: Select YES or NO.

INPUT CONFIGURATION: Select YES or NO.

SYSTEM CONFIGURATION: Select YES or NO.

INDIVIDUAL ITEMS...: Display the items of the SYSTEM CONFIGURATION menu. ⇒ D621

INSTALLATION SETTINGS: Select YES or NO.

FILE MANAGEMENT: Select YES or NO.

CONTROLLER: Select YES or NO. **KEY PROTECT:** Select YES or NO.

D621 APPLY PASSWORD menu

Select whether or not to apply the password to the SYSTEM CONFIGURATION menu.

NETWORK: Select YES or NO.

PARALLEL REMOTE: Select YES or NO.

POWER: Select YES or NO.

BLANKING SETTINGS: Select YES or NO.

ON SCREEN SET: Select YES or NO.

D7 MAINTENANCE... menu

The menu for the maintenance personnel is displayed.



■ Installation Settings – INSTALLATION SETTINGS Menu

Overview

Initial settings of geometry, convergence, etc. are adjusted from this menu.

The following are adjusted.

- Correcting the shift of beam landing caused by the earth's magnetism (LANDING ADJUST... menu)
- Adjusting the position and size of the picture and convergence (ALIGNMENT... menu)
- Adjusting the color unevenness of the CRT (DIGITAL UNIFORMITY ADJ... menu)

Note

Perform digital uniformity adjustment after beam landing adjustment has been completed.

Structure of the INSTALLATION SETTINGS Menu

Level 1	Level 2	Level 3
LANDING ADJUST	NS	
	RESTORE FACTORY DATA E11	
ALIGNMENT E2	ROTATION	
	H PHASE	
	V CENTER	
	H SIZE	
	V SIZE	
	SUB CONTRAST	
	H PIN	
	H PIN BAL	
	H CORNER PIN	
	H CORNER S	
	H KEY	
	H KEY BAL	
	V STATIC CONV	
	V CONV TOP	
	V CONV BOT	
	H STATIC CONV	
	RESTORE FACTORY DATA	
DIGITAL UNIFORMITY ADJ [E3]	MANUAL E31	MANUAL ADJUST E311
		CURSOR H SIZE
		V SIZE
	AUTO FULL POINTS ADJ E32	
	AUTO ONE POINT ADJ	
	SIGNAL	
	RESTORE FACTORY DATA	

Setting Lists in the INSTALLATION SETTINGS Menu

This section explains the setting lists displayed in the menu.

How to read the setting lists

• For purposes of explanation, each setting list is preceded by a menu number. These numbers are not displayed on the screen.

For more information on menu numbers, see "About menu numbers" on page 26.

• The arrow mark (⇒) refers you to another setting list that appears after you make a setting, or to an operation that is to be carried out as a result of a setting.

E INSTALLATION SETTINGS menu

LANDING ADJUST...: Set the initial value of landing, alignment, signal level adjustment, etc. ⇒ E1

ALIGNMENT...: Adjust the position and size of the picture and convergence. ⇒ E2

DIGITAL UNIFORMITY ADJ...: Adjust the color unevenness of the CRT. ⇒ E3

E1 LANDING ADJUST... menu

Set the initial value of landing, alignment, signal level adjustment, etc.

NS: Correct the beam landing shift at the top center and bottom center of the screen.

RESTORE FACTORY DATA: Reset adjustment to the default setting. ⇒ E11

E11 RESTORE FACTORY DATA menu

Reset adjustment to the default setting.

The following message appears.

RESET FACTORY DATA?

OK: Press the ENTER or End button to reset adjustment to the default setting.

CANCEL: Press the MENU button to cancel the reset operation.

E2 ALIGNMENT... menu


Adjust the position size or geometry of the picture or convergence with the UP and DOWN buttons or PHASE knob.

ALIGNMENT (1/3) menu


Adjust the position or size of the picture of the monitored signal system, aspect and scan size.

ROTATION: Compensates for the screen rotation which occurs when the monitor is installed facing north or south.

The data is also applied for the monitored signal system, aspect and scan size.

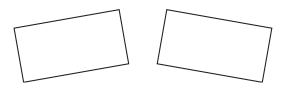

H PHASE: Adjust the horizontal picture position.

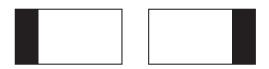


V CENTER: Adjust the vertical picture position.



H SIZE: Adjust the width of the picture.



V SIZE: Adjust the height of the picture.

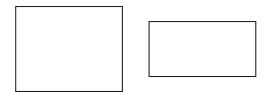

SUB CONTRAST: Adjust the center value of the contrast when the image size or signal system is changed.

ALIGNMENT (2/3) menu


Adjust the geometry of the picture.

H PIN: Correct side pincushion distortion.






H PIN BAL: Correct the balance of side pincushion distortion.

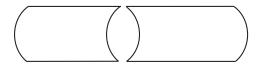



H CORNER PIN: Correct pincushion distortion at the sides of the picture.

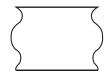



H CORNER S: Correct S pincushion distortion at the sides of the picture.

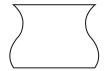

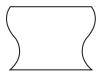


H KEY: Correct trapezoid distortion.





H KEY BAL: Correct the balance of trapezoid distortion.



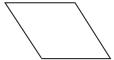

ALIGNMENT (3/3) menu

Adjust the convergence.

V STATIC CONV: Adjust vertical static convergence on the whole screen.

V CONV TOP: Adjust vertical convergence at the top of the screen.

V CONV BOT: Adjust vertical convergence at the bottom of the screen.

H STATIC CONV: Adjust horizontal static convergence on the whole screen.

RESTORE FACTORY DATA: Reset the

ALIGNMENT data of the monitored signal system, aspect and scan size to the default setting. The following message appears to confirm the data reset operation.

RESTORE FACTORY DATA?

OK: Press the ENTER or Ent button to reset the data.

CANCEL: Press the MENU button to cancel the reset operation.

E3 DIGITAL UNIFORMITY ADJ... menu

Adjust the color unevenness of the CRT.

The signal system, aspect and scan size for the adjustment are displayed on the top of the screen.

MANUAL...: Adjust with the MANUAL knobs. ⇒ E31

AUTO FULL POINTS ADJ: Automatically adjust the whole area of the screen in sequence using the Sony BKM-14L Auto Setup Probe. ⇒ E32

AUTO ONE POINT ADJ: Automatically adjust only the selected adjustment point of the screen using the Sony BKM-14L Auto Setup Probe. ⇒ E33

SIGNAL: Select the white signal to be used for adjustment (default setting is EXT).

EXT: Use an external input signal. Input the appropriate signal.

INT: Use an internal white signal.

RESTORE FACTORY DATA: Reset the DIGITAL

UNIFORMITY data of the monitored signal system, aspect and scan size to the default setting. The following message appears to confirm the data reset operation.

RESTORE FACTORY DATA?

OK: Press the ENTER or Ent button to reset the data.

CANCEL: Press the MENU button to cancel the reset operation.

E31 MANUAL... menu

Adjust the gain of R, G and B with the MANUAL knobs.

MANUAL ADJUST: Adjust the gain. ⇒ E311 (It may take some time to display the next menu.)

CURSOR H SIZE: Specify the horizontal size of the cursor (1 to 5).

V SIZE: Specify the vertical size of the cursor (1 to 5).

Knobs and buttons used for each adjustment


RED: CONTRAST KNOB (Adjust the R gain with the CONTRAST knob.)

GREEN: BRIGHT KNOB (Adjust the G gain with the BRIGHT knob.)

BLUE: CHROMA KNOB (Adjust the B gain with the CHROMA knob.)

CURSOR POSITION: 10KEY (Move the cursor using the numeric keypad (except the 5 button) as illustrated below. Turn the cursor ON/OFF using the 5 button.)

The cursor moves in the direction of the arrow corresponding to the pressed button.

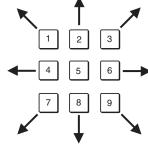

LUMINANCE: PHASE KNOB (Adjust the phase with the PHASE knob.)

E311 MANUAL ADJUST menu

Adjust the gain at the cursor position using the CONTRAST (RED), BRIGHT (GREEN), CHROMA (BLUE) and PHASE (LUMINANCE) knobs. Move the cursor using the numeric keypad.

To reset RED/GREEN/BLUE to the value before adjustment

When you are adjusting the gain using the MANUAL adjustment knobs, you can reset the setting to the one before adjustment by pressing the corresponding MANUAL button.

To cancel adjustment

Press the MENU button. The adjusted data is cleared and the screen returns to E31. (It may take some time to change to the previous menu.)

To confirm adjustment

Press the ENTER (Ent) button.

When you want to erase characters from the screen while adjusting manually

Press the CHAR OFF button. The characters disappear. To display characters, press the CHAR OFF button again.

E32 AUTO FULL POINTS ADJ menu

Automatically adjust the whole area of the screen in sequence using the Sony BKM-14L Auto Setup Probe. Before entering the AUTO FULL POINTS ADJ menu, connect the BKM-14L to the OPTION connector. The following message appears. (It may take some time to change to the next menu.)

SET PROBE ON CURSOR

To perform adjustment, operate the BKM-14L as follows:

- ① Place the BKM-14L on the cursor displayed in the center of the screen. The adjustment starts. When the adjustment is completed, the cursor is displayed at the next adjustment point.
- ② Move the BKM-14L to the cursor. The next adjustment is performed.

In the same way, adjust each adjustment point guided by the cursor. When the adjustment of all points is completed, the screen automatically returns to the INSTALLATION SETTINGS menu.

To cancel adjustment

Press the MENU button. The adjusted data is cleared and the screen returns to the DIGITAL UNIFORMITY ADJ... menu. (It may take some time to change to the previous menu.)

If the BKM-14L is not placed on the cursor

The following message appears, and the cursor moves to the right and left alternately on the screen.

DO YOU WISH TO CANCEL? CANCEL: LEFT CURSOR CONTINUE: RIGHT CURSOR

To abort, place the BKM-14L on the cursor when it is displayed on the left. Returns to the DIGITAL UNIFORMITY ADJ... menu.

To continue, place the BKM-14L on the cursor when it is displayed on the right. Returns to AUTO FULL POINTS ADJ menu.

E33 AUTO ONE POINT ADJ menu

Automatically adjust only the selected adjustment point of the screen using the Sony BKM-14L Auto Setup Probe. Before entering the AUTO ONE POINT ADJ menu, connect the BKM-14L to the OPTION connector. The cursor flashes in the center of the screen.

Knobs and buttons used for each adjustment

CURSOR POSITION: 10KEY: Move the cursor using the numeric keypad (except the 5 button). Turn the cursor ON/OFF using the 5 button.

TO CANCEL: MENU KEY: Press the MENU button to clear the adjusted data and return to the previous menu.

TO CONFIRM: ENTER KEY: Press the ENTER or Ent button to confirm the adjusted data.

To perform adjustment, operate the BKM-14L as follows:

① Move the cursor to the desired point using the numeric keypad (except the 5 button), and press the ENTER or Ent button. The following message appears and the cursor returns to the center.

SET PROBE ON CURSOR

Note

If you press the ENTER or Ent button without moving the cursor, the screen returns to the DIGITAL UNIFORMITY ADJ... menu.

- ② Place the BKM-14L on the cursor displayed in the center of the screen. The adjustment of the center of the screen starts. "IN PROGRESS" appears during adjustment, and the cursor returns to the point set in step ① when the adjustment is completed.
- Move the BKM-14L to the cursor. Adjustment of the specified point is performed. "IN PROGRESS" appears during adjustment, and the cursor flashes when the adjustment of that point is completed.

To adjust another point of the screen

Move the cursor to the desired point using the numeric keypad (except the 5 button), and press the ENTER or Ent button. Then place the BKM-14L on the cursor to perform the adjustment. Repeat this procedure for each adjustment point.

To finish the adjustment

When the adjustment of the specified points is completed, press the ENTER or Ent button without operating the numeric keypad. The adjusted data is stored in the memory and the screen returns to the INSTALLATION SETTINGS menu. (It may take some time to change to the previous menu.)

Note

Operating the numeric keypad before pressing the ENTER or Ent button starts the adjustment.

To cancel adjustment

Press the MENU button. The adjusted data is cleared and the screen returns to the DIGITAL UNIFORMITY ADJ... menu. (It may take some time to change to the previous menu.)

If the BKM-14L is not placed on the cursor

The following message appears, and the cursor moves to the right and left alternately on the screen.

DO YOU WISH TO CANCEL? CANCEL: LEFT CURSOR CONTINUE: RIGHT CURSOR

To abort, place the BKM-14L on the cursor when it is displayed on the left. Returns to DIGITAL UNIFORMITY ADJ... menu.

To continue, place the BKM-14L on the cursor when it is displayed on the right. Returns to AUTO ONE POINT ADJ menu.

F System Data Operation **− FILE MANAGEMENT Menu**

Overview

The system data is saved, copied and deleted.

The following operations are possible with this menu.

- Saving data to a "Memory Stick" (SAVE TO... menu)
- Copying data from a "Memory Stick" or other monitor (COPY FROM... menu)
- Deleting a file in a "Memory Stick" (DELETE... menu)
- Maintenance of the system data (DATA MAINTENANCE... menu)

Structure of the FILE MANAGEMENT Menu

Level 1	Level 2	Level 3
SAVE TO F1	SAVE TO MEMORY STICK F11	MEMORY STICK F111
COPY FROM	OTHER MONITOR	OTHER MONITOR F211
	MEMORY STICK	MEMORY STICK F221
DELETE F3	DELETE MEMORY STICK F31	MEMORY STICK F311
DATA MAINTENANCE	BACK UP SYSTEM DATA F41	
F4	RE-STORE SYSTEM DATA F42	
	RE-LOAD FACTORY DATA F43	RE-LOAD FACTORY DATA F431

Setting Lists in the FILE MANAGEMENT Menu

This section explains the setting lists displayed in the menu.

How to read the setting lists

• For purposes of explanation, each setting list is preceded by a menu number. These numbers are not displayed on the screen.

For more information on the menu numbers, see "About menu numbers" on page 26.

• The arrow mark (⇒) refers you to another setting list that appears after you make the setting, or to an operation that is to be carried out as a result of the setting.

F FILE MANAGEMENT menu

SAVE TO...: Save the data. \Rightarrow F1

COPY FROM...: Copy the data. ⇒ F2

DELETE...: Delete the file. \Rightarrow F3

DATA MAINTENANCE...: Service the system data. ⇒ F4

F1 SAVE TO... menu

Save the data in the "Memory Stick". ⇒ F11

Note

Use the "Memory Stick" after formatting.

F11 SAVE TO MEMORY STICK menu

Select the name of the file to which to write data, or create a new file name. \Rightarrow F111

NEW NAME: Enter a new name (1 to 20 characters). The usable symbols are ".", "_" and "\$".

F111 MEMORY STICK menu

The following message appears.

OVERWRITE THIS FILE?

OK: Press the ENTER or Ent button to overwrite the data.

CANCEL: Press the MENU button to cancel overwriting.

F2 COPY FROM... menu

Select the file to copy the data.

OTHER MONITOR...: Select the data of other monitor. ⇒ F21

MEMORY STICK...: Select the file of the "Memory Stick". ⇒ F22

F21 OTHER MONITOR... menu

Assign the ID No. of the source monitor.

MONITOR ID...: Enter the ID No. of the monitor.

⇒ F211

When the NETWORK switch is set to PEER TO PEER, this is not selectable.

F211 OTHER MONITOR menu

Select the data to be copied.

ALL: Copy all data.

PICTURE PRESET: Copy the picture preset data. COLOR TEMP: Copy the color temperature data. CH MEMORY: Copy the channel memory data.

SYSTEM: Copy the system data.

F22 MEMORY STICK... menu

Select the file name in the source "Memory Stick". ⇒ F221

F221 MEMORY STICK menu

Select the data to be read.

ALL: Copy all data.

PICTURE PRESET: Copy the picture preset data. **COLOR TEMP:** Copy the color temperature data. **CH MEMORY:** Copy the channel memory data.

SYSTEM: Copy the system data.

F3 DELET... menu

Delete the file in the "Memory Stick". ⇒ F31

F31 DELETE MEMORY STICK menu

Delete the file in the "Memory Stick". Select the file ⇒ F311

F311 MEMORY STICK menu

The following confirmation message appears.

DELETE THIS FILE?

OK: Press the ENTER or Ent button to delete data.

CANCEL: Press the MENU button to cancel the delete operation.

F4 DATA MAINTENANCE... menu

The password is confirmed to display the DATA MAINTENANCE... menu.

BACK UP SYSTEM DATA...: Write the data to the "Memory Stick". ⇒ F41

RE-STORE SYSTEM DATA...: Read the data from the "Memory Stick". ⇒ F42

RE-LOAD FACTORY DATA...: Read the factory default data of the installed board. ⇒ F43

F41 BACK UP SYSTEM DATA menu

The "IN PROGRESS -" is displayed during data writing. (It may take some time to write the data.)

F42 RE-STORE SYSTEM DATA menu

The following message appears to confirm the data restore operation.

ALL DATA WILL BE RESTORED AND MONITOR WILL RESTART ARE YOU SURE?

- **OK:** To continue, press the ENTER or Ent button. Read the data from the monitor "Memory Stick" and automatically restart the monitor.
- **CANCEL:** To cancel, press the MENU button. Return to the DATA MAINTENANCE... menu.

F43 RE-LOAD FACTORY DATA menu

Select a slot where a board is installed to reload factory default data to the board.

Select SLOT2 to SLOT6. SLOT5 is divided into VIDEO data and BLANKING data. ⇒ F431

F431 RE-LOAD FACTORY DATA menu

The following message appears to confirm the data reload operation.

DATA RESET TO ITS FACTORY SETTING AND MONITOR WILL RESTART ARE YOU SURE?

- **OK:** To continue, press the ENTER or Ent button. Resets the data and automatically restart the monitor.
- **CANCEL:** To cancel, press the MENU button. Returns to the RE-LOAD FACTORY DATA menu.

G Displaying Information On the Monitor – STATUS Menu

Overview

This menu is used to view general data about the monitor status, current channel, etc.

The following information is displayed on the two pages of the STATUS menu.

- Data about the current channel and the input adaptor installed in the slots in the rear panel (STATUS (1/2) menu)
- Data about the monitor and the controller in use (STATUS (2/2) menu)

Structure of the STATUS Menu

Level 1	Level 2		
CH STATUS G1	СН		
	OP		
	IN		
	FORMAT		
	NAME		
SLOT STATUS G2	MODEL NAME		
	SERIAL NO		
MODEL NAME			
SERIAL NO			
SOFTWARE VERSION			
OPERATION TIME			
CRT TURN ON TIME			
IP ADDR			
CONTROLLER STATUS G3	MODEL NAME		
	SERIAL NO		
	SOFTWARE VERSION		
	IP ADDR		

Setting Lists in the STATUS Menu

This section explains the setting lists displayed in the menu.

How to read the setting lists

• For purposes of explanation, each setting list is preceded by a menu number. These numbers are not displayed on the screen.

For more information on the menu numbers, see "About menu numbers" on page 26.

• The arrow mark (⇒) refers you to another setting list that appears after you make the setting, or to an operation that is to be carried out as a result of the setting.

G STATUS menu

Select the STATUS (1/2) menu or STATUS (2/2) menu.

STATUS (1/2) menu

CH STATUS...: Display the information of the used channel. ⇒ G1

SLOT STATUS...: Display the type of OPTION 1 to $3. \Rightarrow \boxed{G2}$

HD-SDI/D1...: Display when BKM-61D is installed.

SDI/COMPOSITE...: Display when BKM-62HS is installed.

COMPONENT...: Display when BKM-68X is installed.

EMPTY...: Display when no adaptor is installed.

STATUS (2/2) menu

Data on the monitor and controller is displayed.

MODEL NAME: Model name of the monitor SERIAL NO: Serial number of the monitor SOFTWARE VERSION: Software version at

SOFTWARE VERSION: Software version of the monitor

OPERATION TIME: Operation time (in hours) of the monitor

CRT TURN ON TIME: Used time of the CRT (in hours)

IP ADDR: IP address of the monitor

Note

When the NETWORK switch is set to PEER TO PEER, "192.168.000.001" is displayed.

CONTROLLER STATUS...: Information on the controller ⇒ G3

G1 CH STATUS... menu

Display the information on the used channel.

The information of the assigned internal signal is displayed on the channels 80 to 89 and 91 to 97.

CH: Channel number

OP: Option slot number (OPTION1 to 3)

IN: Input connector numberFORMAT: Input signal format

NAME: Channel name

The information of the internal signal is displayed in channels 80 to 89 and 91 to 97.

G2 SLOT STATUS menu

Display the type of input adaptor installed in OPTION1 to 3.

MODEL NAME: Model name SERIAL NO: Serial number

G3 CONTROLLER STATUS... menu

Display information on the controller.

MODEL NAME: Model name SERIAL NO: Serial number

SOFTWARE VERSION: Software version

IP ADDR: IP address

Note

When the NETWORK switch is set to PEER TO PEER, "192.168.000.100" is displayed.

⊞ Setting the Controller – CONTROLLER Menu

Overview

This menu is for the network setting of the controller.

- Setting the display method of the monitor select display window (MONITOR ID DISPLAY menu)
- Settings for IP address, subnet mask and default gateway of the controller (NETWORK SETTINGS... menu)
- Displaying the setting of the NETWORK switch (NETWORK SW menu)

Structure of the CONTROLLER Menu

Level 1	Level 2	Level 3
MONITOR ID DISPLAY H1		
NETWORK	IP ADDRESS	
SETTINGS H2	SUBNET MASK	
	DEFAULT GATEWAY	
	ADDRESS	
NETWORK SW		
SNMP	CONTACT	
SETTINGS H3	NAME	
	LOCATION	
	TRAP	

Setting Lists in the CONTROLLER Menu

This section explains the setting lists displayed in the menu.

How to read the setting lists

• For purposes of explanation, each setting list is preceded by a menu number. These numbers are not displayed on the screen.

For more information on the menu number, see "About menu numbers" on page 26.

• The arrow mark (⇒) refers you to another setting list that appears after you make the setting, or to an operation that is to be carried out as a result of the setting.

H CONTROLLER menu

The network, system, etc. of the controller is set.

MONITOR ID DISPLAY: When the NETWORK switch is set to LAN, set the display method of the monitor select display window. ⇒ H1

NETWORK SETTINGS...: Display the NETWORK SETTINGS menu. ⇒ H2

NETWORK SW: Display the setting of the NETWORK switch (LAN or PEER TO PEER). As the NETWORK switch is not equipped with BVM-A14F5U/A14F5M/A14F5A and the function is set to LAN mode, when BVM-A14F5U/A14F5M/A14F5A is used as the controller, this is not displayed.

SNMP SETTINGS...: Set CONTACT, NAME, LOCATION and TRAP. ⇒ H3

H1 MONITOR ID DISPLAY menu

When the NETWORK switch is set to LAN, the display method of the monitor select display window is set. As the NETWORK switch is not equipped with BVM-A14F5U/A14F5M/A14F5A and the function is set to LAN mode, when BVM-A14F5U/A14F5M/A14F5A is used as the controller, this is always selectable.

ON: Always displayed (default).

AUTO: Displayed during operating by the remote connection and cleared after operation

OFF: Not displayed.

H2 NETWORK SETTINGS... menu

Set the IP address, subnet mask and default gateway.

IP ADDRESS: Set the IP address (default setting is "192.168.000.100").

SUBNET MASK: Set the subnet mask (default setting is "255.255.255.0").

DEFAULT GATEWAY: Set the default gateway on or off (default setting is OFF).

ADDRESS: Set the default gateway (default setting is "---.-- (no setting)").

CANCEL: Select to cancel the setting. **CONFIRM:** Select to save the setting.

Note

When the NETWORK switch is set to PEER TO PEER, the IP address is set to "192.168.000.100" regardless of the display.

When the NETWORK switch is set to LAN, the IP address is set to the displayed one.

H3 SNMP SETTINGS... menu

CONTACT menu: Set the information of the administrator.

NEW NAME: Enter a new name (up to 20 characters).

The usable symbols are "(", ")", ".", "-", "+", "/", "%", "*", "#", "_", "\$" and "(space)" (12 symbols).

NAME menu: Set the information for the administration (device ID).

NEW NAME: Enter a new name (up to 20 characters).

The usable symbols are "(",")", ".", "-", "+", "/", "%", "*", "#", "_", "\$" and "(space)" (12 symbols).

LOCATION menu: Set the location information.

NEW NAME: Enter a new name (up to 20 characters).

The usable symbols are "(", ")", ".", "-", "+", "/", "%", "*", "#", "_", "\$" and "(space)" (12 symbols).

TRAP menu: Set the address to send the information. TRAP1 and TRAP2 are set.

TRAP1: Set the IP address (default setting is "000.000.000.000").

TRAP2: Set the IP address (default setting is "000.000.000.000").

CANCEL: Select to cancel the changed or confirmed setting.

CONFIRM: Select to save the changed or confirmed setting.

☐ Setting Key Protect− KEY PROTECT Menu

Overview

The data is locked so that they cannot be changed by an unauthorized user.

Setting Lists in the KEY PROTECT Menu

This section explains the setting lists displayed in the menu.

How to read the setting lists

• For purposes of explanation, each setting list is preceded by a menu number. These numbers are not displayed on the screen.

For more information on the menu number, see "About menu numbers" on page 26.

The arrow mark (\Longrightarrow) refers you to another setting list that appears after you make the setting, or to an operation that is to be carried out as a result of the setting.

II KEY PROTECT menu

ON: The button on the controller (except the menu operation buttons and monitor select buttons) does not function and other settings are not changeable.

OFF: Release the lock.

Appendixes

Specifications

General

System

15.625 kHz - 45 kHz (For details, see "Available Signal Systems" on page 58.)

CRT

Super fine pitch Trinitron, 4:3 aspect ratio Aperture grille pitch:

0.3 mm, 90 degree deflection, Ø30.6 mm diameter in-line gun

Effective picture size

With 16:9 aspect ratio:

 $386 \times 218 \text{ mm } (15^{1}/4 \times 8^{5}/8 \text{ inches})$

(W/II)

443 mm $(17^{1}/2 \text{ inches})$ (diagonal size)

With 4:3 aspect ratio:

 $386 \times 291 \text{ mm } (15^{1}/4 \times 11^{1}/2 \text{ inches})$

(w/h)

482 mm (19 inches) (diagonal size)

CRT protection: EHT (extremely high tension)

protection type

Warm-up time:

approx. 30 minutes

Anode voltage:

27 kV with no beam current

Nominal chromaticity coordinates:

SMPTE C phosphor (BVM-A20F1U)

	x	у
R	0.630	0.340
G	0.310	0.595
В	0.155	0.070

EBU phosphor (BVM-A20F1M/A20F1A)

	X	у
R	0.640	0.330
G	0.290	0.600
В	0.150	0.060

Error: ± 0.005 or less

Power consumption

200 W (When an optional adaptor is installed)

Power requirements

100 to 240 V AC, 2.1 to 0.9 A, 50/60 Hz

Peak inrush current

- ① Power ON, current probe method: 47 A (240 V)
- ② Hot switching inrush current, measured in accordance with European standard EN55103-1 22 A (230 V)

Mass

approx. 40 kg (88 lb 3 oz)

Input/output connectors

Control

OPTION: Mini-DIN 8-pin (female) × 1 PARALLEL REMOTE: D-sub 9-pin

 $(female) \times 1$

SERVICE: D-sub 9-pin (male) × 1 LAN (10BASE-T/100BASE-TX):

 $RJ-45 \times 1$

DC 5V OUT: Circle 4-pin (female) \times 1

Video signal

Differential gain

Less than 5% (for luminance from 0 to 100 cd/m²)

Differential phase

Less than 5° (for luminance from 0 to 100 cd/m²)

Frequency response

48 Hz to 30 MHz, +1 dB/-3 dB

DC restoration Back porch type

Black level fluctuation: less than 1% for 10 % to 90% APL input signal

variation

Synchronization

Vertical blanking time

Less than 650 µs.

Horizontal blanking time

Less than 3.77 µs. (1080/60I, 1035/60I)

Picture performance

Normal scan 5% over scan of CRT effective screen

area (±10% of CRT effective screen

area)

Under scan 3% under scan of CRT effective screen

area (±10% of CRT effective screen

area)

Linearity Within a central area bounded by a circle

with a diameter equal to the picture height, less than 0.5 % of the picture height, and outside the same area, about 1 % of the picture height

Color temperature

D61, D65, D93 (adjustable to other color temperatures)

Convergence error

Within a central area bounded by a circle with a diameter equal to the picture

height:

less than 0.4 mm with a central area bounded by a circle and less than 0.7

mm at any other point.

Standard luminescence

100 cd/m² (at standard 1 Vp-p, 100% white signal)

Raster size stability

Less than 1% of picture height

(at 100 cd/m² peak luminescence, 10

to 90% APL)

Resolution 700 TV lines (16:9)

900 TV lines (4:3)

(at screen center, 100 cd/m²

luminescence)

Operating conditions

Temperature 0°C to 35°C (32°F to 95°F)

Optimum temperature

20°C to 30°C (68°F to 86°F)

Humidity 0% to 90% (no condensation)

Pressure 700 hPa to 1060 hPa

Storage and transport conditions

Temperature -10° C to 40° C (14° F to 104° F)

Humidity 0% to 90%

Pressure 700 hPa to 1060 hPa

Accessories supplied

AC power cord (1)

AC plug holder (1)

Fuse (1)

Tally plate (1)

4:3 mask (1)

Operation manual (1)

Menu tree reference (1)

Cleaning of the CRT surface (1)

Design and specifications are subject to change without notice.



Available Signal Systems

System	Total lines per frame	Active lines per frame	Frame rate (Hz)	Scanning format	Aspect ratio	Standard	Display on the monitor*3	
575/50I	625	575	25	2:1 interlace	16:9/4:3	Rec ITU-R BT.601	575/50I	
480/59.941	525	483	30/1.001	2:1 interlace	16:9/4:3	Rec ITU-R BT.601	480/601	
576/50P	625	576	50	Progressive	16:9/4:3	Rec ITU-R BT.1358	576/50P	
480/59.94P	525	483	60/1.001	Progressive	16:9/4:3	SMPTE 293M/ Rec ITU-R BT.1358	480/60P	
1080/24PsF	1125	24		16:9	SMPTE RP211	1080/481		
1000/24656	1123	1080	24/1.001	2:1 interlace	10.9	SWIFTE REZTT	1000/401	
1080/50I*1	1125	1080	25	2:1 interlace	16:9	SMPTE 274M	1080/501	
			30			SMPTE 240M/		
1035/601	1125	1035	30/1.001	2:1 interlace	16:9	SMPTE 260M/ BTA S-001B	1035/601	
4000/001*2	1125	1080	30	Out intorioso	16.0	0MDTE 074M	1000/001	
1080/60I ^{*2}	1125	1080	30/1.001	2:1 interlace	ice 16:9 SMPTE 274M		1080/601	
720/50P	750	720	50	Progressive	16:9	SMPTE 296M	720/50P	
720/60P	750	700	60	Prograssiva	16:9	OMPTE COOM	720/60P	
720/007	750	720	60/1.001	Progressive	10.9	SMPTE 296M	720/000	

^{*1} Also applicable to 1080/25PsF.

^{*2} Also applicable to 1080/30PsF.

^{*3} When no signal is input or the input signal is not available, NO SYNC is displayed on the monitor.

Available Signal Formats

Signal format		System	BKM-61D	BKM-62HS	BKM-68X	Standard	
Analog Comp							
NTSC	Setup 0 r.5		480/59.941	0	×	×	SMPTE 170M
PAL			575/501	0	×	×	Rec.ITU-R BT.470
PAL-M			480/59.941	0	×	×	Rec.ITU-R BT.470
SECAM			575/501	0	×	×	Rec.ITU-R BT.470
Analog (Y/C)							
NTSC	Sotup 0		480/59.941	0	×	×	
PAL	1		575/501	0	×	×	
PAL-M			480/59.941	0	×	×	
SECAM			575/501	0	×	×	
Analog Comp	onent		1	l			
			1035/601*	×	×	0	SMPTE 240M/BTA S-001B
			1080/601*	×	×	0	OMPTE OZAM
			1080/501	×	×	0	SMPTE 274M
			1080/30PsF*	×	×	0	
			1080/25PsF	×	×	0	SMPTE RP 211
			1080/24PsF*	×	×	0	
			720/60P*	×	×	0	OMPTE COOM
			720/50P	×	×	0	SMPTE 296M
			480/59.94P	×	×	0	SMPTE 293M/ Rec.ITU-R BT.1358
			576/50P	×	×	0	Rec.ITU-R BT.1358
	NI4 O /ONA	DTE	480/59.941	×	×	0	
Component	N10/SM	PIE	575/501	×	×	0	EBU N10
level	Beta	0 7.5	480/59.941	×	×	0	
Analog RGB							
			1035/601*	×	×	0	SMPTE 240M/BTA S-001B
			1080/601*	×	×	0	
			1080/501	×	×	0	SMPTE 274M
			1080/30PsF*	×	×	0	
	1080/25PsF			×	×	0	SMPTE RP 211
			1080/24PsF*	×	×	0	
			720/60P*	×	×	0	
			720/50P	×	×	0	SMPTE 296M
			480/59.94P	×	×	0	SMPTE 293M/ Rec.ITU-R BT.1358
			576/50P	×	×	0	Rec.ITU-R BT.1358
			480/59.941	×	×	0	Rec.ITU-R BT.601
			575/501	×	×	0	Rec.ITU-R BT.601


Signal format			System	BKM-61D	BKM-62HS	BKM-68X	Standard		
D1			<u>'</u>				•		
		480/59.941	0 0 x		CMPTE OFOM				
			575/50I	0	0	×	- SMPTE 259M		
D2				•					
NTSC	Setup	0	480/59.941	0					
NISC	level	7.5	460/59.941		×	×	SMPTE 259M		
PAL			575/501	0	×	×			
HD SDI (10 b	oit system o	only)	•						
Single Link	4:2:2	YPBPR	1035/601*	×	0	×	SMPTE 292M		
Single Link	4:2:2	YPBPR					SMPTE 292M		
Dual Link	4:4:4	YPBPR	1080/601*	×	×	0	×	SMPTE 372M	
Duai Lilik	4.4.4	GBR					SIVIF I E 372IVI		
Single Link	4:2:2	YPBPR		×			SMPTE 292M		
Dual Link	4:4:4	YPBPR	1080/501		0	×	SMPTE 372M		
Duai Lilik	4.4.4	GBR							SIVIF I E 372IVI
Single Link	4:2:2	YPBPR					SMPTE 292M		
Dual Link		YPBPR	1080/30PsF*	×	0	×	SMPTE 372M		
Duai Lilik	4.4.4	GBR					SIVIF I E 372IVI		
Single Link	4:2:2	YPBPR					SMPTE 292M		
Dual Link	4:4:4	YPBPR	1080/25PsF	×	0	×	SMPTE 372M		
Duai Lilik	4.4.4	GBR							SIVIF I E 372IVI
Single Link	4:2:2	YPBPR					SMPTE 292M		
Dual Link	4:4:4	YPBPR	1080/24PsF*	×	0	×	SMPTE 372M		
Duai Lilik	4.4.4	GBR					GIVII 1E 3/2IVI		
Single Link	4:2:2	YPBPR	720/60P*	×	0	×	SMPTE 292M		
Single Link	4:2:2	YPBPR	720/50P	×	0	×	SMPTE 292M		


^{*} Also compatible with 1/1.001.

Unit: mm (inches)


Front

Front

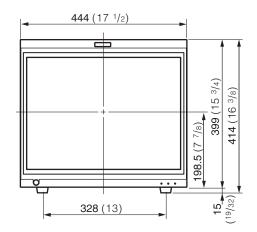


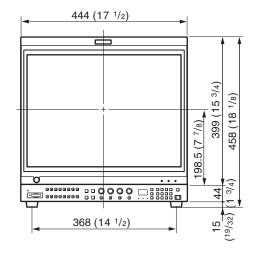


Side

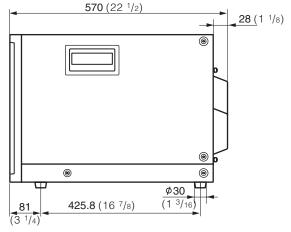


Side

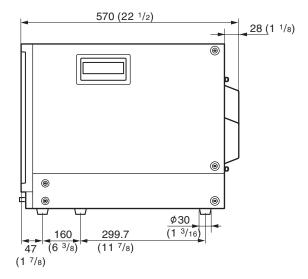

Rear

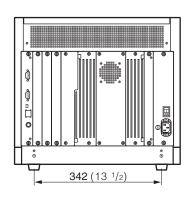


Rear

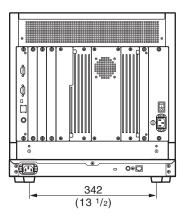


probes other than the Sony BKM-14L to the monitor.


Connection cable for UDT INSTRUMENTS SLS 9400-FC probe

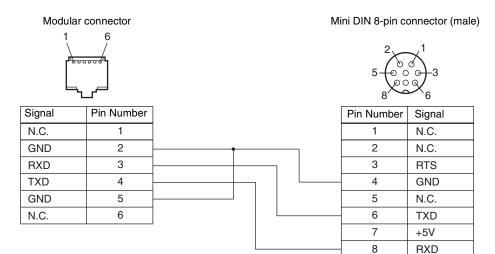


Connection cable for KONICA MINOLTA CA-100 probe

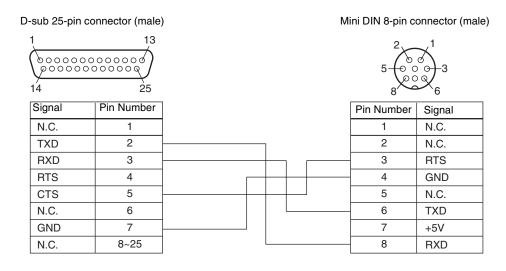


Connection cable for KONICA MINOLTA CA-100plus probe

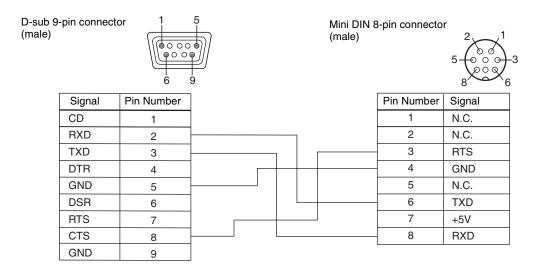

Connection cable for DK-TECHNOLOGIES PM 5639 probe (corresponds to DK-TECHNOLOGIES PM 5639/00 cable)

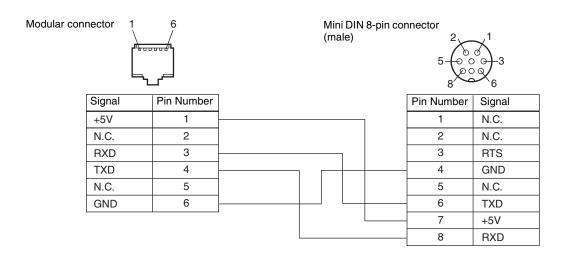

Connection cable for THOMA TF6 probe

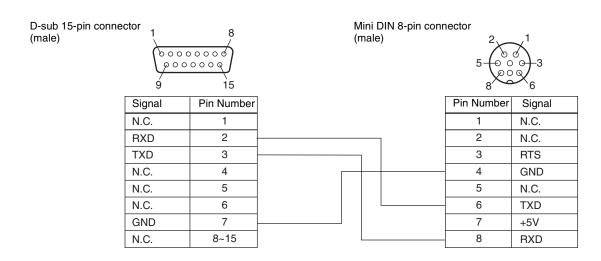

Menu Index

The menu index shows the menu items provided with this monitor in alphabetical order. For you reference, each menu item is followed by the page of this manual on which

the item is explained, its menu number, and the main menu that the item belongs to.

A ALIGNMENT 47 E2 INSTALLATION SETTINGS menu ANALYZE 36 B5 COLOR TEMP ADJ menu APPLY PASSWORD 45 D62 SYSTEM CONFIGURATION menu AUTO 32 IATI PICTURE ADJ menu AUTO ADJUST 32 IATI PICTURE ADJ menu AUTO FULL POINTS ADJ 49 E32 INSTALLATION SETTINGS menu AUTO ONE POINT ADJ 49 E33 INSTALLATION SETTINGS menu B BACK UP SYSTEM DATA 51 F4T FILE MANAGEMENT menu B BLANKING SETTINGS 45 D61 SYSTEM CONFIGURATION menu C CH STATUS 53 IGT STATUS menu CHANGE PASSWORD 45 D61 SYSTEM CONFIGURATION menu CHANGE PASSWORD 45 D61 SYSTEM CONFIGURATION menu COHPONENT 40 INPUT CONFIGURATION menu COMPONENT 40 INPUT CONFIGURATION menu COMPONENT 40 INPUT CONFIGURATION menu CONTROLLER RETATUS 53		Menu Item	Page	Menu number	Main menu
APPLY PASSWORD	Α	ALIGNMENT	47	E2	INSTALLATION SETTINGS menu
AUTO 32 AT PICTURE ADJ menu AUTO ADJUST 32 AT PICTURE ADJ menu AUTO ADJUST 32 AT PICTURE ADJ menu AUTO FULL POINTS ADJ 49 BEZ COLOR TEMP ADJ menu AUTO ONE POINT ADJ 49 BEZ INSTALLATION SETTINGS menu AUTO ONE POINT ADJ 49 BEZ INSTALLATION SETTINGS menu AUTO ONE POINT ADJ 49 BEZ INSTALLATION SETTINGS menu B BACK UP SYSTEM DATA 51 F41 FILE MANAGEMENT menu BLANKING SETTINGS 45 D41 SYSTEM CONFIGURATION menu C C H STATUS 53 GT STATUS menu CHANGE PASSWORD 45 D61 SYSTEM CONFIGURATION menu CHANNEL NAME 41 C41 INPUT CONFIGURATION menu COLOR TEMP ADJ 33 B COLOR TEMP ADJ menu COMPONENT 40 C15 INPUT CONFIGURATION menu COMPOSITE 39 CT3 INPUT CONFIGURATION menu CONTROLLER 54 H1 CONTROLLER menu CONTROLLER 54 H1 CONTROLLER menu CONTROLLER STATUS 53 G3 STATUS menu COPY FROM 33 A3 PICTURE ADJ menu 16 B3 COLOR TEMP ADJ menu 17 CONTROLLER MENU D DATA MAINTENANCE 51 F2 FILE MANAGEMENT menu D DATA MAINTENANCE 51 F2 FILE MANAGEMENT menu D DELETE 51 F3 FILE MANAGEMENT menu DELETE MEMORY STICK 51 F3 FILE MANAGEMENT menu DEL		ANALYZE	36	B5	COLOR TEMP ADJ menu
AUTO ADJUST 32		APPLY PASSWORD	45	D62	SYSTEM CONFIGURATION menu
AUTO ADJUST 32 A11 PICTURE ADJ menu AUTO FULL POINTS ADJ 49 E32 INSTALLATION SETTINGS menu AUTO ONE POINT ADJ 49 B33 INSTALLATION SETTINGS menu B BACK UP SYSTEM DATA BLANKING SETTINGS 45 D41 SYSTEM CONFIGURATION menu C CH STATUS CHANGE PASSWORD CHANNEL NAME CHANNEL NAME COLOR TEMP ADJ COMPONENT COMPONENT COMPOSITE COMPOSITE CONTROLLER CONTROLLER COYFROM 33 A3 BCOLOR TEMP ADJ menu CONTROLLER COYFROM 34 COYFROM 35 COLOR TEMP ADJ menu CONTROLLER CONTROLLER COYFROM 36 B3 COLOR TEMP ADJ menu CONTROLLER COYFROM 36 B3 COLOR TEMP ADJ menu CONTROLLER COYFROM 36 B3 COLOR TEMP ADJ menu COYFROM 37 BYSTEM CONFIGURATION menu COMPOSITE CONTROLLER CONTROLLER CONTROLLER COYFROM 36 B3 COLOR TEMP ADJ menu COYFROM 37 BYSTEM CONFIGURATION menu COMPOSITE CONTROLLER CONTROLLER COYFROM 38 BYSTEM CONFIGURATION menu COMPOSITE COYFROM 39 COS INPUT CONFIGURATION menu FPILE MANAGEMENT menu DELETE 51 F31 F1LE MANAGEMENT menu DELETE MEMORY STICK DIGITAL UNIFORMITY ADJ 48 E33 INSTALLATION SETTINGS menu FORMAT DUAL LINK HD-SDI 39 COLOR TEMP ADJ menu INPUT CONFIGURATION menu FORMAT 39 COLOR TEMP ADJ menu INPUT CONFIGURATION menu INSTALLATION SETTINGS Menu K KEY PROTECT 55 II KEY PROTECT menu COLOR TEMP ADJ menu INPUT CONFIGURATION menu INSTALLATION SETTINGS menu K KEY PROTECT 55 II KEY PROTECT menu COLOR TEMP ADJ menu		AUTO	32	A1	PICTURE ADJ menu
AUTO FULL POINTS ADJ			35	B2	COLOR TEMP ADJ menu
AUTO FULL POINTS ADJ 49 E32 INSTALLATION SETTINGS menu AUTO ONE POINT ADJ 49 E33 INSTALLATION SETTINGS menu B BACK UP SYSTEM DATA 51 F41 FILE MANAGEMENT menu BLANKING SETTINGS 45 D41 SYSTEM CONFIGURATION menu CHANGE PASSWORD 45 D51 SYSTEM CONFIGURATION menu CHANNEL NAME 41 C4 INPUT CONFIGURATION menu COLOR TEMP ADJ 33 B COLOR TEMP ADJ menu COMPONENT 40 C515 INPUT CONFIGURATION menu COMPONENT 40 C515 INPUT CONFIGURATION menu CONTROLLER 54 H CONTROLLER menu CONTROLLER STATUS 53 G3 STATUS menu COPY FROM 33 A3 PICTURE ADJ menu COPY FROM 33 A3 PICTURE ADJ menu COPY FROM 33 A3 PICTURE ADJ menu COPY FROM 34 B3 COLOR TEMP ADJ menu COPY FROM 51 F2 FILE MANAGEMENT menu DELETE DELETE 51 F3 FILE MANAGEMENT menu DELETE MEMORY STICK 51 F31 FILE MANAGEMENT menu DK-TECHNOLOGIES 33 B COLOR TEMP ADJ menu DK-TECHNOLOGIES 34 INPUT CONFIGURATION menu INSTALLATION SETTINGS menu KEY PROTECT menu KEY PROTECT menu COLOR TEMP ADJ menu		AUTO ADJUST	32	A11	PICTURE ADJ menu
B BACK UP SYSTEM DATA 51			36	B21	COLOR TEMP ADJ menu
B BACK UP SYSTEM DATA 51 F41 FILE MANAGEMENT menu BLANKING SETTINGS 45 D4 SYSTEM CONFIGURATION menu C CH STATUS 53 G1 STATUS menu CHANGE PASSWORD 45 D61 SYSTEM CONFIGURATION menu CHANNEL NAME 41 C2 INPUT CONFIGURATION menu COLOR TEMP ADJ 33 B COLOR TEMP ADJ menu COMPONENT 40 C15 INPUT CONFIGURATION menu COMPOSITE 39 C13 INPUT CONFIGURATION menu CONTROLLER 54 H CONTROLLER menu CONTROLLER STATUS 53 G3 STATUS menu COPY FROM 33 A3 PICTURE ADJ menu 42 C5 INPUT CONFIGURATION menu 42 C5 INPUT CONFIGURATION menu DELETE MEMORY STICK 51 F3 FILE MANAGEMENT menu DELETE MEMORY STICK 51 F31 FILE MANAGEMENT menu DIGITAL UNIFORMITY ADJ 48 E3 INSTALLATION SETTINGS menu		AUTO FULL POINTS ADJ	49	E32	INSTALLATION SETTINGS menu
BLANKING SETTINGS		AUTO ONE POINT ADJ	49	E33	INSTALLATION SETTINGS menu
C CH STATUS 53 GI STATUS menu C CHANGE PASSWORD 45 DBI SYSTEM CONFIGURATION menu C CHANNEL NAME 41 C4 INPUT CONFIGURATION menu C COLOR TEMP ADJ 33 B COLOR TEMP ADJ menu C COMPONENT 40 CI5 INPUT CONFIGURATION menu C COMPOSITE 39 CI3 INPUT CONFIGURATION menu C CONTROLLER 54 H CONTROLLER menu C CONTROLLER STATUS 53 G3 STATUS menu C COPY FROM 33 AB PICTURE ADJ menu 36 BB COLOR TEMP ADJ menu 42 C5 INPUT CONFIGURATION menu 51 F2 FILE MANAGEMENT menu DELETE 51 F3 FILE MANAGEMENT menu DELETE MEMORY STICK 51 F31 FILE MANAGEMENT menu DK-TECHNOLOGIES 33 B COLOR TEMP ADJ menu DK-TECHNOLOGIES 33 B COLOR TEMP ADJ menu DUAL LINK HD-SDI 39 <td< td=""><td>В</td><td>BACK UP SYSTEM DATA</td><td>51</td><td>F41</td><td>FILE MANAGEMENT menu</td></td<>	В	BACK UP SYSTEM DATA	51	F41	FILE MANAGEMENT menu
CHANGE PASSWORD 45 De1 SYSTEM CONFIGURATION menu CHANNEL NAME 41 C4 INPUT CONFIGURATION menu COLOR TEMP ADJ 33 B COLOR TEMP ADJ menu COMPONENT 40 C15 INPUT CONFIGURATION menu COMPOSITE 39 C13 INPUT CONFIGURATION menu CONTROLLER 54 H CONTROLLER menu CONTROLLER STATUS 53 G3 STATUS menu COPY FROM 33 A3 PICTURE ADJ menu 36 B3 COLOR TEMP ADJ menu 42 C5 INPUT CONFIGURATION menu 51 F2 FILE MANAGEMENT menu DELETE 51 F3 FILE MANAGEMENT menu DELETE MEMORY STICK 51 F31 FILE MANAGEMENT menu DIGITAL UNIFORMITY ADJ 48 E3 INSTALLATION SETTINGS menu DW-TECHNOLOGIES 33 B COLOR TEMP ADJ menu F FILE MANAGEMENT 50 F FILE MANAGEMENT menu FORMAT 39		BLANKING SETTINGS	45	D4	SYSTEM CONFIGURATION menu
CHANNEL NAME	С	CH STATUS	53	G1	STATUS menu
COLOR TEMP ADJ 33 B COLOR TEMP ADJ menu		CHANGE PASSWORD	45	D61	SYSTEM CONFIGURATION menu
COMPONENT		CHANNEL NAME	41	C4	INPUT CONFIGURATION menu
COMPOSITE		COLOR TEMP ADJ	33	В	COLOR TEMP ADJ menu
CONTROLLER		COMPONENT	40	C15	INPUT CONFIGURATION menu
CONTROLLER STATUS		COMPOSITE	39	C13	INPUT CONFIGURATION menu
COPY FROM 33		CONTROLLER	54	H	CONTROLLER menu
B3 COLOR TEMP ADJ menu 42 C5 INPUT CONFIGURATION menu 51 F2 FILE MANAGEMENT menu D DATA MAINTENANCE 51 F4 FILE MANAGEMENT menu DELETE 51 F3 FILE MANAGEMENT menu DELETE MEMORY STICK 51 F31 FILE MANAGEMENT menu DIGITAL UNIFORMITY ADJ 48 E3 INSTALLATION SETTINGS menu DK-TECHNOLOGIES 33 B COLOR TEMP ADJ menu DUAL LINK HD-SDI 39 C12 INPUT CONFIGURATION menu F FILE MANAGEMENT 50 F FILE MANAGEMENT menu FORMAT 39 C1 INPUT CONFIGURATION menu I INPUT CONFIGURATION 37 C INPUT CONFIGURATION menu INSTALLATION SETTINGS 46 E INSTALLATION SETTINGS menu K KEY PROTECT 55 I KEY PROTECT menu KONICA MINOLTA 33 B COLOR TEMP ADJ menu		CONTROLLER STATUS	53	G3	STATUS menu
42 C5 INPUT CONFIGURATION menu		COPY FROM	33	A3	PICTURE ADJ menu
D DATA MAINTENANCE 51 F4 FILE MANAGEMENT menu DELETE 51 F3 FILE MANAGEMENT menu DELETE MEMORY STICK 51 F31 FILE MANAGEMENT menu DIGITAL UNIFORMITY ADJ 48 E3 INSTALLATION SETTINGS menu DK-TECHNOLOGIES 33 B COLOR TEMP ADJ menu DUAL LINK HD-SDI 39 C12 INPUT CONFIGURATION menu F FILE MANAGEMENT 50 F FILE MANAGEMENT menu FORMAT 39 C1 INPUT CONFIGURATION menu INPUT CONFIGURATION 37 C INPUT CONFIGURATION menu INSTALLATION SETTINGS 46 E INSTALLATION SETTINGS menu K KEY PROTECT 55 II KEY PROTECT menu KONICA MINOLTA 33 B COLOR TEMP ADJ menu			36	B3	COLOR TEMP ADJ menu
D DATA MAINTENANCE DELETE 51 F3 FILE MANAGEMENT menu DELETE MEMORY STICK DIGITAL UNIFORMITY ADJ MR. TECHNOLOGIES DUAL LINK HD-SDI FILE MANAGEMENT DUAL LINK HD-SDI FILE MANAGEMENT MENU TOWN FORMAT INPUT CONFIGURATION menu INSTALLATION SETTINGS MR. KEY PROTECT KONICA MINOLTA SI FILE MANAGEMENT menu INSTALLATION SETTINGS MR. KEY PROTECT menu KONICA MINOLTA SI COLOR TEMP ADJ menu INSTALLATION MENU KEY PROTECT menu KONICA MINOLTA SI COLOR TEMP ADJ menu			42	C5	INPUT CONFIGURATION menu
DELETE DELETE MEMORY STICK 51 F31 FILE MANAGEMENT menu DIGITAL UNIFORMITY ADJ DK-TECHNOLOGIES DUAL LINK HD-SDI FILE MANAGEMENT FILE MANAGEMENT FILE MANAGEMENT FILE MANAGEMENT FORMAT INPUT CONFIGURATION TONFIGURATION FORMAT INPUT CONFIGURATION TONFIGURATION TONFIGURA			51	F2	FILE MANAGEMENT menu
DELETE MEMORY STICK DIGITAL UNIFORMITY ADJ 48 E3 INSTALLATION SETTINGS menu DK-TECHNOLOGIES 33 B COLOR TEMP ADJ menu DUAL LINK HD-SDI FILE MANAGEMENT 50 F FILE MANAGEMENT menu FORMAT 1 INPUT CONFIGURATION menu INPUT CONFIGURATION menu INPUT CONFIGURATION menu INSTALLATION SETTINGS 46 E INSTALLATION SETTINGS menu K KEY PROTECT 55 I KEY PROTECT menu KONICA MINOLTA 33 B COLOR TEMP ADJ menu	D	DATA MAINTENANCE	51	F4	FILE MANAGEMENT menu
DIGITAL UNIFORMITY ADJ 48 E3 INSTALLATION SETTINGS menu DK-TECHNOLOGIES 33 B COLOR TEMP ADJ menu DUAL LINK HD-SDI 39 C12 INPUT CONFIGURATION menu FILE MANAGEMENT 50 F FILE MANAGEMENT menu FORMAT 39 C1 INPUT CONFIGURATION menu INPUT CONFIGURATION 37 C INPUT CONFIGURATION menu INSTALLATION SETTINGS 46 E INSTALLATION SETTINGS menu K KEY PROTECT 55 II KEY PROTECT menu KONICA MINOLTA 33 B COLOR TEMP ADJ menu		DELETE	51	F3	FILE MANAGEMENT menu
DK-TECHNOLOGIES 33 B COLOR TEMP ADJ menu DUAL LINK HD-SDI 39 C12 INPUT CONFIGURATION menu FILE MANAGEMENT FORMAT 39 C1 INPUT CONFIGURATION menu INPUT CONFIGURATION 37 C INPUT CONFIGURATION menu INSTALLATION SETTINGS 46 E INSTALLATION SETTINGS menu K KEY PROTECT KONICA MINOLTA 33 B COLOR TEMP ADJ menu		DELETE MEMORY STICK	51	F31	FILE MANAGEMENT menu
DUAL LINK HD-SDI 39 C12 INPUT CONFIGURATION menu F FILE MANAGEMENT 50 F FILE MANAGEMENT menu FORMAT 39 C1 INPUT CONFIGURATION menu INPUT CONFIGURATION 37 C INPUT CONFIGURATION menu INSTALLATION SETTINGS 46 E INSTALLATION SETTINGS menu K KEY PROTECT 55 II KEY PROTECT menu KONICA MINOLTA 33 B COLOR TEMP ADJ menu		DIGITAL UNIFORMITY ADJ	48	E3	INSTALLATION SETTINGS menu
F FILE MANAGEMENT 50 F FILE MANAGEMENT menu FORMAT 39 C1 INPUT CONFIGURATION menu I INPUT CONFIGURATION 37 C INPUT CONFIGURATION menu INSTALLATION SETTINGS 46 E INSTALLATION SETTINGS menu K KEY PROTECT 55 II KEY PROTECT menu KONICA MINOLTA 33 B COLOR TEMP ADJ menu		DK-TECHNOLOGIES	33	В	COLOR TEMP ADJ menu
FORMAT 39 C1 INPUT CONFIGURATION menu I INPUT CONFIGURATION 37 C INPUT CONFIGURATION menu INSTALLATION SETTINGS 46 E INSTALLATION SETTINGS menu K KEY PROTECT 55 II KEY PROTECT menu KONICA MINOLTA 33 B COLOR TEMP ADJ menu		DUAL LINK HD-SDI	39	C12	INPUT CONFIGURATION menu
I INPUT CONFIGURATION 37 © INPUT CONFIGURATION menu INSTALLATION SETTINGS 46 E INSTALLATION SETTINGS menu K KEY PROTECT 55 II KEY PROTECT menu KONICA MINOLTA 33 B COLOR TEMP ADJ menu	F	FILE MANAGEMENT	50	F	FILE MANAGEMENT menu
INSTALLATION SETTINGS 46 E INSTALLATION SETTINGS menu K KEY PROTECT 55 II KEY PROTECT menu KONICA MINOLTA 33 B COLOR TEMP ADJ menu		FORMAT	39	C1	INPUT CONFIGURATION menu
K KEY PROTECT 55 II KEY PROTECT menu KONICA MINOLTA 33 B COLOR TEMP ADJ menu	I	INPUT CONFIGURATION	37	C	INPUT CONFIGURATION menu
KONICA MINOLTA 33 B COLOR TEMP ADJ menu		INSTALLATION SETTINGS	46	E	INSTALLATION SETTINGS menu
	K	KEY PROTECT	55		KEY PROTECT menu
L LANDING ADJUST 47 E1 INSTALLATION SETTINGS menu		KONICA MINOLTA	33	В	COLOR TEMP ADJ menu
	L	LANDING ADJUST	47	E1	INSTALLATION SETTINGS menu


	Menu Item	Page	Menu number	Main menu
М	MAINTENANCE	45	D7	SYSTEM CONFIGURATION menu
	MANUAL	34	B1	COLOR TEMP ADJ menu
		48	E31	INSTALLATION SETTINGS menu
	MANUAL ADJUST	32	A2	PICTURE ADJ menu
		35	B11	COLOR TEMP ADJ menu
		49	E311	INSTALLATION SETTINGS menu
	MATRIX	40	C2	INPUT CONFIGURATION menu
	MEMORY STICK	33	A33	PICTURE ADJ menu
		36	B33	COLOR TEMP ADJ menu
		42	C53	INPUT CONFIGURATION menu
		51	F111	FILE MANAGEMENT menu
		51	F22	FILE MANAGEMENT menu
		51	F311	FILE MANAGEMENT menu
	MODE	40	C3	INPUT CONFIGURATION menu
	MONITOR ID	36	B321	COLOR TEMP ADJ menu
	MONITOR ID DISPLAY	54	H1	CONTROLLER menu
N	NETWORK	43	D1	SYSTEM CONFIGURATION menu
	NETWORK SETTINGS	44	D11	SYSTEM CONFIGURATION menu
		54	H2	CONTROLLER menu
0	ON SCREEN SET	45	D5	SYSTEM CONFIGURATION menu
	OTHER CH	42	C51	INPUT CONFIGURATION menu
	OTHER MONITOR	33	A32	PICTURE ADJ menu
		36	B32	COLOR TEMP ADJ menu
		42	C52	INPUT CONFIGURATION menu
		51	F21	FILE MANAGEMENT menu
		51	F211	FILE MANAGEMENT menu
Р	PARALLEL REMOTE	44	D2	SYSTEM CONFIGURATION menu
	PASSWORD	45	D6	SYSTEM CONFIGURATION menu
	PICTURE ADJ	31	A	PICTURE ADJ menu
	POWER	44	D3	SYSTEM CONFIGURATION menu
	PRESET VALUE	33	A31	PICTURE ADJ menu
		36	B31	COLOR TEMP ADJ menu
R	RE-LOAD FACTORY DATA	52	F43	FILE MANAGEMENT menu
	RESTORE FACTORY DATA	36	B4	COLOR TEMP ADJ menu
		47	E11	INSTALLATION SETTINGS menu

52

F42

FILE MANAGEMENT menu

RE-STORE SYSTEM DATA

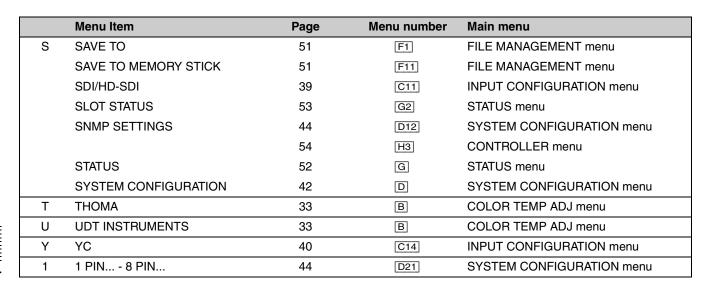



このマニュアルに記載されている事柄の著作権は当社にあり、説明内容は機器購入者の使用を目的としています。 従って、当社の許可なしに無断で複写したり、説明内容 (操作、保守等)と異なる目的で本マニュアルを使用する ことを禁止します。

The material contained in this manual consists of information that is the property of Sony Corporation and is intended solely for use by the purchasers of the equipment described in this manual.

Sony Corporation expressly prohibits the duplication of any portion of this manual or the use thereof for any purpose other than the operation or maintenance of the equipment described in this manual without the express written permission of Sony Corporation.

For Customer in China

根据中华人民共和国信息产业部第39号令《电子信息产品污染控制管理办法》及标准中要求的"有毒有害物质或元素名称及含量"等信息,本产品相关信息请参考以下链接: http://pro.sony.com.cn

Sony Corporation

http://www.sony.net/

BVM-A20F1U/A20F1M/ A20F1A (UC/JAE/AU) 2-666-112-**04**(1)

